

Hybrid Network Video Recorders

User Manual

V1.03

Contents

About this Manual	5
1 Local Operations.....	6
2 Initial Configuration	7
2.1 Preparation	7
2.2 Login	7
2.3 Wizard	12
3 Live View.....	14
3.1 Live View Status	14
3.2 Window Toolbar.....	14
3.3 Screen Toolbar	16
3.4 Shortcut Menu	18
4 Channel Configuration	20
4.1 Channel Management.....	20
4.1.1 Camera Type.....	20
4.1.2 IPC Configuration.....	21
4.1.3 Advanced Functions	27
4.1.4 Fisheye Configuration	28
4.2 Encoding Settings	31
4.3 Audio Configuration	33
4.4 Snapshot.....	34
4.5 OSD Configuration	35
4.6 Image Settings	37
4.7 PTZ Configuration	44
5 VCA 50	50
5.1 VCA Configuration	50
5.1.1 Alarm-triggered Actions	51
5.1.2 Arming Schedule	59
5.1.3 Face Detection.....	60
5.1.4 Cross Line Detection	63
5.1.5 Intrusion Detection.....	65
5.1.6 Enter Area Detection	67
5.1.7 Leave Area Detection	69
5.1.8 Defocus Detection	71
5.1.9 Scene Change Detection.....	72
5.1.10 Object Removed Detection	73
5.1.11 Object Left Behind Detection	74
5.1.12 Auto Tracking	75
5.1.13 People Flow Counting.....	76
5.2 Analyzer Configuration	78

5.3 VCA Search	79
5.3.1 Face Snapshot Search	79
5.3.2 Behavior Search	81
5.3.3 People Counting Report	83
5.4 Smart Preview	85
6 Network Configuration	88
6.1 Basic Configuration.....	88
6.1.1 Network Configuration	88
6.1.2 P2P	89
6.1.3 DDNS	90
6.1.4 Email.....	91
6.2 Platform Configuration	93
6.2.1 Alarm Service.....	93
6.3 Advanced Configuration	94
6.3.1 Port.....	94
6.3.2 Port Mapping.....	95
6.3.3 Multicast.....	97
6.3.4 FTP	98
7 System Configuration.....	100
7.1 Basic Configuration.....	100
7.2 Preview Configuration	102
7.2.1 Preview Configuration	102
7.2.2 Advanced Configuration	104
7.3 Time Configuration.....	105
7.3.1 Time Configuration	105
7.3.2 DST	106
7.3.3 Camera Time Synchronization	106
7.3.4 Holiday Configuration	107
7.4 Serial Port Configuration	109
7.5 User Configuration	110
7.6 Security Configuration	113
7.6.1 IP Address Filtering.....	113
7.6.2 ONVIF Authentication.....	113
7.6.3 ARP Protection	114
7.6.4 Watermark	114
8 Backup	115
8.1 Recording Backup.....	115
8.2 Image Backup	119
9 Storage.....	123
9.1 Recording Schedule	123
9.2 Disk Management	127
9.3 Disk Group.....	129

9.4	Space Allocation	130
9.5	Advanced Settings	131
10	Alarm Configuration	132
10.1	Motion Detection	133
10.2	Video Loss.....	137
10.3	Alarm Input and Output	138
10.3.1	Alarm Input	138
10.3.2	Alarm Output	139
10.4	Thermal Imaging.....	141
10.5	Temperature Alarm	143
10.6	Alert.....	144
10.7	Audio Detection.....	145
10.8	Buzzer.....	146
10.9	People Present Alarm	147
10.10	One-Key Disarming	148
10.11	Manual Alarm.....	150
11	System Maintenance	151
11.1	System Info	151
11.1.1	Basic Info	151
11.1.2	Camera Status	151
11.1.3	Recording Status.....	152
11.1.4	Online User.....	152
11.1.5	HDD Status	153
11.2	Network Information	154
11.2.1	Network Traffic.....	154
11.2.2	Network Status.....	154
11.2.3	Network Statistics.....	156
11.3	Log Search	156
11.4	System Backup.....	158
11.4.1	System Backup.....	158
11.4.2	Diagnosis Info	159
11.5	Restore System	161
11.6	Auto-Function.....	161
11.7	System Upgrade.....	162
11.7.1	NVR Upgrade	163
11.7.2	IPC Upgrade.....	165
11.8	HDD Check.....	166
11.8.1	Run S.M.A.R.T. Test	166
11.8.2	Bad Sector Detection	167
11.9	One-Click Collection	168
12	Playback	169
12.1	Instant Playback.....	169

12.2	Normal Playback.....	169
12.3	Smart Playback	172
12.4	External File Playback	173
12.5	Tag Playback	174
12.6	Playback by Search	176
12.7	File Management.....	177
13	Shutdown	178
14	Web-Based Operations.....	179
14.1	Preparation.....	179
14.2	Login	180
14.3	Live View	181
14.4	Playback	182
14.5	Configuration.....	183
14.6	Smart.....	183
15	Appendix FAQ	184

About this Manual

Copyright Statement

Thank you for purchasing our product. Contact your local dealer if you have any questions or feedback. No part of this manual may be copied, reproduced, translated, or distributed in any form or by any means without prior consent in writing from our company.

Disclaimer

Due to such reasons as product version upgrade or regulatory requirement of relevant regions, this manual will be periodically updated.

This manual is only for informational purposes, and all statements, information, and recommendations in this manual are presented without warranty.

The illustrations in this manual are for reference only and may vary depending on the version or model. The screenshots in this manual may have been customized to meet specific requirements and user preferences. As a result, some of the examples and functions featured may differ from those displayed on your monitor.

Safety Symbols

The symbols in the following table may be found in this manual. Carefully follow the instructions indicated by the symbols to avoid hazardous situations and use the product properly.

Symbol	Description
 NOTE!	Indicates useful or supplemental information about the use of product.
 CAUTION!	Indicates a situation which, if not avoided, could result in damage, data loss or malfunction to product.
 WARNING!	Indicates a hazardous situation which, if not avoided, could result in bodily injury or death.

1 Local Operations

This chapter introduces operation methods and matters needing attention on the local interface.

You can refer to [Initial Configuration](#) and complete a quick configuration.



Note: Unless otherwise specified, all operations described in this manual are performed with a mouse by the right hand.

Before You Begin

- Please be aware that functions may vary with DVR model.
- The figures in this manual are for illustration purposes only and may vary with DVR model.
- The parameters that are grayed out on the local interface cannot be edited. The parameters and values displayed may vary with DVR model and version.

2 Initial Configuration

This chapter describes the initial configuration of the DVR.

2.1 Preparation

- Make sure that at least one monitor is correctly connected to the VGA or HDMI interface on the rear panel of the DVR, otherwise, you cannot view the local interface.




Note: If no images are displayed after the DVR is powered on, it may be because the monitor does not support the current output resolution of the DVR. Please press and hold the scroll wheel of the mouse to restore to the lowest resolution.

- Make sure that the hard disk(s) are correctly installed. For detailed installation steps, please refer to the quick guide shipped with the DVR.


2.2 Login

Device Login

1. Select the desired language after startup.

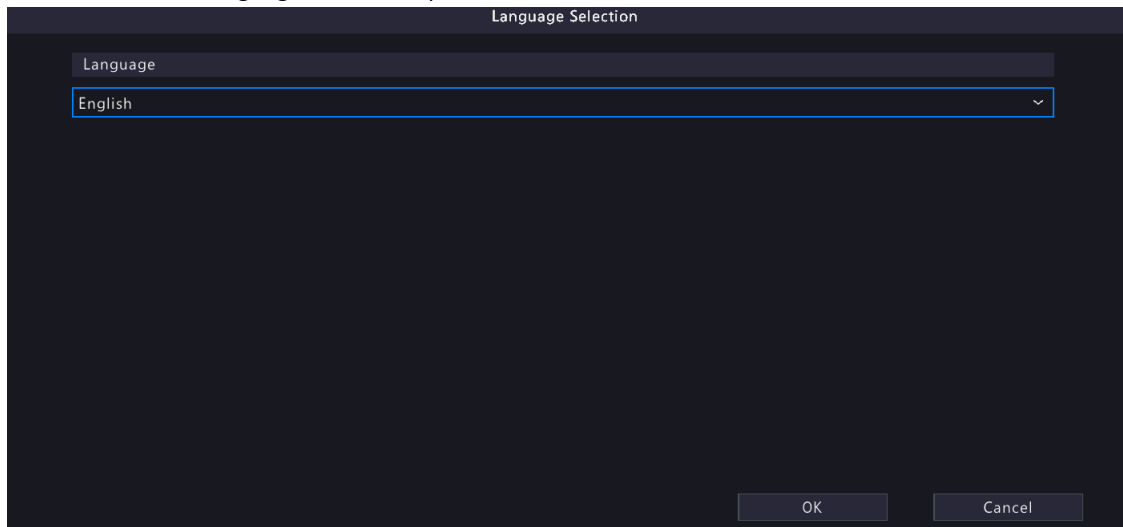

2. Select the default username and enter the password (admin/123456), and then click **Login**.

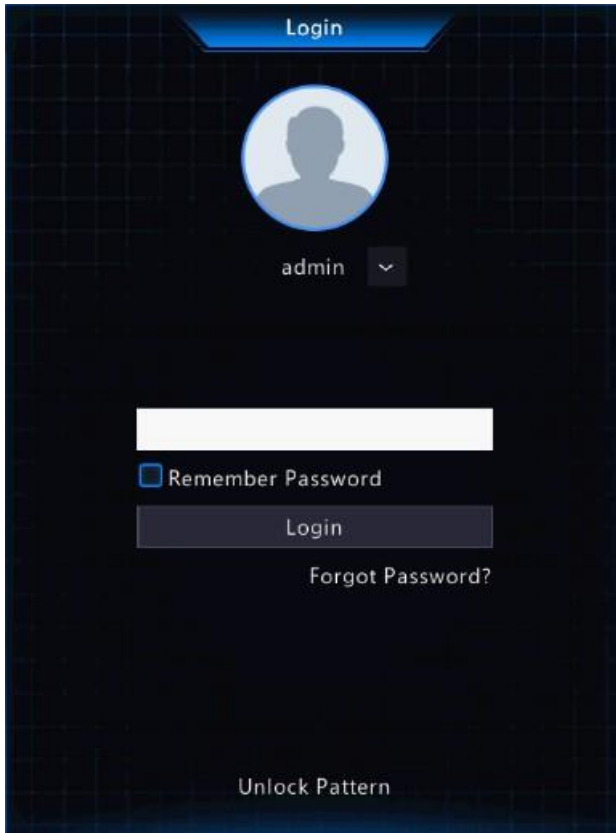
The image shows a login screen with a dark blue background and a grid pattern. At the top, there is a blue header with the word "Login" in white. Below the header is a circular profile icon placeholder. Underneath the icon, the username "admin" is displayed next to a small downward arrow. A white rectangular input field for the password is positioned below the username. Under the password field, there is a checkbox labeled "Remember Password". Below the checkbox is a blue "Login" button. Under the button is a link that says "Forgot Password?". At the bottom of the screen, there is a link that says "Unlock Pattern".

 **Note:** If you enable **Remember Password**, the username and password will be automatically filled in the next time.

3. Click **Yes** in the pop-up window to change the password into a strong one.

The image shows a pop-up window titled "Login" in white text on a dark blue background. The main text in the window says "Please change the default password. Change now?". At the bottom of the window, there are two buttons: a blue "Yes" button and a grey "No" button.

4. In the **Change Password** page, enter the old password, new password, and confirm the new password. You may check **Email** to enter your email address, and then click **OK**.

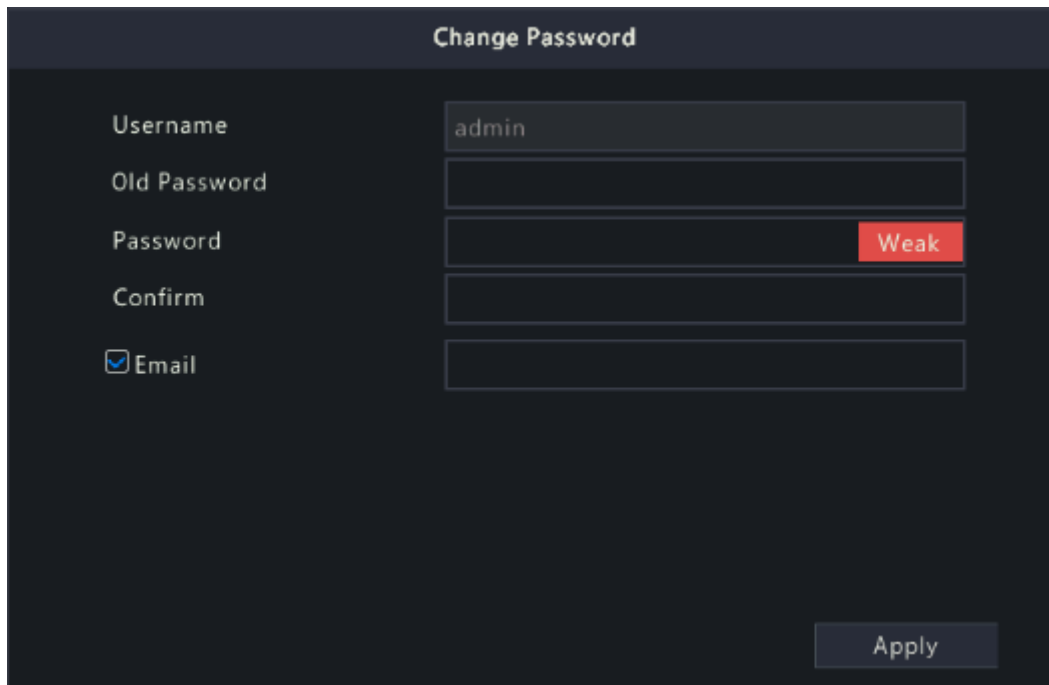


The 'Change Password' form is displayed on a dark background. It includes the following fields and controls:

- Username:** A text input field containing the value 'admin'.
- Old Password:** A text input field.
- Password:** A text input field with a red 'Weak' status indicator to its right.
- Confirm:** A text input field.
- Email:** A checkbox labeled 'Email' is checked, followed by a text input field.
- Apply:** A button located at the bottom right of the form.

 Note:

- Use the default username and password (admin/123456) to log in for the first time. After login, you must change the password, and use the new password to log in the next time.
- For security, you are strongly recommended to set a strong password with at least 9 characters including all three elements: letter, digit, and special character.
- It is recommended to enter your email address in case you need to reset the password. You may also enter it when you need to retrieve the password. See [Reset Password](#) for details.

5. (Optional) Set an unlock pattern or click **Skip** to proceed.

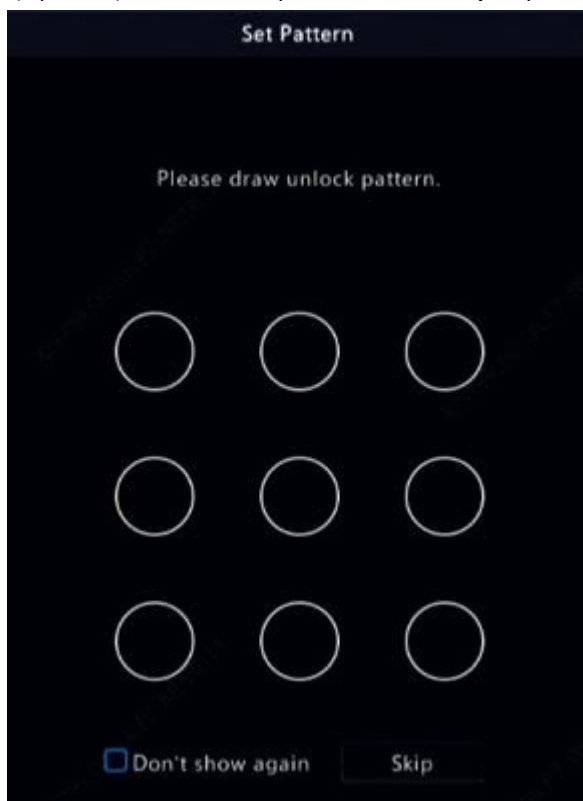

The 'Set Pattern' screen is shown with a dark background. It contains the following elements:


- Set Pattern:** The title at the top.
- Please draw unlock pattern:** The instruction text.
- Pattern Grid:** A 3x3 grid of white circles for drawing the unlock pattern.
- Don't show again:** A checkbox at the bottom left.
- Skip:** A button at the bottom right.

**Note:**


- You can set the unlock pattern later at any time or disable it under **Menu > System > User**.
- If an unlock pattern is set, it will replace the password at login.

Reset Password

1. If you forgot the admin password or want to reset the password, click **Forgot Password** on the login page.

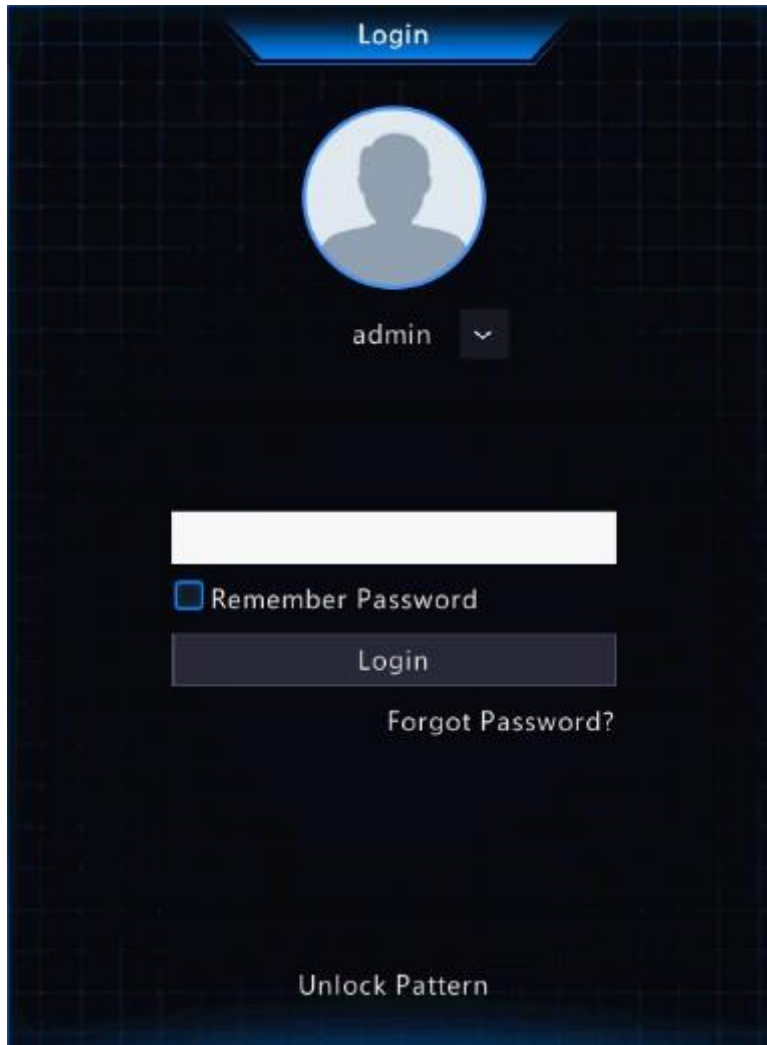A screenshot of a login interface with a dark background and a grid pattern. At the top, there is a blue header with the word "Login". Below it is a circular profile icon showing a silhouette. Under the icon, the text "admin" is displayed next to a small downward arrow. A white rectangular input field for a password is positioned below the user information. Underneath the input field is a checkbox labeled "Remember Password". Below the checkbox is a dark button with the text "Login". Under the "Login" button is a link that says "Forgot Password?". At the bottom of the screen, there is a link that says "Unlock Pattern".


2. (Skip this step if you have already entered your email address) Enter your email address to receive the security code, that is, the temporary password.

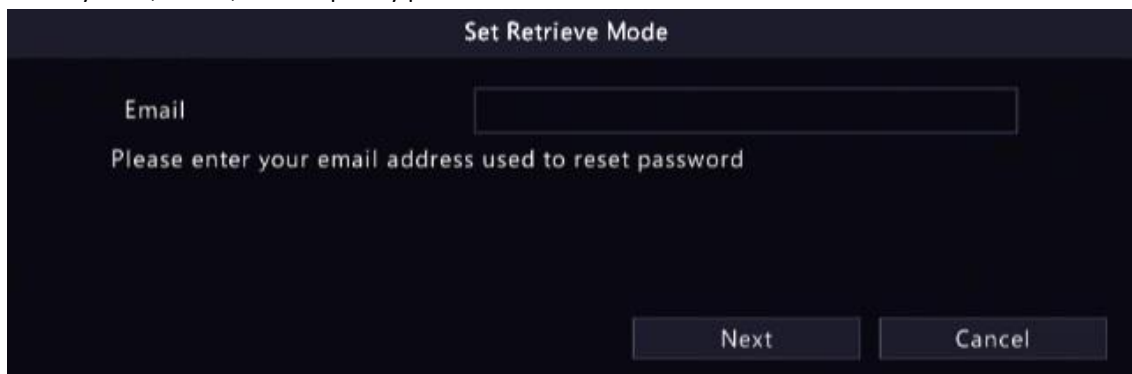A screenshot of a screen titled "Set Retrieve Mode". It features a dark background. At the top, the title "Set Retrieve Mode" is centered. Below the title, the word "Email" is displayed next to a white rectangular input field. Underneath the input field, the text "Please enter your email address used to reset password" is shown. At the bottom right of the screen, there are two dark buttons: "Next" and "Cancel".

3. Follow the instructions on the screen to obtain the security code.

Retrieve Password

Serial No.	219
Email	117
Security Code	

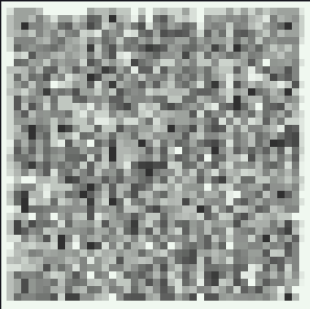

Please scan the QR code to obtain the security code:
Scan with your app

For admin only

4. Enter the security code received from the email address and click **OK**.
5. Enter the password, confirm the password, and then click **OK** to reset the password.

Change Password

Username	admin
Password	Weak
Confirm	

1-32 characters. A strong password is recommended: at least 9 characters including letters, digits and special characters

Note: If NVR is added to managing platform, you also need to edit the password on the platform.

6. Use the new password to log in again.

2.3 Wizard

The wizard page appears after you login. Follow the wizard to complete the most basic setup or click **Exit** to skip this step.

 **Note:** You can also go to **Menu > System > Basic** to set the basic parameters.

1. Enable or disable the wizard as needed and then click **Next** or click **2**.



2. Set the time parameters, including time zone, date format, time format, and system time, and then click **Next**.



3. Configure TCP/IP. Select the working mode and NIC. Check **Enable DHCP** to automatically obtain the IP address, subnet mask and IP default gateway. You can also enter the information manually.

Wizard

1 Wizard 2 Time 3 TCP/IP

Select NIC	NIC1
☒ Enable DHCP	
IP Address	192 . 168 . 1 . 30
Subnet Mask	255 . 255 . 255 . 0
IP Default Gateway	192 . 168 . 1 . 1

Previous OK Exit

4. Click **OK**.

3 Live View

This chapter introduces the live view page, including window toolbar, screen toolbar, shortcut menu, digital zoom, sequence operation, etc.

 **Note:** The operations may vary with DVR model.

3.1 Live View Status

The following icons are used to indicate alarms, recording status, and audio status in a live view window.

Table 3-1: Live View Window Icons

Icon	Description	Icon	Description
	Tampering alarm		Recording
	Motion detection alarm		Two-way audio

3.2 Window Toolbar

Click a window to display the window toolbar for quick configuration.

Table 3-2: Window Toolbar

Button	Name	Description
	PTZ Control	- Available for PTZ cameras only. Click to display the PTZ control window. - You can also configure PTZ under Menu > Camera > PTZ. See PTZ Configuration for details.
	Fisheye Mode	Set mount mode and display mode for fisheye cameras. This button appears only for fisheye cameras.
	Local Recording	Record live video in the window to the hard disk. Click  to stop recording.  Note: Similar to manual recording, local recording is a scheduled recording and has priority over other video recording schedules. You can play the local recording in normal mode.
	Instant Playback	Click to play the video recorded during the past 5 minutes.
	Digital Zoom	Zoom in on an area of interest in the window. See Digital zoom for details.
	Image Settings	- Click to set the image mode and parameters to get optimal images in the window. - You can also edit image settings under Menu > Camera > Image > Image Settings. See Image Settings for details.
	Take Snapshot	Click to take a snapshot. The window borders will flash white. You may view and back up snapshots under Menu > Backup > Image .
	OSD	- Click to set OSD. - You can also set OSD under Menu > Camera > OSD. See OSD Configuration for details.

Button	Name	Description
	Two-way Audio	Start two-way audio with the camera. The sound volume is adjustable. Click  to stop. Note: Correct audio input and output (AUDIO IN/OUT) connections between DVR and IPC are required.
	Turn Audio On	Click to turn on audio. The sound volume is adjustable. Click  to turn off audio. Note: When you turn on audio in the current window, audio of the previous window is turned off.
	Camera Info	Hover over the button to view the bit rate of the current window; click the button to modify the camera information.


Digital zoom

Zoom in on an area of images in a window for details.

1. In the preview page, click the window, and then click  on the window toolbar.



2. Move your mouse to the area you want to zoom in on, then use your scroll wheel to zoom in. The enlarged image is as follows.

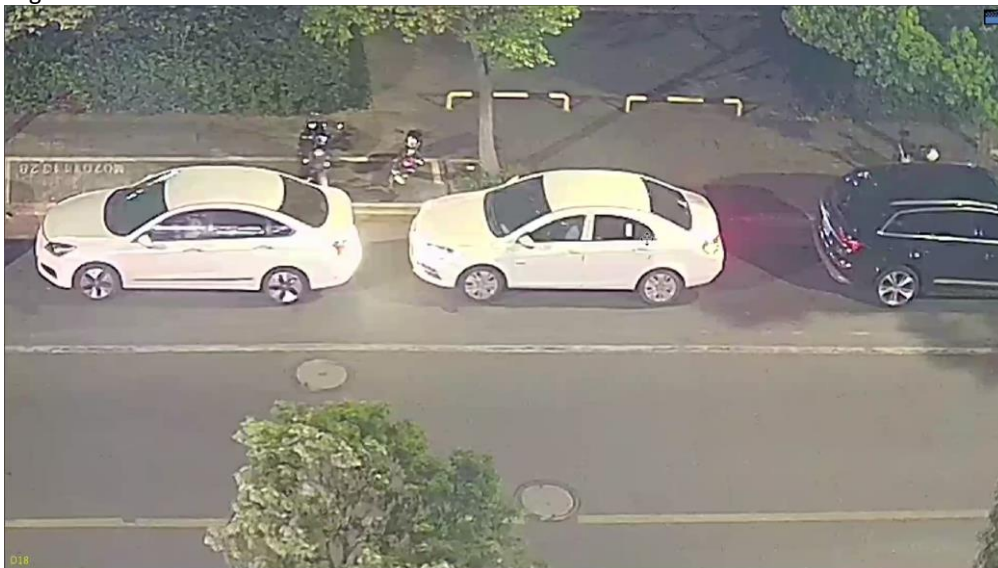

2. Right-click to exit zoom.

3.3 Screen Toolbar

Move your mouse to the bottom of the preview page to display the screen toolbar. Click  to lock the toolbar.

Table 3-3: Screen Toolbar

Button	Description
	Click to select menu, playback, logout, restart, shutdown.
	Select the screen layout, including single window and 4/6/8/9 windows.
	Previous or next screen.
	Start or stop sequence. See Sequence for details.
	Click to go to the Playback page.
	Switch to multi-sensor preview mode. Note: This function is only available for dual-channel cameras.
	Click to view camera information, including camera status and alarm status.
	Click to view DVR alarm and camera alarm.
	Hover over the button to view the NIC information; Click to edit network settings.
	Show device time. Hover over the button to view the date; Click to edit time settings.
	Lock/hide the screen toolbar.

Sequence

Use sequence when you want to view live videos from different cameras at the same time and ensure the image clarity. The function requires you to configure the screen layout, windows, linked cameras, and the sequence interval.

The following example describes how to configure sequence for five cameras based on a 4-window screen layout.


1. In the preview page, right-click and select **Multi-Window > 4 Windows**.



 **Note:** The number of windows that can be displayed may vary with DVR model.

2. Click  on the screen toolbar to start sequence.

The system starts to display images of four cameras in four windows on the first screen, and then display the fifth camera' image on the second screen after the set interval.

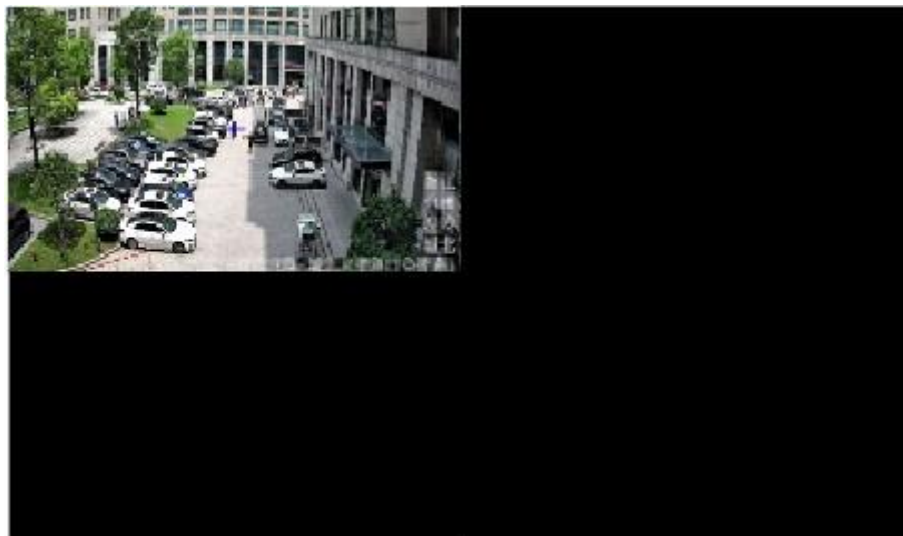


 **Note:** The default sequence interval is 8 seconds. You can set it under **Menu > System > Preview**. See [Preview Configuration](#) for details.

3. Click  to stop sequence.

3.4 Shortcut Menu

A shortcut menu as shown below appears when you right-click in a window.

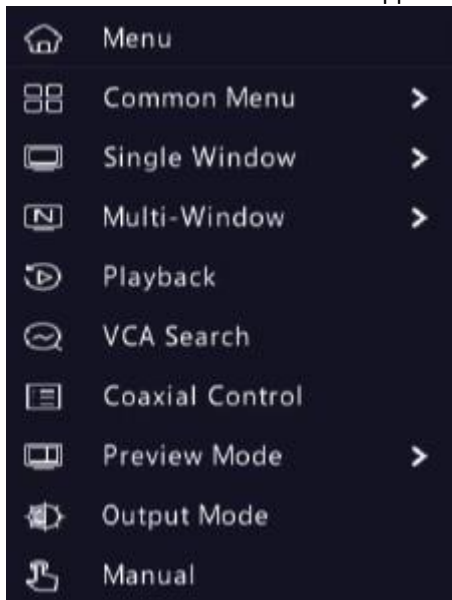

Shortcut Menu

Table 3-4: Shortcut Menu

Item	Description
Menu	Display the main menu.
Common Menu	Go to the Camera , Network , and Recording page.
Single Window	Switch to single window.
Multi-Window	Select the screen layout, including 4/6/8/9 windows.
Playback	Play the video of the current day for the camera linked to the current window. You can also choose to play videos from other days as needed.
Preview Mode	Switch between Normal Mode and Smart . The default is Normal mode.
VCA Search	Search the VCA snapshots and recordings in the Behavior Search page. See Behavior Search for details.
Coaxial Control	Go to the OSD Menu Control Page.
Output Mode	Choose a video output mode, including standard, soft, bright, vivid, and custom. Brightness, saturation, and other parameters are also configurable.
Manual	Manual settings include manual recording, manual snapshot, and manual alarm, buzzer, let through manually. See Manual Operations for details.


Manual Operations

Manual operations include manual recording, manual alarm, and buzzer.

Manual Recording

 **Note:** Similar to local recording  on the screen toolbar, manual recording is a scheduled recording and has higher priority over other recording schedules. You can play manual recordings in normal mode.

1. Right-click and select **Manual > Manual Recording**.

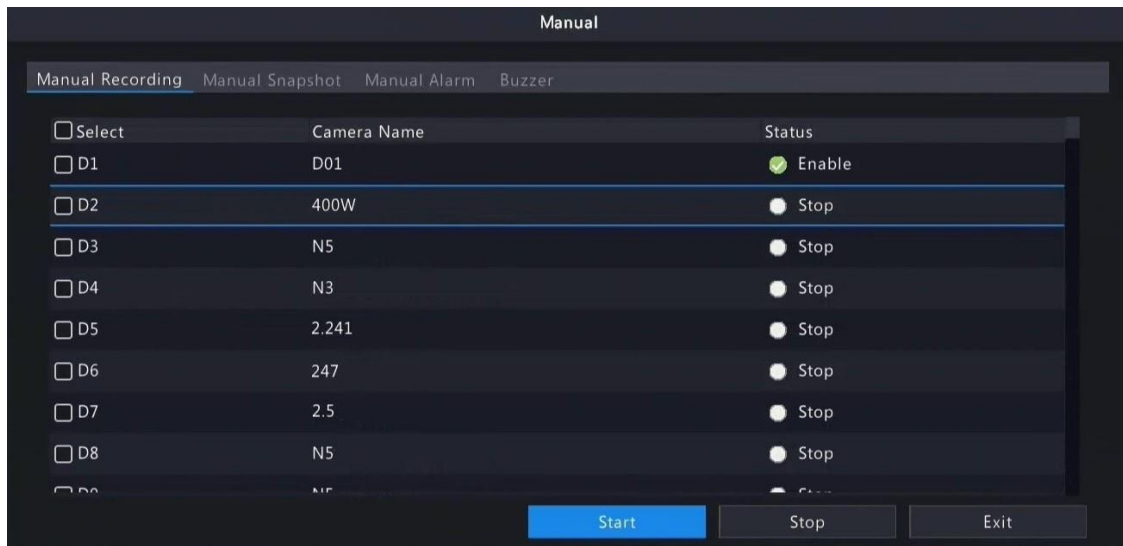


2. Start or stop manual recording.

- Start recording: Select the desired camera(s) and then click **Start**.
- Stop recording: Select the camera(s) being recorded and then click **Stop**.

Manual Snapshot

1. Right-click and select **Manual > Manual Snapshot**.

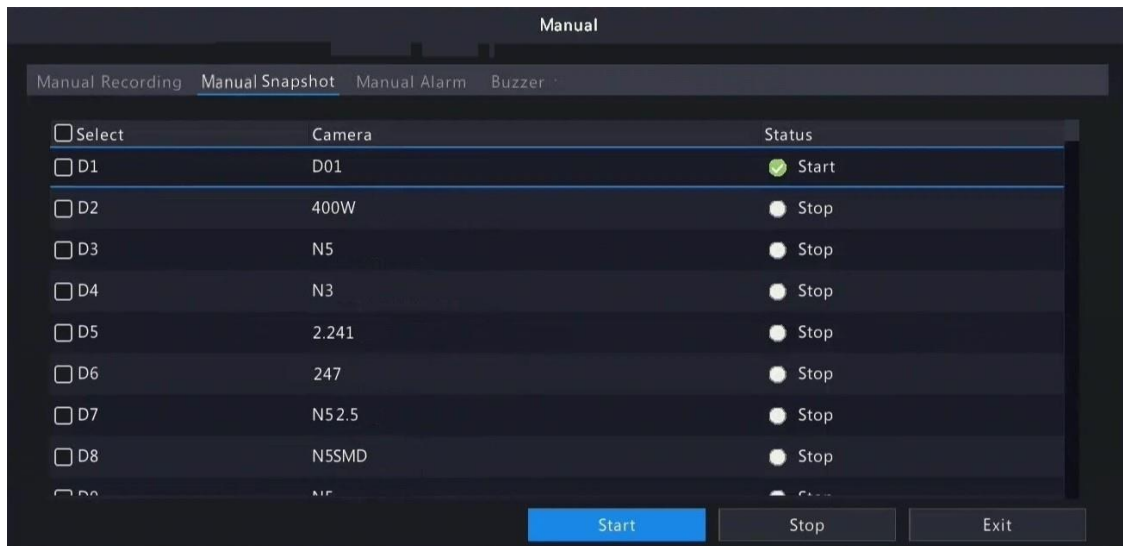

2. Start or stop manual snapshot.

- Start snapshot: Select the desired camera(s) and then click **Start**.
- Stop snapshot: Select the camera(s) that has enabled snapshot and click **Stop**.

Manual Alarm

Right-click and select **Manual > Manual Alarm**. You can trigger or clear an alarm output manually. See [Manual Alarm](#) for details.

Buzzer

Right-click and select **Manual > Buzzer**. You can stop the buzzer manually. See [Buzzer](#) for details.

4 Channel Configuration

Configure IPC, encoding, audio, OSD, image and PTZ parameters.

 **Note:** The IP devices mentioned in this manual mainly refers to IP cameras (or network cameras).

4.1 Channel Management

Add and manage IP cameras.

 **Note:**

- Before you start, make sure the IP cameras are connected to your DVR via network.
- An IP camera should be connected to one DVR only. An IP camera managed by multiple DVRs may cause unwanted issues.


4.1.1 Camera Type

You can change the channel type to analog or digital. This function is only available for hybrid NVRs.


Change Channel Type

Change channel type to analog or digital.

1. Go to **Menu > Camera > Camera > Camera Type**.

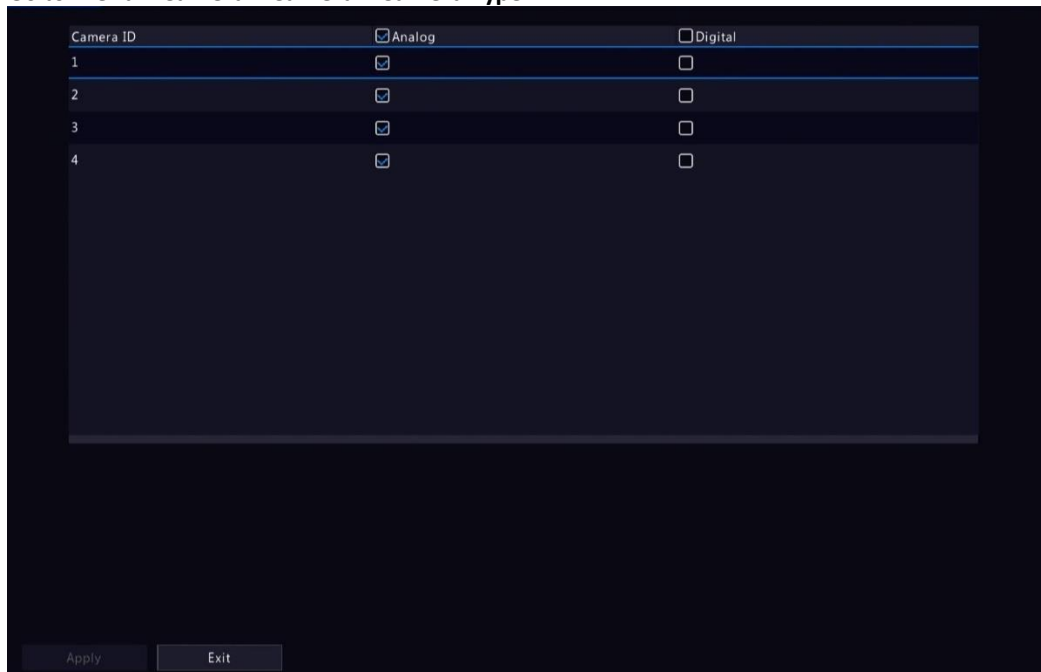

2. Select the channel you want to change and choose the desired type.
3. Click **Apply**, then a message indicating device restart appears.

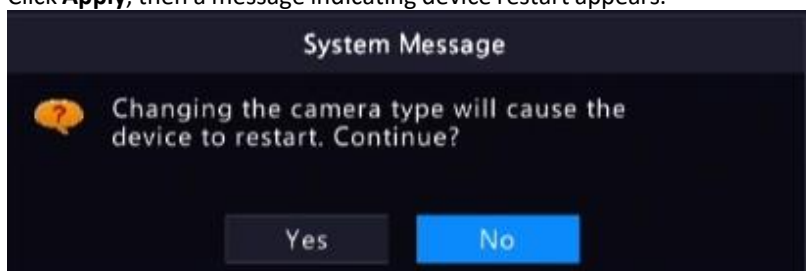

4. Click **Yes**. The channel type will be changed after the DVR restarts.

Add Analog Camera

Analog cameras can be added to DVRs only.

1. Connect the camera to the video output interface of the DVR via a coaxial cable and connect the camera to


power. The camera will be added to the DVR.

2. Check the camera status on the preview page.

4.1.2 IPC Configuration

Add and manage IP cameras.

Go to **Menu > Camera > Camera > Camera**.

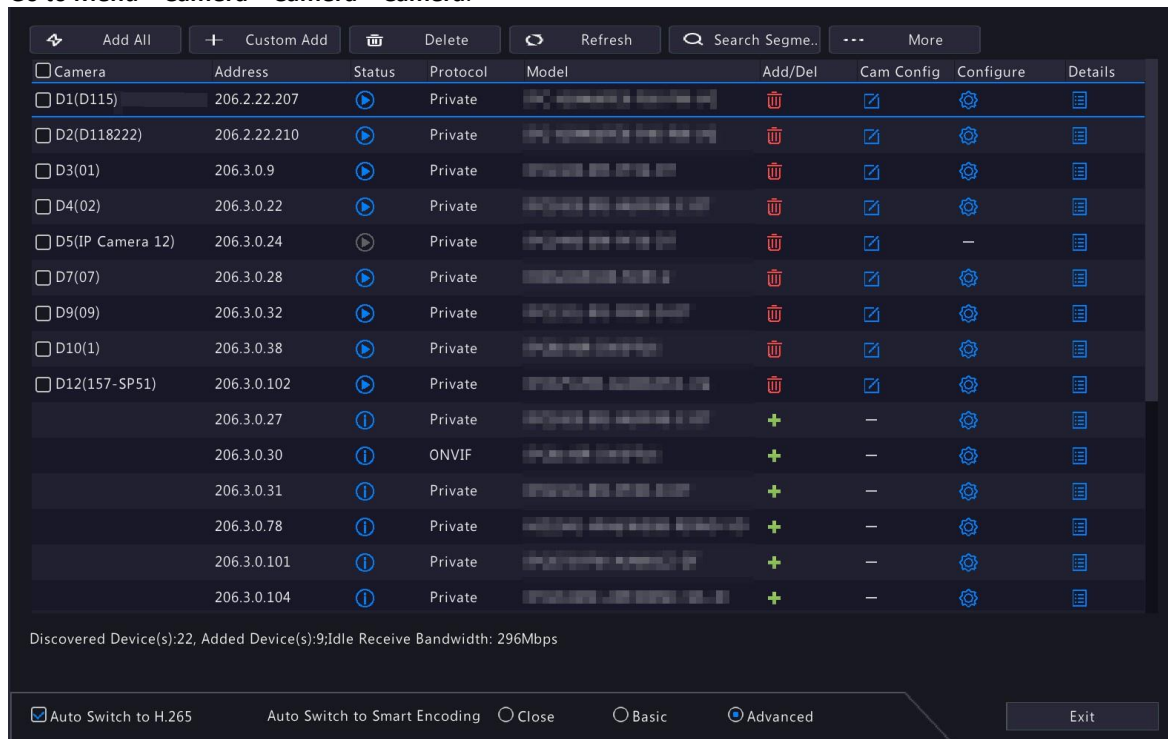


Add IPC

The system automatically searches for IP cameras and lists the discovered. Click **Refresh**, the system refreshes the list and IPC status. Choose a way to add IPCs.

- Option 1: Custom Add

1. Click **Custom Add**.

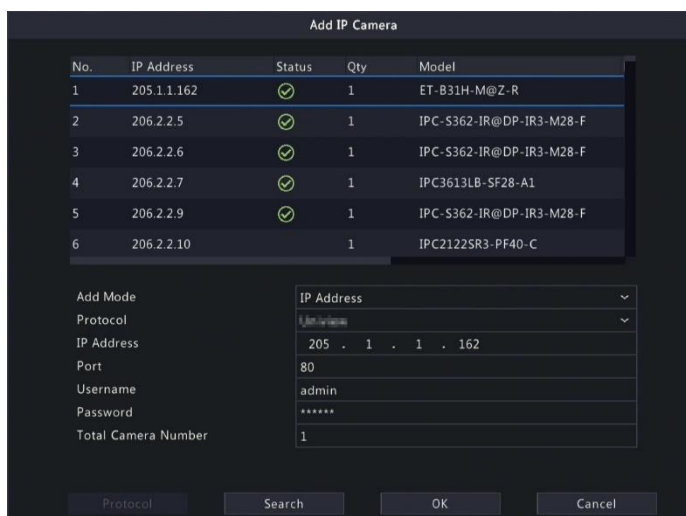

2. In the window displayed, enter the IPC's IP address and complete other settings, then click **OK**. You may check the camera's status.


- : Camera online.
- : Camera offline. Point to the icon to view the failure information.

- : The camera is added to another DVR.

3. Repeat the above steps to add other IPCs.

- Option 2: Search Segment

1. Click **Search Segment**. Enter the start and end IP addresses, click **Search**. The discovered IP devices are listed.

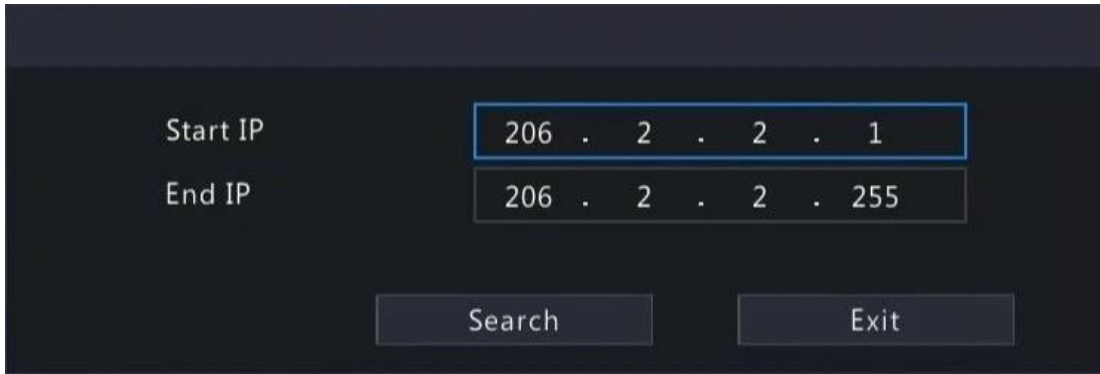

2. Select the desired camera, click  to add it to the DVR.

- Option 3: Add All

Click **Add All** to add all the discovered IPCs (if not exceeding the upper limit).

- Option 4: Click

Click  to add the camera directly.

- Option 5: Add from the Preview Window

 **Note:** This option is not applicable to DVRs with PoE ports. Some DVRs have PoE ports and non-PoE ports, and some have PoE ports only. All these DVRs do not support this option.

1. In the preview page, click  in a window to go to the **Add IP Camera** page.

2. Select the desired IP camera and then click **OK**.

- Option 6: Add From Another Network

Use this option when the DVR and the IP camera are connected to different router. Make sure the DVR can access the camera via the camera's public IP address and mapped port number.

 **Note:** First you need to enable port mapping under **Setup > Port > Port Mapping** on the IP camera's Web interface.

- Option 7: Use Custom Protocol

 **Note:**

- Use this option when the IP camera supports the standard RTSP.
- Only live and recorded video streams are available from the camera added in this way. Configuration operations are not supported.

1. Go to **Menu > Camera > Camera > Camera**.

- Click **Custom Add**. Select **Custom** from the **Protocol** drop-down list.

Add IP Camera

No.	IP Address	Status	Qty	Model
1	205.1.1.162	✓	1	ET-B31H-M@Z-R
2	206.2.2.5	✓	1	IPC-S362-IR@DP-IR3-M28-F
3	206.2.2.6	✓	1	IPC-S362-IR@DP-IR3-M28-F
4	206.2.2.7	✓	1	IPC3613LB-SF28-A1
5	206.2.2.9	✓	1	IPC-S362-IR@DP-IR3-M28-F
6	206.2.2.10		1	IPC2122SR3-PF40-C

Add Mode: IP Address
Protocol: Custom Custom1
IP Address: 205 . 1 . 1 . 162
Port: 0
Username: admin
Password: *****
Total Camera Number: 1

Protocol Search OK Cancel

- Click **Protocol**.

Protocol

Custom Custom1
Protocol Name: Custom1
Port: 7891
Transfer Protocol: UDP
Enable Main Stream: ☒
Resource Path: rtsp://<ip>:<port>/hjt
Enable Sub Stream: ☐
Resource Path: rtsp://<ip>:<port>/

Example : rtsp://<IP address>:<Port number>/<Resource path>;
One channel:
rtsp://192.168.0.1:554/unicast/c1/s0/live
Multi-channel:
rtsp://192.168.0.1:554/unicast/c[%C]/s0/live Add selected camera ID
rtsp://192.168.0.1:554/unicast/c[%C+1]/s0/live Add selected camera ID+1
rtsp://192.168.0.1:554/unicast/c[%C+1]/s0/live Add selected camera ID-1
[%C±N] : %C means the remote camera ID selected, N means offset

Apply OK Cancel

- Set the protocol name, enter the RTSP port number, transmission protocol, resource paths, etc., and then click **OK**.

 **Note:** Contact the camera manufacturer for resource paths of main stream and sub stream.

- Enter the IP address, username, and password, and then click **OK**. Check status in the camera list.

Edit IP Camera

Select the target camera and click . Edit the settings as needed, and then click **OK**.

Modify IP Camera

No.	IP Address	Status	Qty	Model
1	206.3.0.9		1	IPC244S-IR5-PF36-DT
2	206.3.0.22		1	IPC242S-IR3-HUPF40-C-DT
3	206.3.0.24		1	IPC244S-IR9-PF36-DT
4	206.3.0.27		1	IPC242S-IR3-HUPF40-C-DT
5	206.3.0.28		1	HIC6221EX20-5CIR-U
6	206.3.0.30		1	IPC814SR-DVSPF16

Add Mode

Protocol

IP Address

Port

Username

Password

Total Camera Number

IP Address

Private

206 . 2 . 22 . 207

80

admin

1

Protocol

Search

OK

Cancel



Note:

- To change the IP camera connected to the channel, you can edit the IP channel related parameters (except IP address), or directly click another camera in the list above.
- The configuration items may vary with IPC model.

Delete IP Camera

You can delete IP camera(s) one by one or in batches.



Note: Channels corresponding to PoE ports or switching ports cannot be deleted.

- Select a camera to be deleted, click , and click **OK** in the pop-up window.
- Select cameras to be deleted, click **Delete**, and click **OK** in the pop-up window.

Change Window Position

Use this function to change window position of channels in the preview page, without changing the channel ID, IP address, and display order in the channel list. Choose a way to change window position.

- In the multi-window preview page, drag a window to another window to swap their positions.
- In the **Preview Configuration** page under **Menu > System > Preview**, change window positions in the preview page. See [Screen Configuration](#) for details.


Batch Change Password

When multiple IPCs are not added successfully due to incorrect password, and if the login passwords of these cameras are the same, use this function to change the passwords in batches.

Note:

- This function only changes the password used to add cameras. It does not change the cameras' login password.
- This function is only applicable for IPCs with the same login password. If one of the cameras still fails to be added after you change the password, it means the camera's login password is different, and you need to change the password separately.

1. Select the cameras with the same password. Click **More**, and select **Batch Edit Password**.

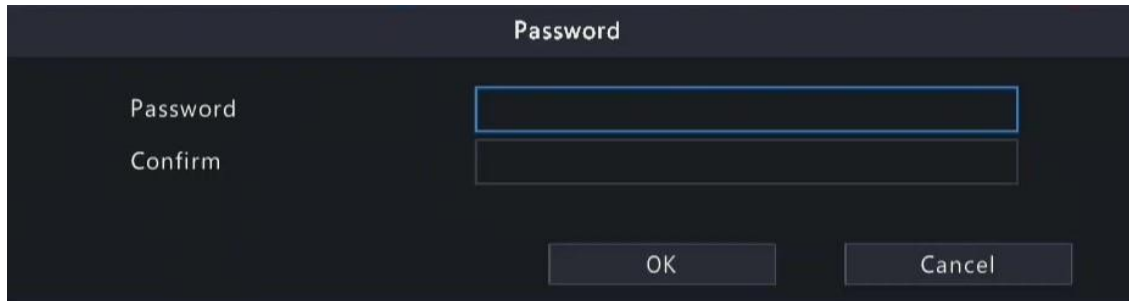


A dialog box titled "Password" with a dark background. It contains two input fields: "Password" and "Confirm". Below the input fields are two buttons: "OK" and "Cancel".

2. Enter the new password and confirm the password.
3. Click **OK**.

Network Configuration

Select the camera, click  under **Configure**. Edit the IP address, IPv4 subnet mask, IPv4 default gateway for the camera. Click **Apply**.

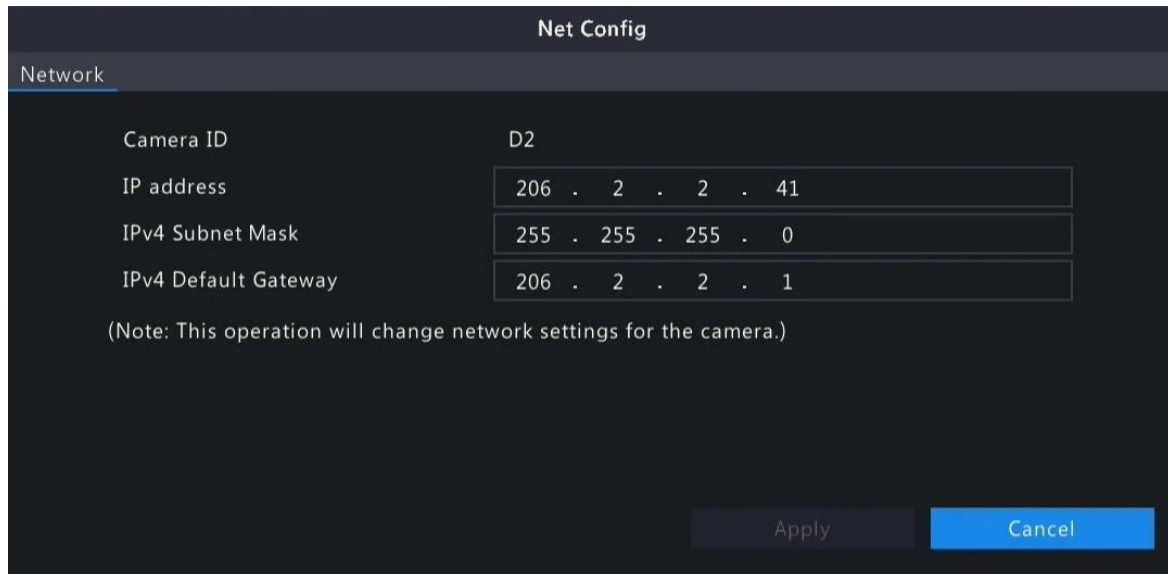

A dialog box titled "Net Config" with a dark background. It has a "Network" tab selected. Below the tab, there is a table with the following data:

Camera ID	D2
IP address	206 . 2 . 2 . 41
IPv4 Subnet Mask	255 . 255 . 255 . 0
IPv4 Default Gateway	206 . 2 . 2 . 1


(Note: This operation will change network settings for the camera.)

At the bottom right, there are two buttons: "Apply" and "Cancel".

 **Note:**  indicates the camera does not support changing network settings.

More Info

Select the channel, click  under **Details** to view the detailed information, including remote camera ID, manufacturer, and port number.

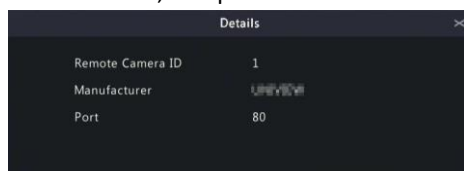

A dialog box titled "Details" with a dark background. It contains the following information:

Remote Camera ID	1
Manufacturer	UNIVIEW
Port	80

Other Operations


Item	Description
Auto Switch to H.265	When enabled, the DVR automatically chooses H.265 for a newly added camera.  Note: • Every time a camera is added to the DVR, it is considered a newly added camera. This function is not effective for cameras that are already added or added cameras that go back online after being offline. • This function is enabled by default on some DVR models.
Auto Switch to Smart Encoding	Select Basic Mode or Advanced Mode, then the DVR automatically chooses basic Smart Encoding or advanced Smart Encoding mode for a newly added camera.  Note: • Every time a camera is added to the DVR, it is considered a newly added camera. This function is not effective for cameras that are already added or added cameras that go back online after being offline. • This function is enabled by default on some DVR models.
Refresh	Click Refresh to check the camera status.
Live View	Click  to play live video of the camera.

4.1.3 Advanced Functions

Change the password of online IP cameras or restore factory default settings for cameras.

 **Note:** Changing camera password is available for cameras connected via the private protocol.


Go to **Menu > Camera > Camera > Advanced**.

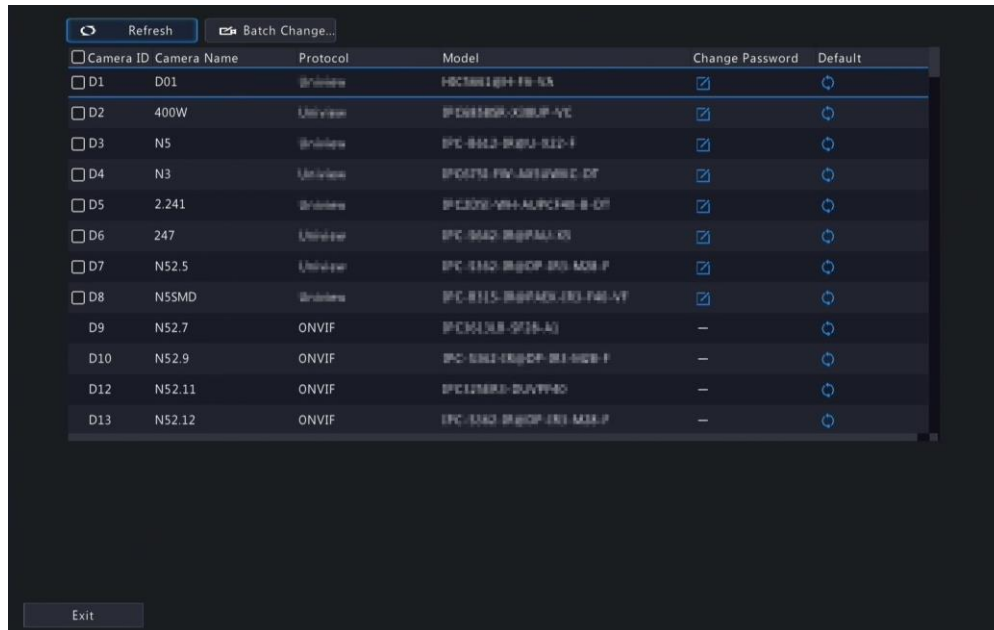

Change Camera Password

You can change the password of camera(s) one by one or in batches.

1. Select a camera and click  or select the target cameras and click **Batch Change Password**.

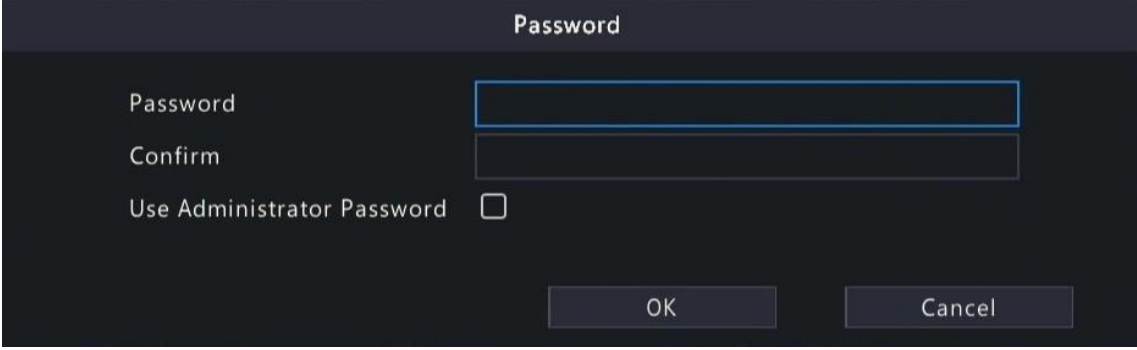

2. Enter the new password and confirm the password.

 **Note:** Select **Use Admin Password**, the camera's password is changed to the admin password of the DVR and cannot be edited.

3. Click **OK**. Check if the password is successfully changed.

Restore Default Settings

Select the camera, click . A message indicating camera restart appears, click **OK** and then the camera's default settings will be restored.

4.1.4 Fisheye Configuration


Set the mounting mode and display mode for fisheye cameras. Fisheye configuration is supported only by certain fisheye cameras.

 **Note:** Before using this function, make sure that a fisheye camera has been mounted and that the camera has been added to your DVR.

Configuration

Configure the following parameters after the fisheye camera is installed.

1. Go to **Menu > Camera > Camera > Fisheye**.

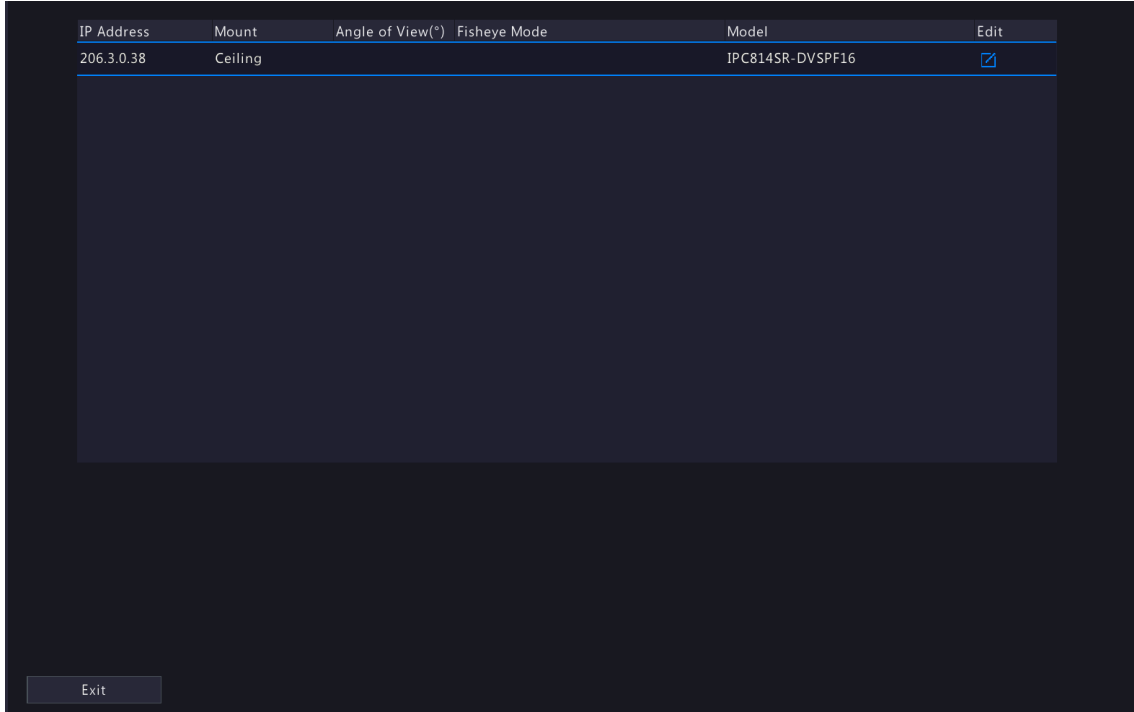

The screenshot shows a configuration menu with a table containing the following data:

IP Address	Mount	Angle of View(°)	Fisheye Mode	Model	Edit
206.3.0.38	Ceiling			IPC814SR-DVSPF16	

Below the table is a large dark rectangular area. At the bottom left of the menu is an "Exit" button.

2. Select the fisheye camera and click .



The screenshot shows the "Fisheye" configuration form. It contains the following fields:

- IP Address:** A text field containing "206 . 3 . 0 . 38".
- Mount:** A dropdown menu with "Ceiling" selected.

At the bottom right of the form are "Apply" and "Exit" buttons.

3. Set the parameters as needed.

Item	Description
Mount	Select the mounting mode, including ceiling mount, wall mount, and desktop mount. If you change how the fisheye camera is installed, change its mounting mode to display proper images.
Angle of View (°)	Set the viewing angle of the fisheye camera.

Fisheye Mode	The display mode of the current camera in the live view window. Set it as needed.
--------------	---

- Click **Apply**.

Dewarping

Fisheye cameras provide large wide-angle views, but the image captured is distorted. You may adjust the output image by correcting the shooting angle of the fisheye.

 **Note:** Dewarping is available in live view and playback (in normal and corridor playback modes). The operations are similar. The following describes dewarping in live view.


- In the preview page, click  on the window. The figure as shown below appears.



2. Set the mounting mode and display mode.

Mount	Display Mode	Description
Ceiling Mount 		360° panoramic original image
Desktop Mount 		360° panoramic + 1PTZ
		180° panoramic
		Fisheye+3PTZ
		Fisheye+4PTZ
		360° panoramic + 6PTZ
		Fisheye+8PTZ
Wall Mount 		360° panoramic original image
		Panoramic
		Panoramic + 3PTZ
		Panoramic + 4PTZ
		Panoramic + 8PTZ

3. Dewarping operations: Take Ceiling Mount and Fisheye+3PTZ as an example.

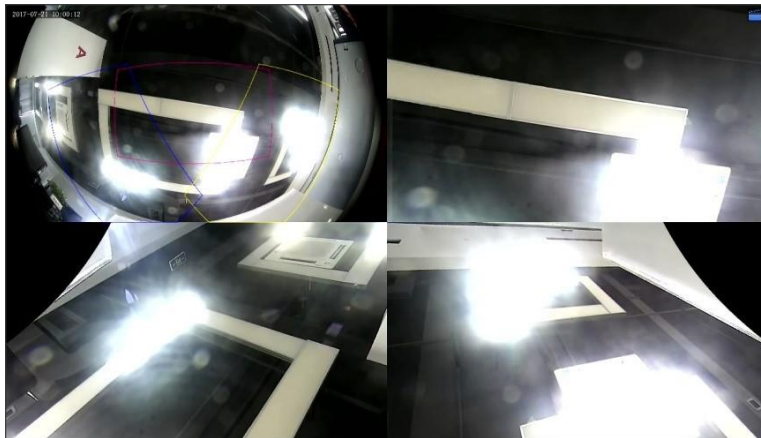

- Drag the mouse to rotate the image or use the scroll wheel to zoom in or out on a PTZ image. A box appears on the fisheye image as the image rotates, and as you drag the box or move the scroll wheel on the fisheye image, the corresponding PTZ image rotates or zooms in or out as well.

4.2 Encoding Settings

Configure stream type, resolution, etc.



Note:

Select Camera	A1(Camera 01)
Storage Mode	Main and Sub Stream
Capture Mode	2592*1944@12_PAL
Stream Type	Normal
Video Compression	H265
Resolution	2592*1944(5MP)
Bitrate Type	CBR
Bit Rate(Kbps)	3072
fps	6
I Frame Interval	12
Smart Encoding	Off

IPC

1. Go to **Menu > Camera > Encoding**.
2. Select the camera from the drop-down list.
3. Choose a storage mode. It may affect the clarity of the recording (HD or SD). Set the storage mode based on the disk capacity and actual requirements.

Storage Mode	HD Streaming	SD Streaming
Main stream	Main stream	No video or image
Sub stream	Sub stream	No video or image
Main + sub stream	Main stream	Sub stream
Main + third stream	Main stream	Third stream
Sub + third stream	Sub stream	Third stream

4. Set the capture mode, that is, combinations of resolution and frame rate.



Note: When the analog camera supports PAL/NTSC format, the capture mode is displayed as **resolution@fps_PAL** or **resolution@fps_NTSC**. Please choose a mode based on the actual situation.

5. Set the encoding parameters for different streams.

Item	Description
Stream Type	• Main stream: Set encoding parameters for normal recordings. • Sub stream: Set encoding parameters for low resolution video intended for network transmission.
Video Compression	Choose H264 or H265. The supported video compression may vary with IPC models.
Resolution	The number of pixels in a frame.

Bitrate Type	- VBR: Variable Bit Rate (VBR) is used to keep the quality of video streams as constant as possible by varying the bit rate. - CBR: Constant Bit Rate (CBR) is used to keep a specific bit rate by varying the quality of video streams.
Bit Rate (Kbps)	The number of bits transferred per second. Select a value from the drop-down list or select Custom to set a value as needed.
fps	The number of frames per second.
I Frame Interval	The number of frames between two adjacent I frames.
Smart Encoding	Select the Smart Encoding mode, including basic mode and advanced mode. You can also close the Smart Encoding. The advanced mode achieves higher compression ratios.

6. (Optional) To apply the settings to other camera(s), click **Copy** and select the desired parameter(s) and camera(s), and then click **OK**.



Note:


- When you copy **Capture Mode** to other camera(s), if the target camera does not support the capture mode, the operation will fail.
- When you copy **Capture Mode** to other camera(s), if the current camera and target camera support the capture mode with the same resolution and frame rate (regardless of whether it is PAL/NTSC format or not), the operation will succeed.
- When you copy **Storage Mode** to other camera(s), if the target camera does not support the storage mode, the operation will fail.
- When you copy **Video Compression** to other camera(s), **Bit Rate** will be selected automatically because video compression adjusts bit rate automatically.

7. Click **Apply**.

4.3 Audio Configuration

Configure audio input and audio output of the IPCs.

1. Go to **Menu > Camera > Audio**.

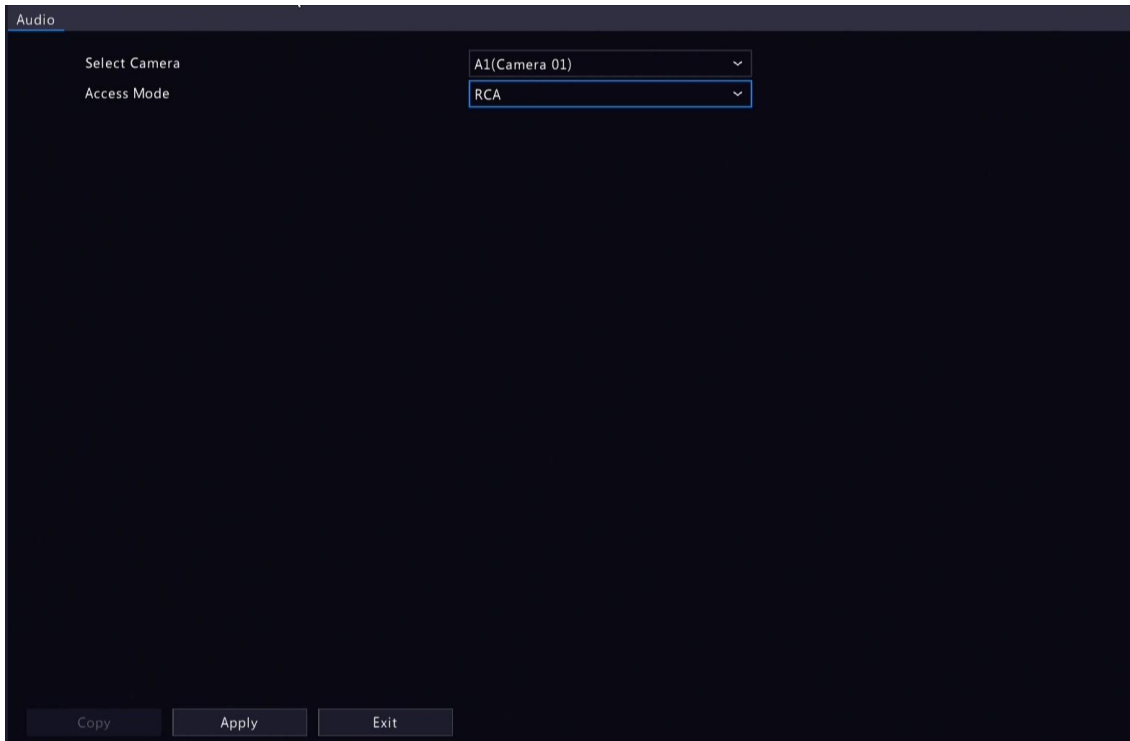

The screenshot shows a software window titled "Audio" with a dark background. It contains two configuration fields: "Select Camera" and "Access Mode". The "Select Camera" field is a dropdown menu with "A1(Camera 01)" selected. The "Access Mode" field is a dropdown menu with "RCA" selected. At the bottom of the window, there are three buttons: "Copy", "Apply", and "Exit".

2. Select the desired camera from the drop-down list.
3. Select the access mode according to the IPC's audio interface, including **Coaxial** and **RCA**.
4. (Optional) To apply the audio settings to other camera(s), click **Copy** and select the desired parameter(s) and camera(s), and then click **OK**.
5. Click **Apply**.

4.4 Snapshot

Configure snapshot parameters.

1. Go to **Menu > Camera > Snapshot > Snapshot Type**.

Snapshot Type

Select Camera: A1(Camera 01)

Snapshot Type: Schedule | Event

Resolution: 720*576(D1) | 720*576(D1)

Image Quality: Medium | High

Snapshot Interval: 5s | 2s

Copy Apply Exit

2. Select the camera and set the parameters as needed.


Item	Description
Snapshot Type	Supports scheduled snapshot and event-triggered snapshot. You need to set image quality and snapshot interval for them, respectively. • Schedule: A snapshot is taken according to the set schedule. • Event: A snapshot is triggered by an event such as alarm input and motion detection alarm. Manual snapshots are event-triggered snapshots.
Resolution	The number of pixels stored in a frame. Only certain DVRs support setting resolution.
Image Quality	Set the snapshot quality. High, medium, or low are available.
Snapshot Interval	Select the time interval between two snapshots from the drop-down list.

3. (Optional) To apply the same settings to other cameras, click **Copy** and select the desired camera(s).
4. Click **Apply**.

4.5 OSD Configuration

Configure the characters overlaid on the preview (live view) window. On Screen Display (OSD) are characters displayed with video images, for example, channel/camera name, date and time, and people counting statistics.

1. Go to **Menu > Camera > OSD**.

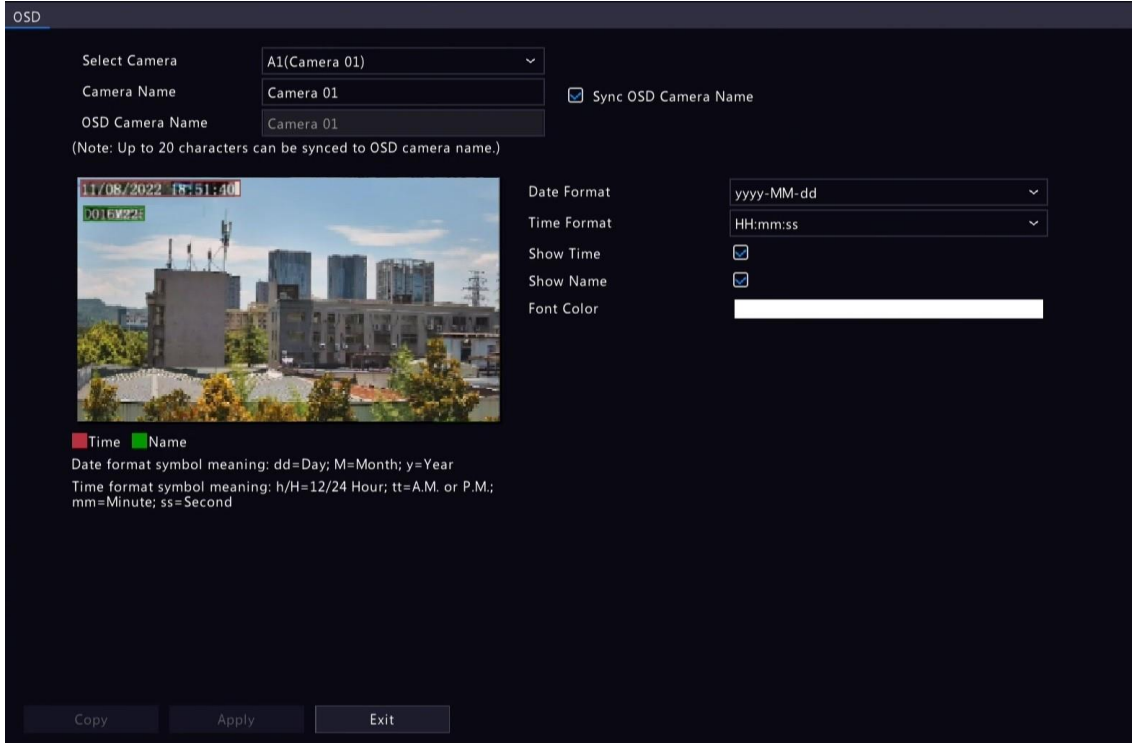

2. Select the desired camera from the drop-down list.
3. Set the OSD parameters.

Item	Description
Camera Name	The name of the selected camera. You may customize the camera name as needed.
Sync OSD Camera Name	Sync OSD Camera Name is enabled by default, thus the OSD camera name is synchronized with the camera name automatically.  Note: • Up to 20 characters can be synced to OSD camera name. If the camera name exceeds 20 characters, only the first 20 characters will be displayed. • If Sync OSD Camera Name is disabled, after the camera name is changed, the new name will not be synced to OSD camera name.
OSD Camera Name	The camera name displayed on the video image. OSD camera name is same as the camera name by default. You can customize the OSD camera name after disabling Sync OSD Camera Name . Up to 20 characters are allowed.
Date Format	Select the date format from the drop-down list.
Time Format	Select the time format from the drop-down list.
Show Time	When enabled, the camera time is displayed on the left side of video image.
Show Name	When enabled, the OSD camera name is displayed on the video image.


Font Color	Select the front color from the drop-down list. A color selection interface. At the top is a white rectangular drop-down menu. Below it is a grid of 100 color swatches arranged in 10 rows and 10 columns. The colors transition from bright primary and secondary colors in the top-left to various shades of gray and black towards the top-right. The bottom half of the grid contains a wide range of naturalistic colors, including earthy tones, greens, blues, and purples. Below the grid is a large, empty white rectangular box.
------------	--

4. (Optional) To apply the same OSD settings to other cameras, click **Copy** and select the desired camera(s).
5. Click **Apply**.

4.6 Image Settings

Adjust image settings to get optimal images.

1. Go to **Menu > Camera > Image > Image**.

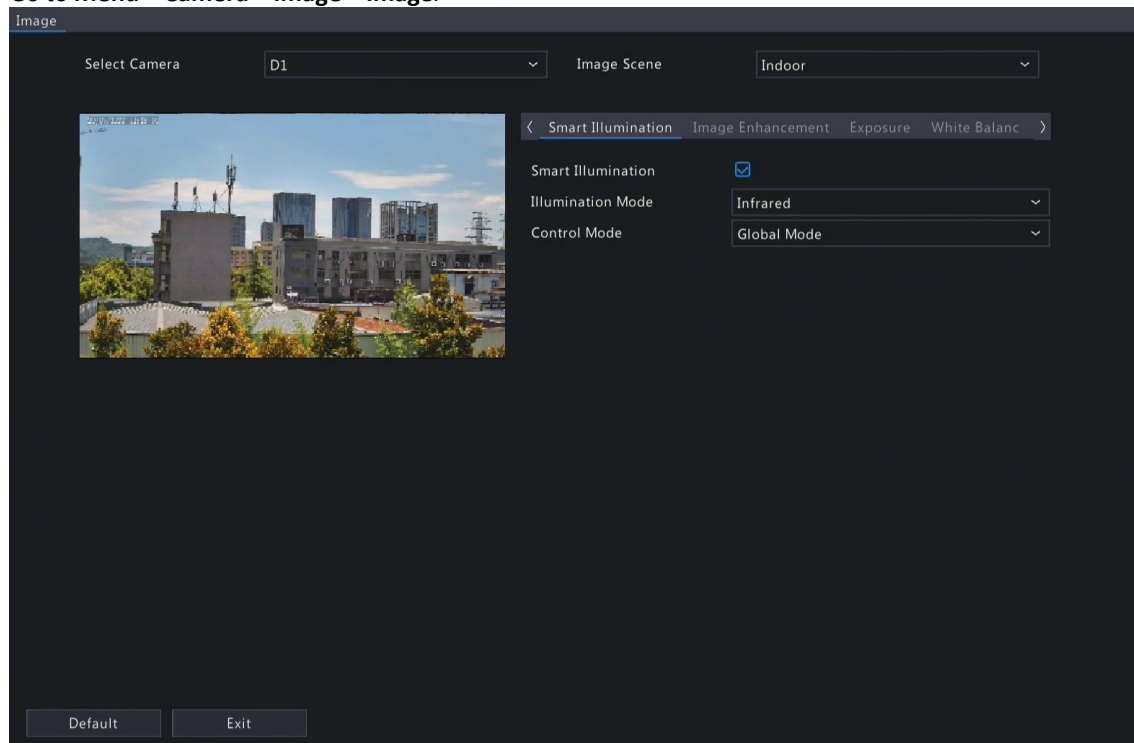

2. Select the desired channel.
3. Select the image scene you want to use.

The IP camera provides several predefined scene modes for different application scenarios. When you select a scene, the parameters will be automatically set, you can also adjust the parameters as needed.

- Indoor: Recommended for indoor scenes.
- Common: Recommended for outdoor scenes.
- Starlight: Recommended for low light conditions.
- Test: Recommended for test scenes.
- Road Highlight Compensation/Park Highlight Compensation: Recommended for capturing vehicle license plates on roads or in parks.
- WDR: Recommended for scenes with high-contrast lighting, such as windows, corridor, front door, or other scenes that are bright outside but dim inside.
- Custom: Set a scene as needed.

4. Configure the parameters under the tabs on this page.

Note:

- Only certain IPCs support scene selection, and the image parameters may vary with IPC model.
- The default settings are scene-adaptive. Use default settings unless modification is necessary. To restore default settings under all the tabs, click **Default** in the lower left corner. This function is available only when the camera is connected to the NVR via the private protocol.
- Image settings apply to both live and recorded videos.

Image Enhancement

Click the **Image Enhancement** tab and set the parameters.

Analog Camera

Time Period

☒

No.

Period 1

▼

Valid Time

00

↕

00

↕

24

↕

00

↕

Color Mode

Standard

▼

Custom

Brightness

Saturation

Contrast

Sharpness

Noise Reduction

Offset

Digital Camera

Brightness

Saturation

Contrast

Sharpness

Noise Reduction

Image Rotation

Normal

▼

Item	Description
Time Period	Enable Time Period and configure parameters for different time periods, respectively.
No.	Select Period 1 or Period 2 .
Valid Time	Set the valid time for the two time periods, and the image enhancement parameters will be effective during the corresponding period. After period 1 is set, period 2 will be generated automatically. For example, if period 1 is 8:00 to 20:00, the 2nd period is 20:00 to 8:00.

Color Mode	9 options: 4 default modes (Standard, Bright, Soft, Vivid), 4 custom modes (Custom 1, Custom 2, Custom 3, Custom 4), and Camera Custom. To set the custom mode, select a custom mode from the drop-down list, click the Custom button, then a dialog box appears, and you can adjust the desired parameters. The noise reduction and image rotation can be set separately, which will not affect the nine color modes.  Note: • If you adjust the parameters of default mode and custom modes, the color mode will automatically switch to the camera custom mode. • The default modes and custom modes are applicable to all channels of the DVR; while the camera custom mode is only applicable to the current channel. If you have configured camera custom mode and then switch to other modes (such as Custom 1), the configured camera custom settings will be lost, and you need to configure again.
Brightness	The overall brightness or darkness of the image.
Saturation	The intensity or vividness of colors in the image.
Contrast	The difference between the lightest and darkest tones in the image.
Sharpness	The contrast between the edges of an object in the image.
Noise Reduction	Reduce noises in images, while it may cause image blur or smearing.
Offset	Adjust the image to the left or right.
Image Rotation	The rotation of the image. • Normal: Displays images without rotation. • Flip Horizontal: Displays images flipped horizontally. • Flip Vertical: Displays images flipped vertically. • 180°: Displays images flipped vertically and horizontally. • 90° CW: Displays images in corridor format. The camera must be installed correctly (rotated 90° clockwise). • 90° CCW: Displays images in corridor format. The camera must be installed correctly (rotated 90° counterclockwise).

Exposure

Click the **Exposure** tab and set the parameters.



Exposure Mode: Indoor 60Hz

Shutter(s): 1/50

Gain(dB): 0

Slow Shutter: ☒

Slowest Shutter: 1/12

Compensation: [Slider]

Linear Stripe Suppression: [Slider]

Day/Night Mode: Automatic

Day/Night Sensitivity: Ultra-low

Day/Night Switching(s): 3

WDR: Automatic

WDR Level: [Slider]

WDR On Sensitivity: [Slider]

WDR Off Sensitivity: [Slider]


Item	Description
Exposure Mode	Select the correct exposure mode to achieve the desired exposure effect. - Automatic: The camera automatically sets the exposure parameters according to the scene. - Custom: User can set exposure parameters as needed. - Shutter Priority: The camera adjusts shutter as priority to adjust the image quality. - Indoor 50Hz: Reduce stripes by adjusting the exposure time.  Note: - Stripe effect: The high-contrast condition in an image caused by uneven light energy received by the sensor. - Using this mode in brighter environments aids in adjusting the stripe effect in the image with linear stripe suppression. - Indoor 60Hz: Reduce stripes by adjusting the exposure time.  Note: Using this mode in brighter environments aids in adjusting the stripe effect in the image with linear stripe suppression. - Manual: Fine-tune image quality by setting shutter, gain, and iris manually. - Low Motion Blur: Control the minimum shutter to reduce motion blur.
Shutter(s)	Shutter is used to control the amount of light that comes into the lens. A fast shutter speed is ideal for scenes in quick motion. A slow shutter speed is ideal for scenes that change slowly. This parameter is configurable when Exposure Mode is set to Manual, Shutter Priority, or Custom.  Note: If Slow Shutter is disabled, the reciprocal of the shutter speed must be greater than the frame rate.

Gain(dB)	Control image signals so that the camera can output standard video signals in different light conditions. This parameter is configurable when Exposure Mode is set to Manual or Custom .
Slow Shutter	Select  to enable slow shutter. When enabled, the camera improves image brightness in low light conditions.
Slowest Shutter	When enabled, you can set the slowest shutter speed for the camera during exposure.
Compensation	Adjust the compensation value as required to achieve the desired image effect.
Day/Night Mode	• Automatic: The camera automatically switches between night mode and day mode according to the ambient lighting condition to output optimum images. • Day: The camera outputs high-quality images in daylight conditions. • Night: The camera outputs high-quality images in low light conditions.
Day/Night Sensitivity	Light threshold for switching between day mode and night mode. Ultra-low, low, medium, and high are available. A higher sensitivity level means that the camera is more sensitive to the change of light and is therefore more easily to switch between day mode and night mode. This parameter is configurable when Day/Night Mode is set to Automatic .
Day/Night Switching(s)	Set the length of time before the camera switches between day mode and night mode after the switching conditions are met. This parameter is configurable when Day/Night Mode is set to Automatic .
WDR	Suitable for high-contrast scenes. WDR can balance the brightness in the bright area and dark area and provide clear image with more details. • On/Off: User needs to identify WDR scenes, and manually enable or disable WDR as needed. • Smart (Automatic): The device can automatically identify typical WDR scenes, and then enable or disable WDR.  Note: When WDR is enabled, some other functions may not be supported. Refer to the actual interface for details.
WDR Level	Adjust the WDR level to improve image quality when WDR is enabled.  Note: In the case of low contrast, it is recommended to disable WDR or use level 1 to 6. Level 7 or higher is recommended if there is a high contrast between the bright and dark areas in the scene.
WDR On/Off Sensitivity	When WDR is set to Automatic , adjust the parameter to change the WDR switching sensitivity.

Metering Control	Perform luminance statistics on the images captured by the device, automatically adjust the exposure value, and output properly exposed images with optimal brightness. The default is the Center-Weighted Average Metering, you may configure this according to the actual scene. - Center-Weighted Average Metering: Measure light mainly in the central part of the image. - Evaluative Metering: Measure light in the specified area of the image, - Face Metering: Adjust image quality in poor lighting or back lighting conditions by controlling the brightness of captured faces in face scenes. - Spot Metering: Similar to the evaluative metering. However, it cannot increase the brightness of the image.  Note: This parameter is configurable when Exposure Mode is not set to Manual.
Linear Stripe Suppression	Adjust the linear stripes in the image. Range: 1 to 9, the default is 5. The greater the value, the more obvious the linear stripe suppression effect is, but it may cause overexposure in the image. Please configure this according to the actual scene.  Note: This parameter is configurable when Exposure Mode is set to Indoor 50Hz or Indoor 60Hz.

Smart Illumination

Click the **Smart Illumination** tab and set the parameters.

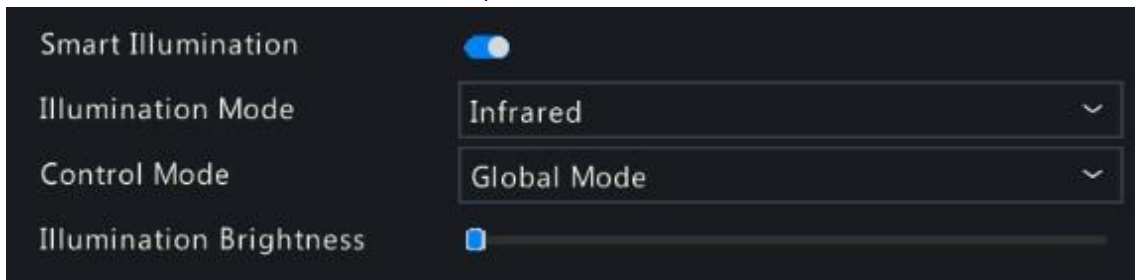

Item	Description
Smart Illumination	Enable Smart Illumination .
Illumination Mode	Select the illumination mode from the drop-down list. - Infrared: The camera uses infrared light illumination. - White Light: The camera uses white light illumination. - Dual Light: The camera adjusts the white light or infrared automatically according to the current lighting condition.
Control Mode	Select the control mode from the drop-down list. - Global Mode: The camera automatically adjusts illumination brightness and exposure to achieve the balanced image effect. - Overexposure Restrain: The camera automatically adjusts illumination brightness and exposure to avoid regional overexposure. - Manual: Control the brightness of illumination manually.
Illumination Level	Drag the slider to adjust the illumination level. This parameter is configurable when Control Mode is set to Manual. The greater the value, the higher the intensity (0 is off).

White Balance


Click the **White Balance** tab and set the parameters.



Item	Description
White Balance	Adjust the red and blue gains of the image to remove unrealistic color casts. • Auto: The camera automatically adjusts the red and blue gains according to the lighting condition (the color tends to be blue). • Fine Tune: Adjust the red or blue offsets manually. • Outdoor: Suitable for outdoor scenes where the color temperature varies widely. • Sodium Lamp: The camera automatically adjusts red and blue gains according to the lighting condition (the color tends to be red). • Locked: Lock the current color temperature to avoid change.
Red Offset	Adjust the red offset manually.
Blue Offset	Adjust the blue offset manually.

Advanced Settings

Click the **Advanced** tab and set the parameters.

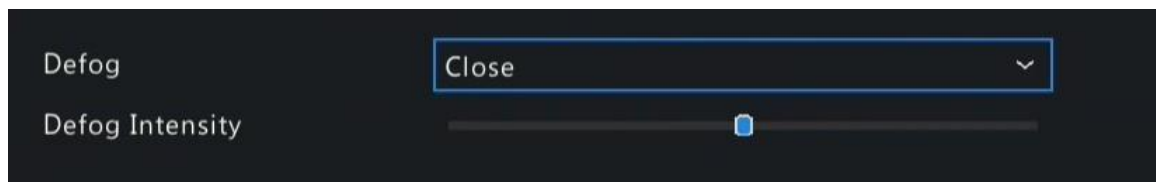

Item	Description
Defog	Enable/disable defog from the drop-down list. Defog is used to improve image visibility in foggy, hazy, and other low-visibility scenes.
Defog Intensity	When defog is enabled, you can adjust the defog intensity. In a heavy-fog environment, the higher the defog level, the clearer the image. In a fog-free or light-fog environment, there is not much difference between levels 1 to 9. Note: Optical defog is available only for certain IPC models. When the defog intensity is set to 6 or higher, optical defog automatically turns on in thick fog, and images change to black and white.

4.7 PTZ Configuration

Configure and control PTZ cameras.



Note:

- This function is only available for PTZ cameras or cameras installed on PT mounts.
- The PTZ parameters may vary with IPC model.
- PTZ (pan, tilt and zoom) control is applicable to PTZ cameras only and may vary depending on the functions and protocols supported by the PTZ cameras. Refer to PTZ camera specifications for details.

PTZ Control Mode

DVRs support two control modes, including **Coaxial** or **Serial Port**. Choose the control mode before using PTZ function.

1. Go to **Menu > Camera > PTZ > PTZ**.

The screenshot shows the 'PTZ Configuration' window. At the top, there is a tab labeled 'PTZ'. Below the tab, there are three configuration options, each with a dropdown menu:

- Select Camera:** The dropdown menu is open, showing 'A1(Camera 01)' as the selected option.
- PTZ Type:** The dropdown menu is open, showing 'Local' as the selected option.
- Control Mode:** The dropdown menu is open, showing 'Coaxial' as the selected option.


At the bottom of the window, there are two buttons: 'Apply' and 'Exit'.

2. Choose a control mode according to camera connection method, and complete other settings.

Configure PTZ

Option 1: Enter Menu

1. Go to **Menu > Camera > PTZ > PTZ Configuration**.
2. Select the target PTZ camera.

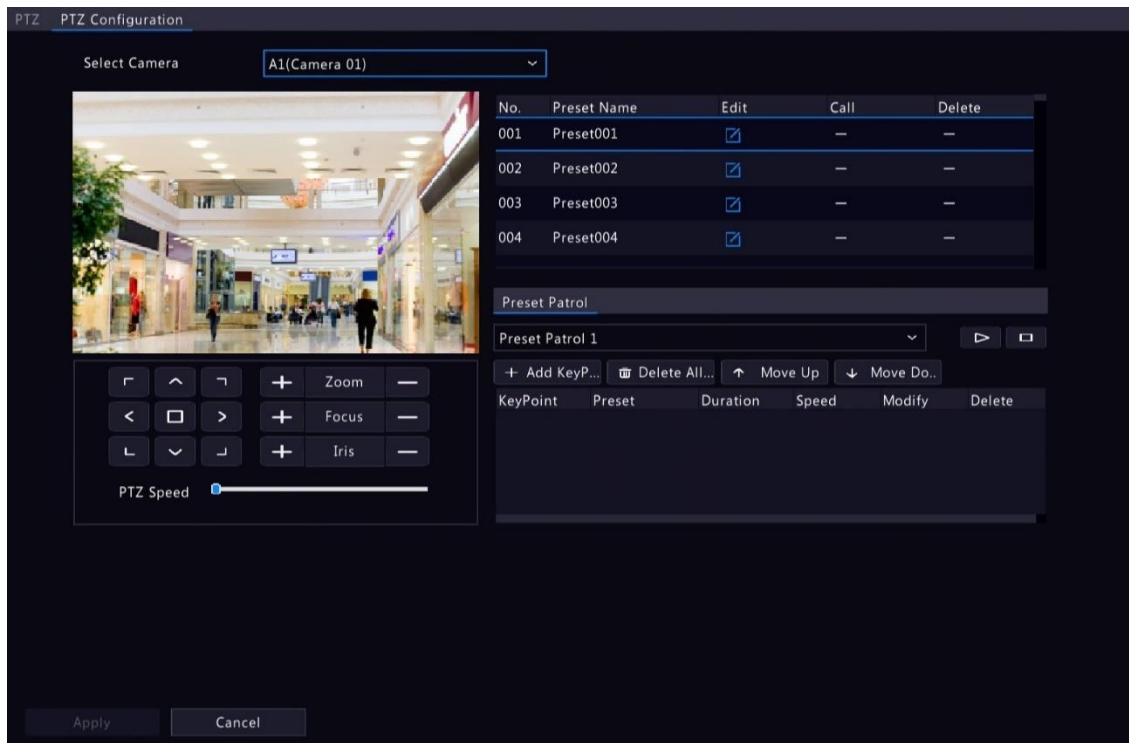

3. Set the parameters. See below for details.

Option 2: Use PTZ Toolbar

1. In the preview page, select the target window, click  on the window toolbar.



2. The PTZ control window appears. You can control the PTZ camera as needed.

- Click **PTZ Configuration** and set the parameters.

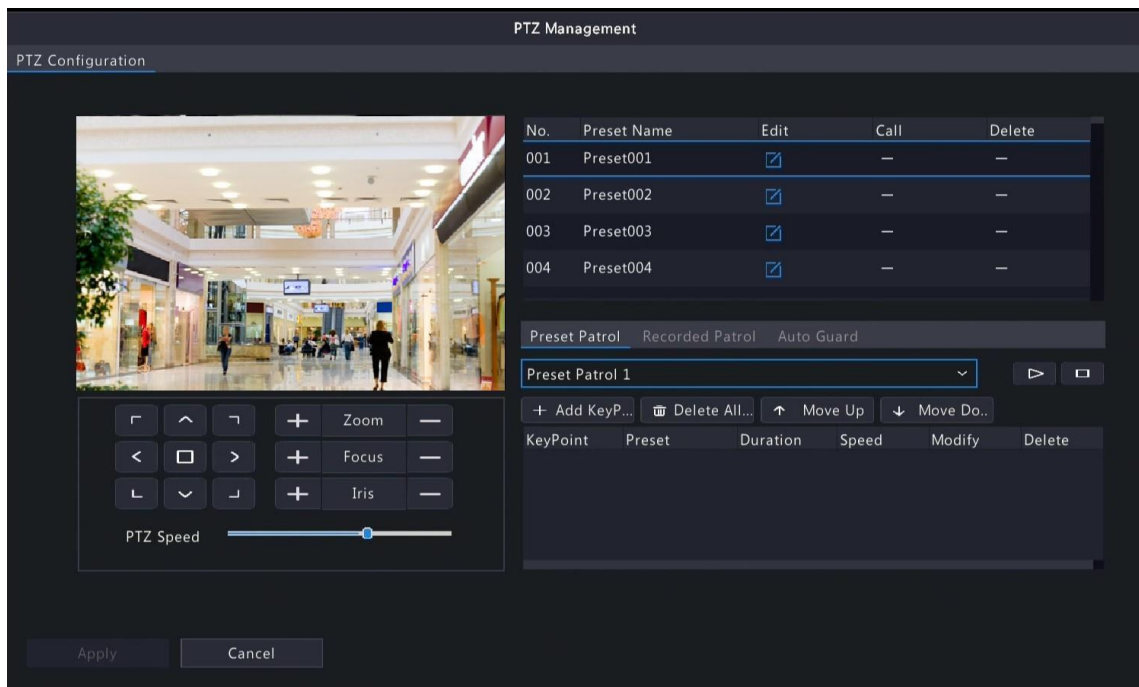


Table 4-1: PTZ Control Window Buttons

Button	Description
	Control the rotation direction of the PTZ camera; release PTZ control.
	- Zoom in or out on images. Note: You can also zoom in or out using the scroll wheel on your mouse. - Focus far or near for clear images. - Increase or reduce the amount of light that enters the lens of the camera.
	Control the rotation speed of the camera. 1-9 are available. 1 means the slowest, and 9 means the fastest.
	Click to display the PTZ Configuration page.
	- Turn on/off the light. - Turn on/off the wiper. - Turn on 3D positioning. - Turn on/off the heater. - Turn on/off the snow removal. - Turn on/off PTZ shortcut operations. Note: - Make sure that the 3D positioning, heater, and snow removal functions are supported by the camera before using. - Use 3D positioning to zoom in or out. Dragging from top down zooms in. Dragging the other way zooms out.

Preset/ Preset Patrol/Recorded Patrol/ Auto Guard	For detailed information, see Preset, Preset Patrol, Recorded Patrol and Auto Guard respectively.
 	- Call a preset: Click , the PTZ camera goes to the preset position. - Delete a preset: Click  to delete the preset.  Note:  and  are displayed for saved presets only.
	Start or stop preset patrol.

OSD Menu

Configure analog cameras on DVRs. This function is only available for DVRs.

- In the preview window of an analog camera, click  on the window toolbar.
- Click **OSD Menu Control**.
- Click  or  to open the camera settings window and set the parameters.
- Click  to save the settings, and then choose **Exit** button to close the window.

Preset

A preset position (preset for short) is a saved view used to quickly steer the PTZ camera to a specific position.

- Add a Preset
 - Use the PTZ direction buttons to steer the PTZ camera to the desired position.
 - Select a preset number not in use and click  to edit the preset name.

Edit Preset Name

Preset Name

Preset001

Note: Editing a preset name will save the current position as the preset

OK

Cancel

- Click **OK** to save. Repeat the above steps to add all the presets.

No.	Preset Name	Edit	Call	Delete
001	Preset001			
002	Preset002		—	—
003	Preset003		—	—
004	Preset004		—	—

- Call a Preset

In the preset list, select the preset to call and click . Then the camera rotates to the preset position.
- Delete a Preset


In the preset list, select the preset to delete, and then click .

Preset Patrol

Set a preset patrol route so the PTZ camera can patrol by presets (go from one preset to the next in specified order).

- Add Preset Route

1. Click **Preset Patrol** and select a patrol route

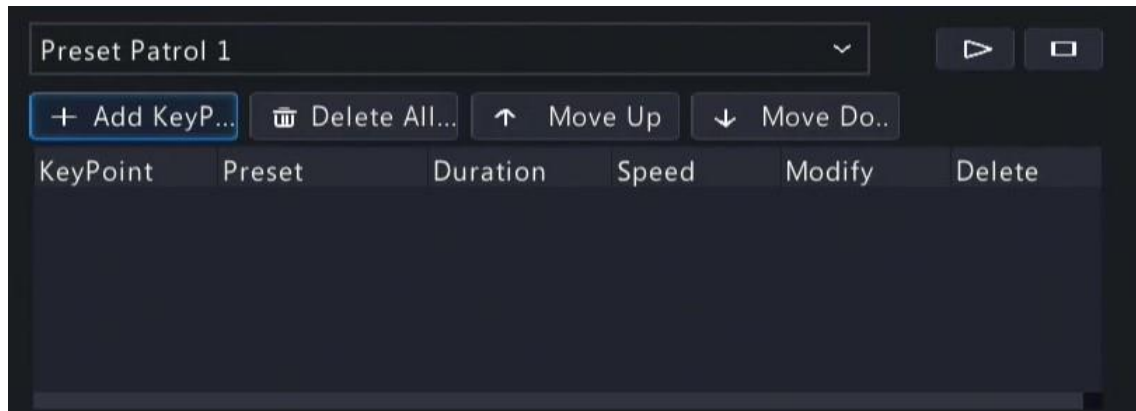

2. Click **+ Add KeyP...**. The figure as shown below appears.



3. Complete the parameters and click **OK**.


Item	Description
Preset	Set the length of time the camera stays at the preset after performing the patrol. See Preset for setting preset.
Duration(s)	Set the time the camera stays at the preset after the patrol is performed. The valid range is from 120 to 1800 seconds. The default is 10s.
Speed	Set the rotation speed. 1 means the slowest, 9 means the fastest. The default is 5.

4. Repeat the above steps to add more routes.

 **Note:** Up to 4 patrol routes are allowed for each PTZ camera. Up to 8 presets (key points) are allowed for each patrol route.

- Call a Preset

Select a preset patrol in the list, click **▶** to start the preset patrol. To stop, click **◻**.

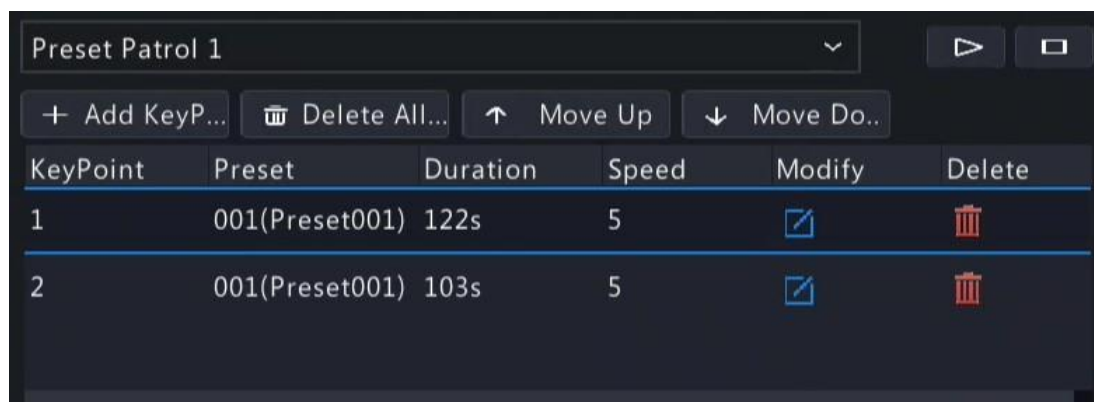


- Other Operations
 - Edit: Click  to edit the preset patrol parameters.
 - Delete: Click  to delete a key point; Click  Delete All... to delete all key points.
 - Move Up/Move Down: Click  Move Up /  Move Do.. to adjust the sequence of these presets.

Recorded Patrol

Record a patrol route so the PTZ camera can patrol according to the recorded patrol.

- Add a Recorded Patrol
 1. In the **Recorded Patrol** tab, select a patrol route.
 2. Click  to start recording. Steer the camera to the desired directions, adjust the zoom, focus, iris as needed during the process.

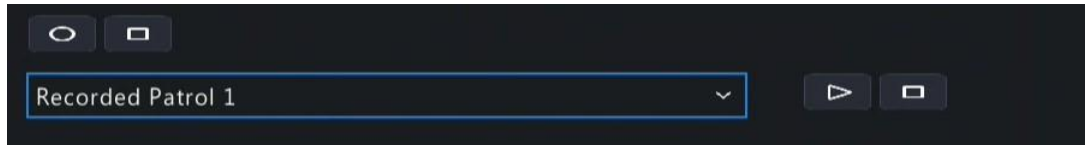

3. Click  to stop recording.
 4. Click **Apply**.
- Call a Recorded Patrol
Click  to start the recorded patrol. Click  to stop the recorded patrol.

Auto Guard

Configure auto guard so the PTZ camera automatically performs the specified action (e.g., going to a preset or starting a patrol) after being idle (no user operation) for a certain length of time.

 **Note:** Before use, you need to add a preset or a patrol route.

1. In the **Auto Guard** tab, select the **Enable** check box to enable auto guard.
2. Set the parameters.

Item	Description
Idle State(s)	Set the idle duration for the camera to start auto guard. 1 to 3600 seconds are available. The default is 60s.
Mode	Select preset or patrol route.
Preset/Patrol	Select a preset number or patrol route number.

3. Click **Apply**.

5 VCA


Configure VCA (Video Content Analysis), and VCA search.

5.1 VCA Configuration

VCA includes face recognition, perimeter protection, and people counting. You can monitor people flow, roads and moving objects by configuring VCA. The VCA functions and parameters may vary with DVR model.

 **Note:** VCA functions are not available if there is no disk in slot 1.

1. Go to **Menu > VCA > VCA Config.**

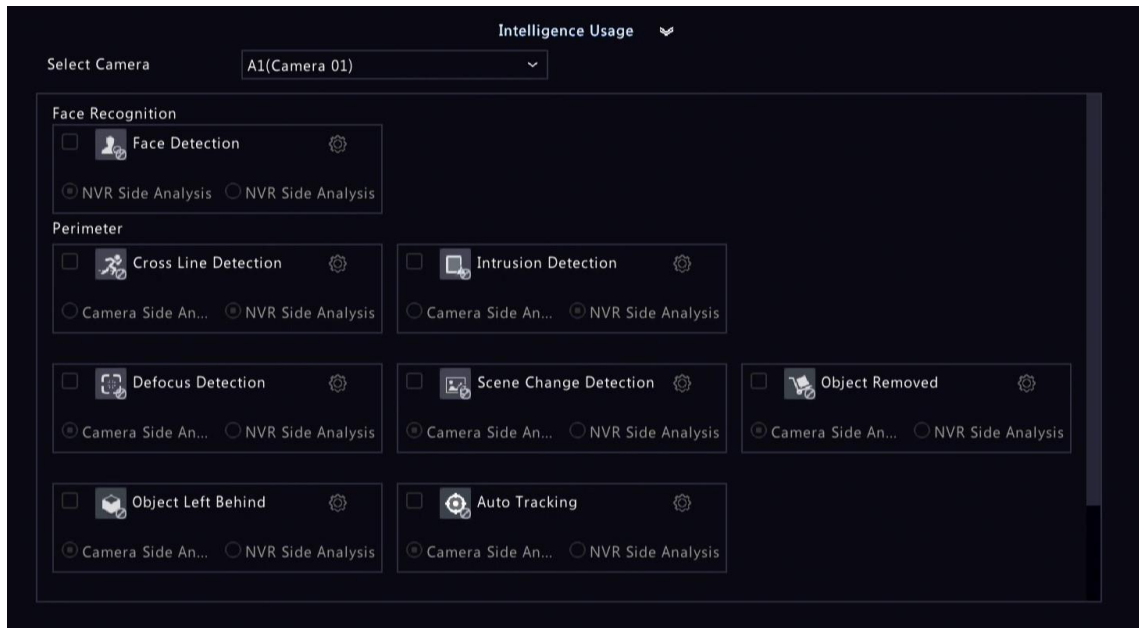

2. Select a camera.
3. Select the check box of the VCA function to be enabled and choose whether to implement this function on the camera side or the NVR side.
 - Camera Side Analysis: The VCA function is implemented by the camera.
 - NVR Side Analysis: The VCA function is implemented by the NVR.

 **Note:**

- The parameters of some VCA functions supported on the camera side are more than that supported on the NVR side.
- Before you enable camera side analysis, make sure the camera is connected via private protocol.
- VCA functions that are not supported by the camera or NVR are grayed out.

4. Click  to configure the function.


5.1.1 Alarm-triggered Actions

Configure actions to be triggered when an alarm occurs to alert you to deal with it in time.

Click  right to **Trigger Actions**, set the actions, and then click **OK**.

 **Note:** The actions supported may vary with DVR model and VCA function.

Some actions are detailed below.

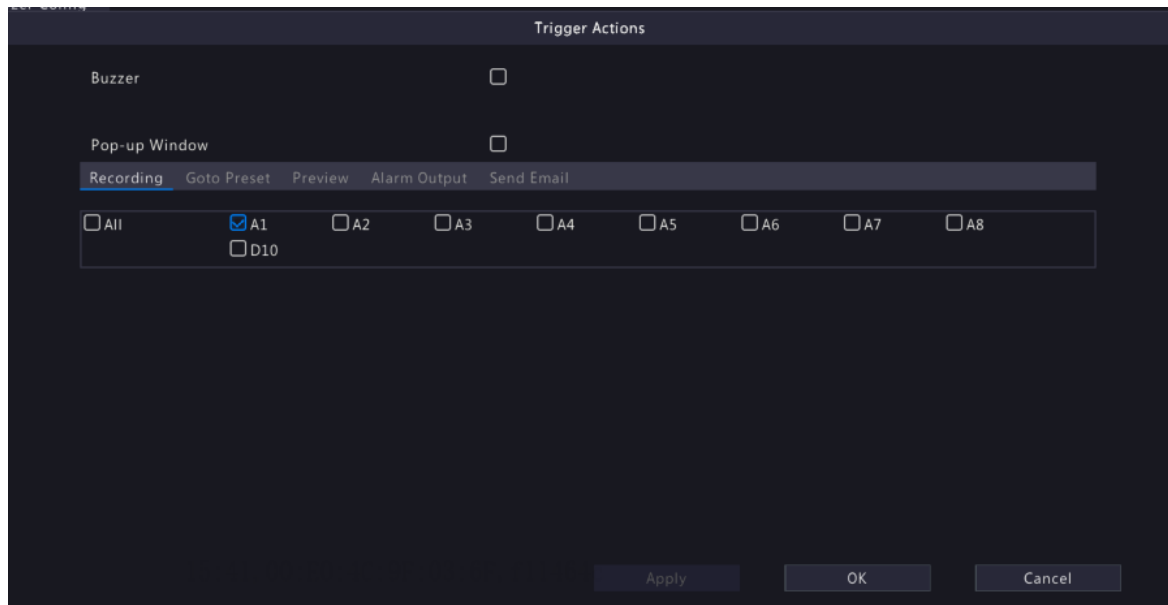

Buzzer

The DVR makes a buzzing sound when an alarm occurs.

Send Email

The DVR sends an email with alarm information to the specified email address(es) when an alarm occurs.

Pop-up Window


An alarm message pops up when an alarm occurs.

Recording

The DVR records video from the selected camera when an alarm occurs.


Goto Preset

A PTZ camera moves to a preset position when an alarm occurs.

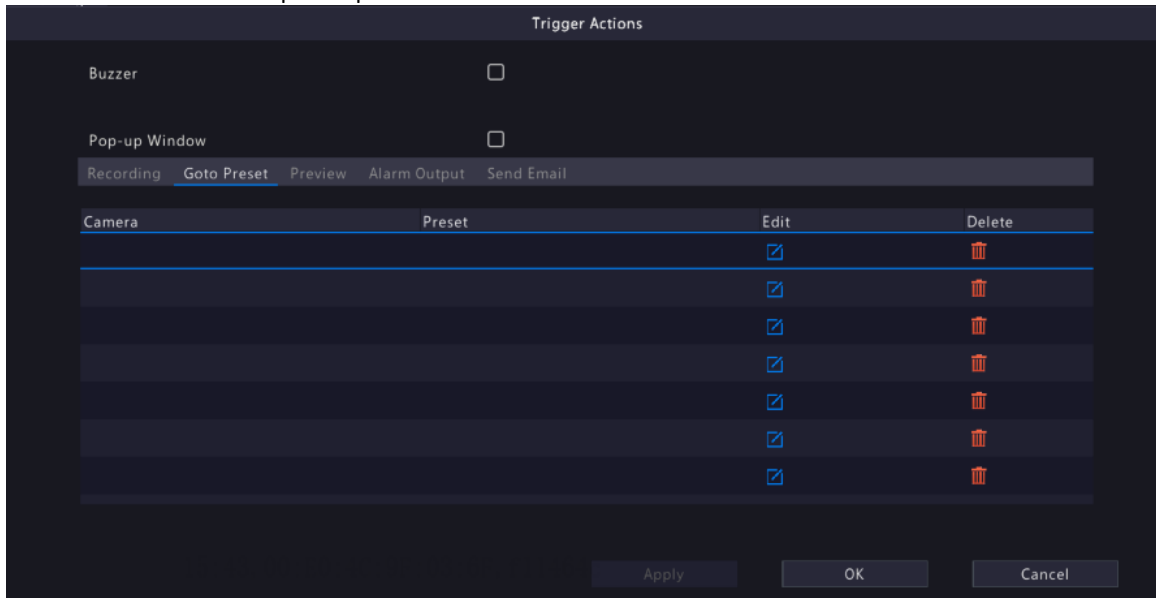

Configure this action as follows:

1. Click

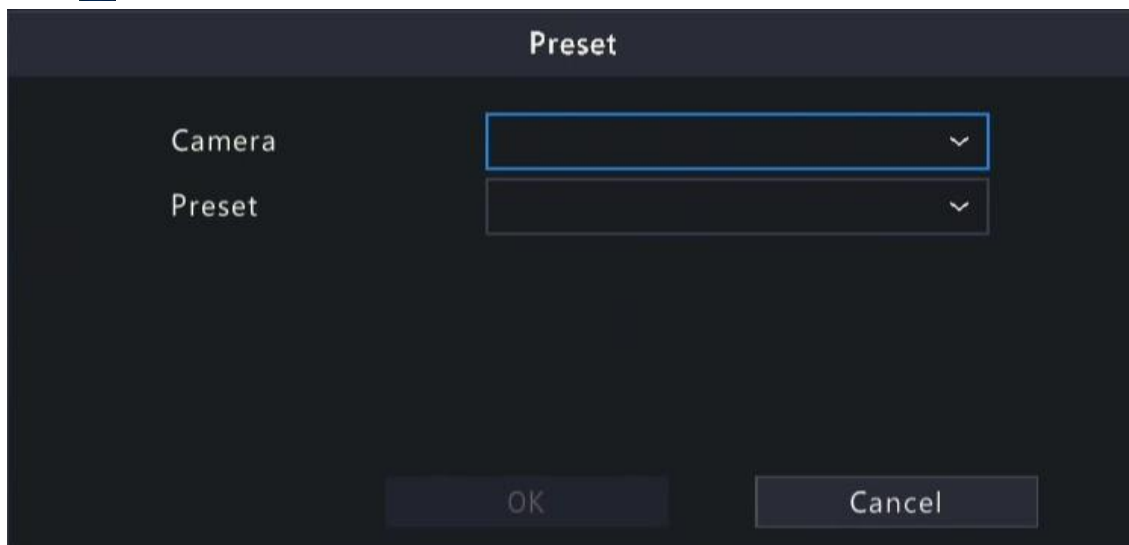

2. Select the camera to perform this action and select the preset you want the camera to go to when an alarm occurs.


Note: Before use, you need to configure presets on the PTZ camera. See *Network Camera User Manual* for details.

3. Click **OK**.

Note: To delete or unlink a preset, click .


Preview

The DVR plays the live video of the specified camera(s) when an alarm occurs. To perform this action, you need to configure **Max. Alarm-Triggered Live View Windows** (1/4/9 available) under **Menu > System > Preview**.

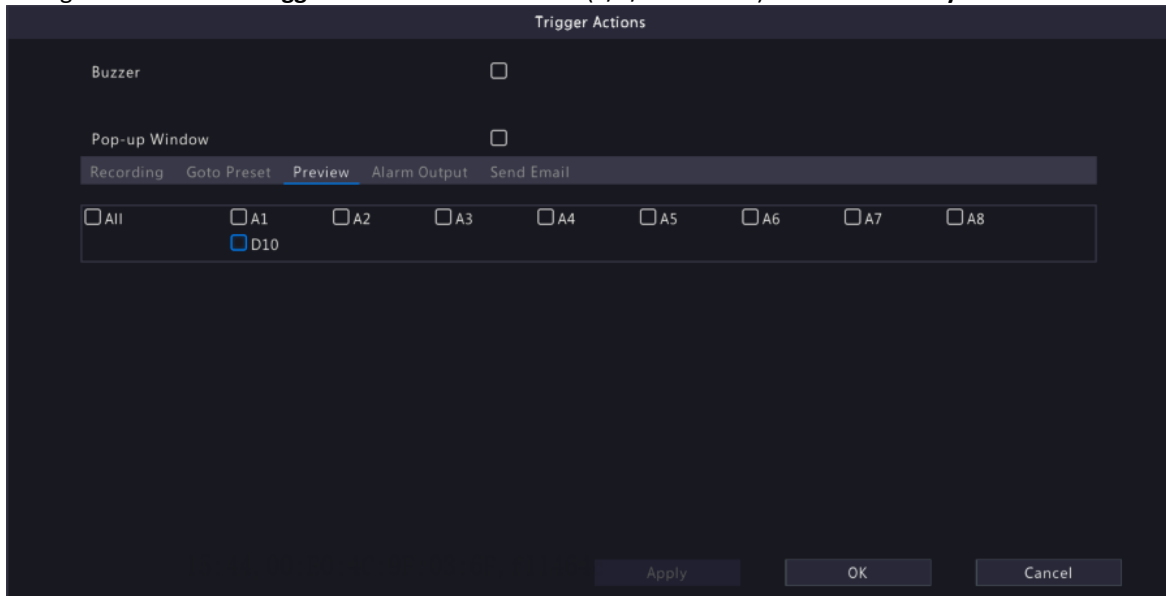

The live view page displayed in the event of alarms varies depending on the number of linked cameras and the number of alarm-triggered live view windows. When an alarm occurs, the live view page shows the live video from the linked camera(s) with a red frame; when the alarm ends, the live view page returns to the original state.

- When **Max. Alarm-Triggered Live View Windows** is set to **1 Window**, the live view page plays live video in one window. If more than one camera is linked, the live video switches at 5s.

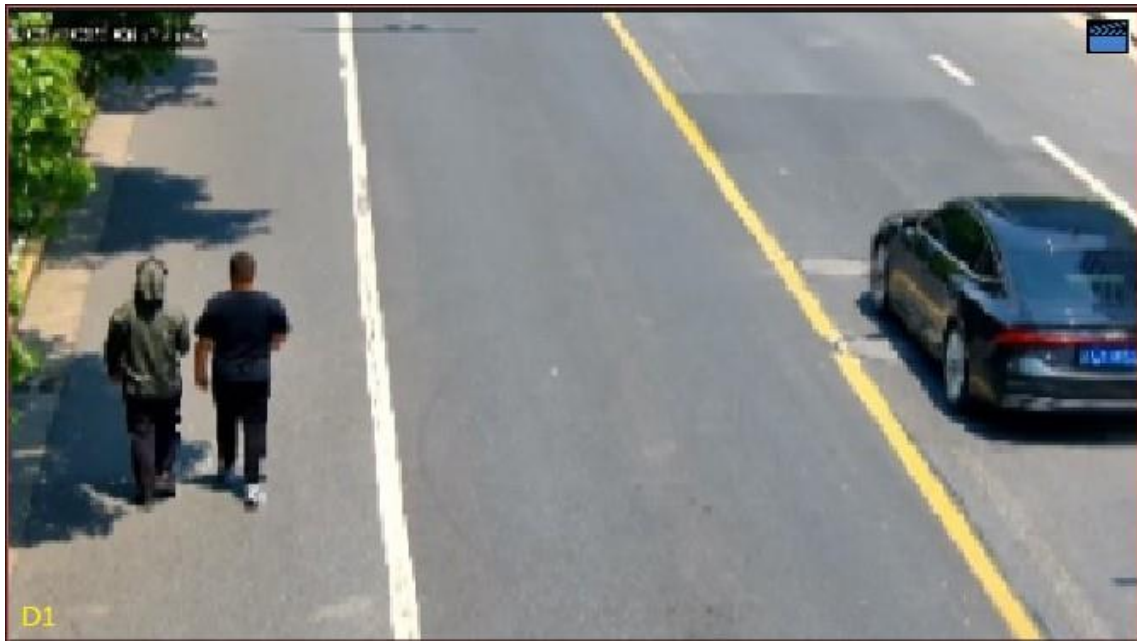



- When **Max. Alarm-Triggered Live View Windows** is set to **4 Windows**, the live view page plays the live video of each camera in 4-split mode. If more than 4 cameras are linked, the live video switches at 5s.

Live view page with 3 cameras linked:



Live view page with 5 cameras linked:

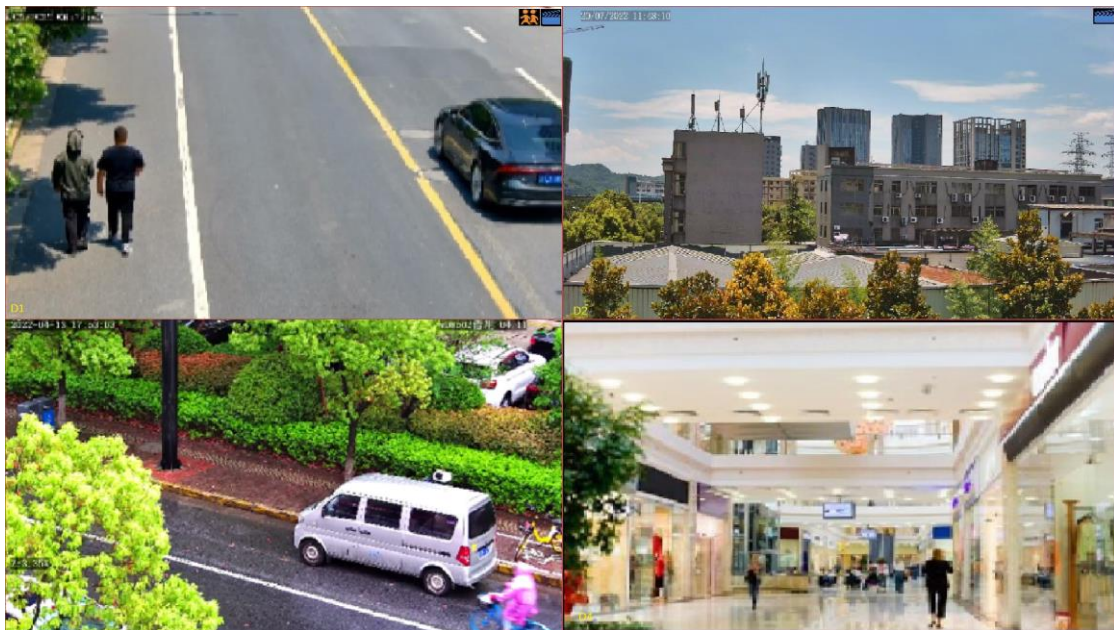

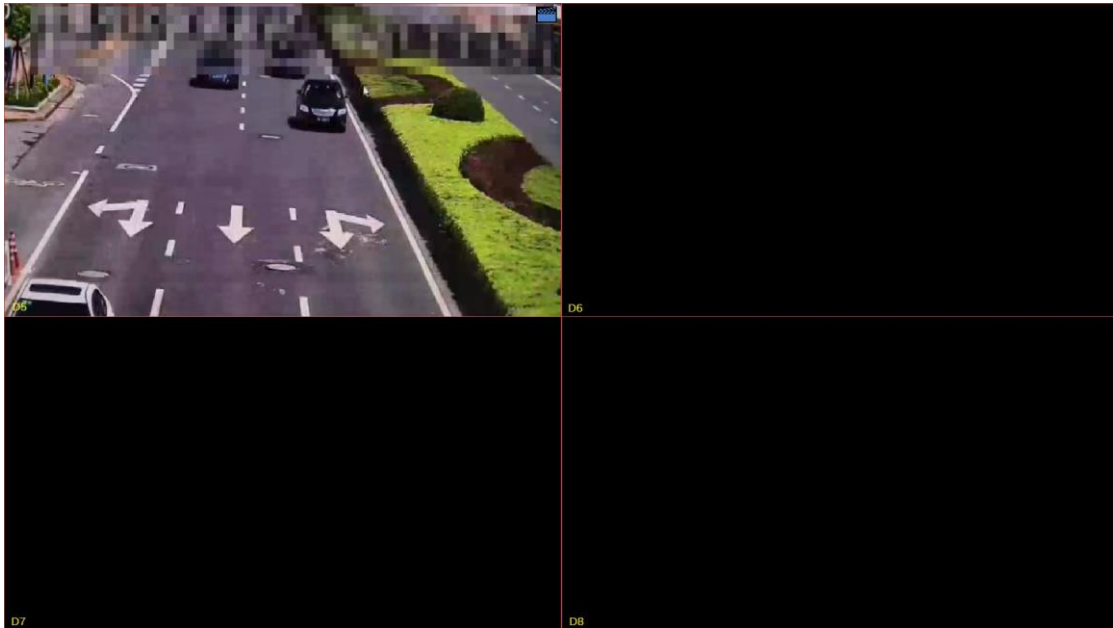

- When **Max. Alarm-Triggered Live View Windows** is set to **9 Windows**, the live view page plays the live video of each camera in 9-split mode. If more than 9 cameras are linked, the live video switches at 5s.

Alarm Output

A third-party device is triggered to raise an alarm when it receives an alarm output by the DVR.

Trigger Actions

Buzzer ☐

Pop-up Window ☐

Recording Goto Preset Preview **Alarm Output** Alarm Sound

☐ All	☐ A->1	☐ A->2	☐ A->3	☐ A->4	☐ A->5	☐ A->6	☐ A->7
	☐ A->8	☐ D1->1	☐ D2->1	☐ D3->1	☐ D7->1	☐ D8->1	☐ D10->1
	☐ D12->1	☐ D13->1	☐ D18->1	☐ D25->1	☐ D34->1	☐ D39->1	☐ D43->1
	☐ D46->1	☐ D51->1	☐ D52->1	☐ D53->1	☐ D55->1	☐ D56->1	☐ D57->1
	☐ D58->1	☐ D59->1	☐ D68->1	☐ D69->1	☐ D82->1	☐ D86->1	☐ D87->1
	☐ D96->1	☐ D97->1	☐ D98->1	☐ D99->1	☐ D100->1	☐ D104->1	☐ D105->1
	☐ D106->1	☐ D107->1	☐ D108->1	☐ D109->1	☐ D110->1	☐ D113->1	☐ D114->1
	☐ D115->1	☐ D122->1	☐ D125->1	☒ D126->1	☐ D127->1	☐ D128->1	☐ D129->1
	☐ D130->1	☐ D131->1	☐ D132->1	☐ D133->1	☐ D134->1	☐ D135->1	☐ D136->1

Apply OK Cancel

Alarm Sound

The selected camera plays an audio alarm when an alarm occurs. This action is only available to cameras that support alarm sound.

The screenshot shows the 'Trigger Actions' configuration window. At the top, there are checkboxes for 'Buzzer' and 'Pop-up Window'. Below these is a tabbed interface with 'Recording', 'Goto Preset', 'Preview', 'Alarm Output', and 'Alarm Sound' (which is selected). Under the 'Alarm Sound' tab, there is a checkbox for 'Alarm Sound'. Below this is a 'Select day' dropdown menu set to 'Mon'. A table with four columns: 'Start Time', 'End Time', 'Audio', and 'Repeat' is shown. The table has four rows, each with '00' for start and end times, 'You_are_in_the_re' for audio, and '3' for repeat. At the bottom, there is a 'Copy To' section with checkboxes for 'All', 'Mon', 'Tue', 'Wed', 'Thu', 'Fri', 'Sat', and 'Sun'. 'All' is selected. At the bottom right are 'Apply', 'OK', and 'Cancel' buttons.

Configure this action as follows:

1. Select the **Alarm Sound** check box, select the alarm mode, and configure other parameters as needed.

Mode	Description
Day/Night Mode	Select the day and time (day/night) in which alarm sound is enabled.  Note: The camera automatically switches to day or night mode according to the ambient brightness. See <i>Network Camera User Manual</i> for details.
Custom Mode	Select the day and time (start/end time) in which alarm sound is enabled.  Note: Up to 4 time periods are allowed per day, and the time periods cannot overlap.
Audio	Select the audio file to be played by the camera when an alarm occurs. By default, 13 audio files are available. You can configure the audio files on the camera's Web interface.  Note: The number of built-in audio files varies depending on the camera model, and up to 5 audio files are allowed on certain models.
Repeat	Set the number of times the audio file to be played when an alarm occurs. Range: 1 to 50.

2. (Optional) To apply the same settings to other days, select the desired day(s) after **Copy To**.
3. Click **OK**.

Alarm Light

The illuminator of the selected camera flashes for a certain period of time when an alarm occurs. This action is only available to cameras that support alarm light.

Trigger Actions

Buzzer ☐

Pop-up Window ☐

Recording Goto Preset Preview Alarm Output Alarm Sound **Alarm Light**

☒ Alarm Light

Blink Time(s) 10 [5 ~ 60]

Select day Mon

Start Time End Time

00 00 23 59

00 00 00 00

00 00 00 00

00 00 00 00

Copy To ☐ All ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fr ☐ Sat ☐ Sun

Apply OK Cancel

Configure this action as follows:

1. Select the **Alarm Light** check box, select the alarm mode, and configure other parameters as needed.

Mode	Description
Day/Night Mode	Select the day and time (day/night) in which alarm light is enabled.  Note: The camera automatically switches to day or night mode according to the ambient brightness. See <i>Network Camera User Manual</i> for details.
Custom Mode	Select the day and time (start/end time) in which alarm light is enabled.  Note: Up to 4 time periods are allowed per day, and the time periods cannot overlap.
Blink Time(s)	Set the duration that the illuminator flashes when an alarm occurs.

2. (Optional) To apply the same settings to other days, select the desired day(s) after **Copy To**.
3. Click **OK**.

Snapshot

The DVR takes a snapshot from a specified camera when an alarm occurs.

The screenshot shows the 'Trigger Actions' dialog box with the 'Snapshot' tab selected. The 'Buzzer' and 'Pop-up Window' options are unchecked. The 'Snapshot' tab is active, showing a list of cameras with checkboxes. 'D4' is selected. The 'Apply', 'OK', and 'Cancel' buttons are at the bottom.

Recording	Goto Preset	Preview	Alarm Output	Snapshot
☐ All	☐ D1 ☐ D12	☐ D2	☐ D3	☒ D4
				☐ D5
				☐ D7
				☐ D9
				☐ D10

 **Note:** This action is only available to certain alarm functions such as motion detection and human body detection and is not available to VCA functions.

Send Email

The NVR sends an email with alarm information to the specified email address(es) when an alarm occurs. Please set the recipient information in [Email](#). Up to 6 recipients are allowed.


The screenshot shows the 'Trigger Actions' dialog box with the 'Send Email' tab selected. The 'Buzzer' and 'Pop-up Window' options are unchecked. The 'Send Email' tab is active, showing a table with columns 'Recipient' and 'Recipient Address'. One recipient is listed: 'Recipient1' with address 'test@test.com'. The 'Apply', 'OK', and 'Cancel' buttons are at the bottom.

Recipient	Recipient Address
☐ All	
☐	Recipient1
	test@test.com

5.1.2 Arming Schedule

Configure an arming schedule to determine when the DVR receives alarms and performs predefined alarm-triggered actions.


Click  right to **Arming Schedule**, configure the schedule as needed, and then click **OK**.

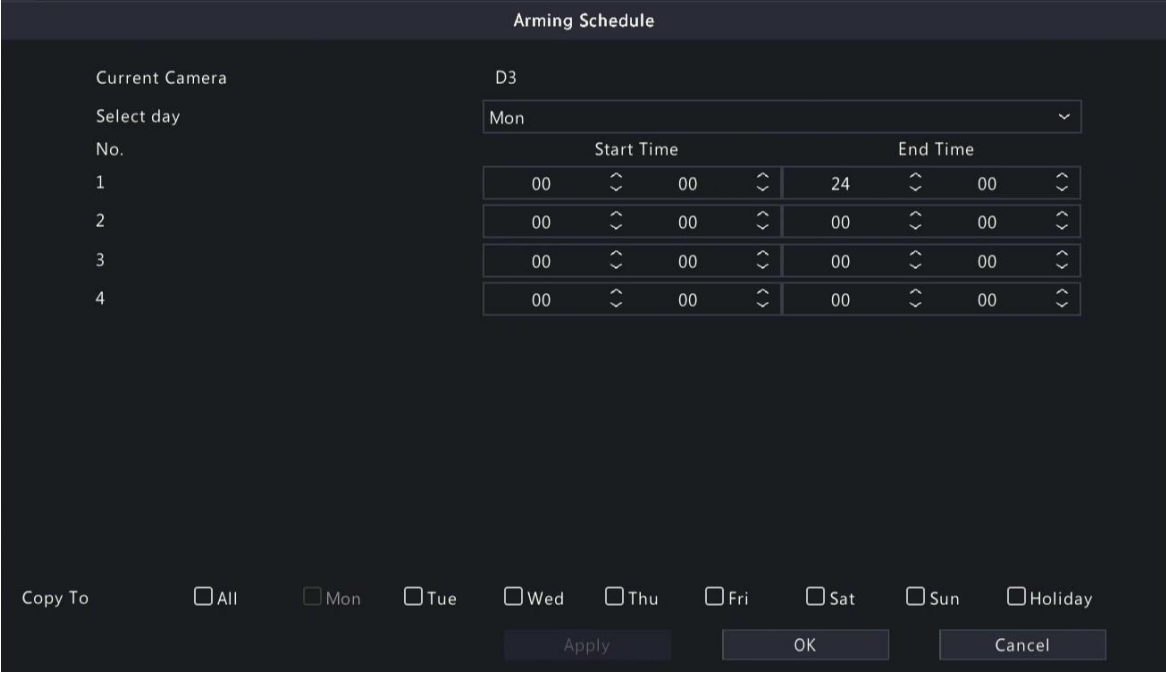

The screenshot shows the 'Arming Schedule' window for camera 'D3'. The 'Select day' dropdown is set to 'Mon'. Below it is a table with 4 rows for scheduling time periods. Each row has 'Start Time' and 'End Time' columns, each with a 24-hour digital clock interface (HH:MM) and up/down arrows. At the bottom, there is a 'Copy To' section with checkboxes for 'All', 'Mon', 'Tue', 'Wed', 'Thu', 'Fri', 'Sat', 'Sun', and 'Holiday'. Below these are 'Apply', 'OK', and 'Cancel' buttons.

No.	Start Time	End Time
1	00:00	24:00
2	00:00	00:00
3	00:00	00:00
4	00:00	00:00

On certain DVRs, the **Arming Schedule** page shows as follows:

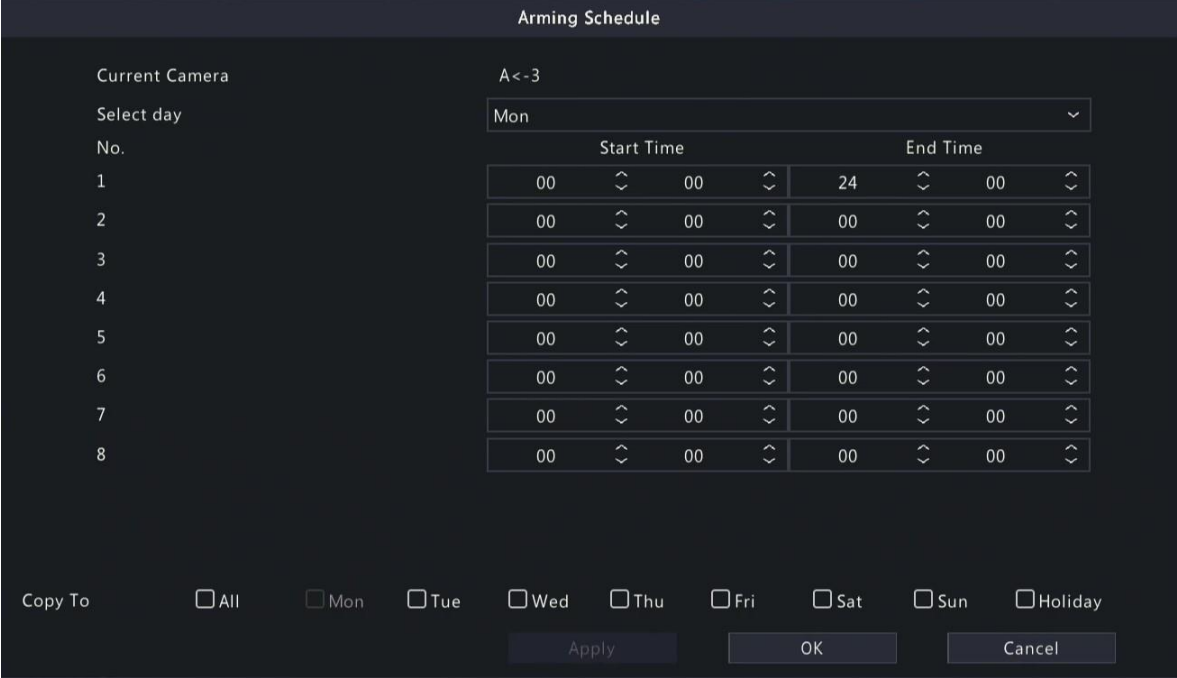

This screenshot shows the 'Arming Schedule' window for camera 'A<-3'. The 'Select day' dropdown is set to 'Mon'. The table below has 8 rows for scheduling time periods. The interface is similar to the previous one, with digital clocks and up/down arrows for time selection. The bottom controls are identical.

No.	Start Time	End Time
1	00:00	24:00
2	00:00	00:00
3	00:00	00:00
4	00:00	00:00
5	00:00	00:00
6	00:00	00:00
7	00:00	00:00
8	00:00	00:00



Note:


- Up to 4 or 8 time periods are allowed per day, and the time periods cannot overlap.
- (Optional) To apply the same schedule to other days, select the desired day(s) after **Copy To**.
- The number of arming time periods available varies by function.
- If a SIP camera is connected to the DVR and configured with camera side analysis of **Intrusion Detection**, **Cross Line Detection**, **Enter Area**, or **Leave Area**, the arming schedule configured for these functions on the DVR will be synchronized to the camera.

5.1.3 Face Detection


Face detection detects and captures faces in a specified detection area.

 **Note:** The functions and parameters supported by camera side analysis and DVR side analysis are different.

1. Go to **Menu > VCA > VCA Config.**
2. Select a camera.
3. Select **Face Detection** and click  to configure it.

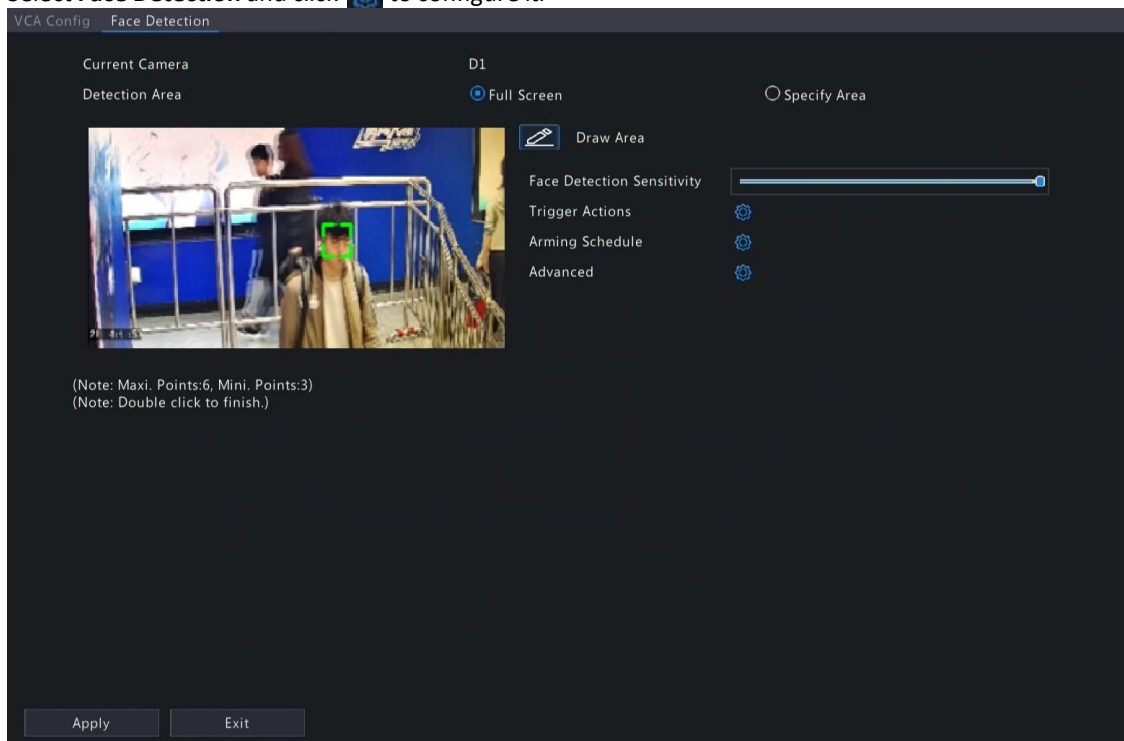

4. Set the detection area. Only 1 detection area is allowed.
 - Full Screen: Detects all faces in the live video.
 - Specify Area: Detects faces in a specified area of the live video. Select **Specify Area** and click , then a detection box appears in the left preview window. You can adjust the position of the area or draw an area as needed.

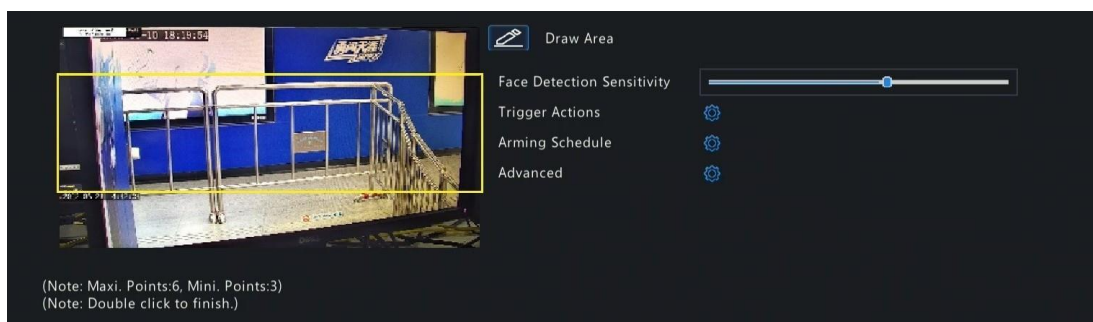

- Adjust the position of the area. Point to a border of the area and drag it to the desired position.
 - Draw an area. Click on the image and drag to draw a line. Repeat the action to draw more lines to form an enclosed shape as needed. Up to 6 lines are allowed.
5. Set the face detection sensitivity by dragging the slider. The higher the sensitivity, the more likely a face will be detected. The lower the sensitivity, the less likely a side face or blurring face will be detected.
 6. Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
 7. Click  right to **Advanced**, configure the parameters as needed, and then click **OK**.

Advanced

Min. Pupillary Distance(px)

60

Number of Snapshots

5

Enable Face Selection

☒

Face Selection Mode

Effect Priority ▾

Number of Selected Photos

1

Note: Minimum pupillary distance range: 20px-150px

OK

Cancel

On certain DVRs, the **Advanced** page shows as follows:

Advanced

Min. Pupillary Distance(px)

60

Number of Snapshots

1

Note: Minimum pupillary distance range: 20px-150px

OK

Cancel

Parameter	Description
Min. Pupillary Distance(px)	The minimum distance (measured in pixels) between two pupils. Faces with pupillary distance smaller than the value will not be captured.  Note: The default value varies by image resolution, and the valid range varies by DVR model.
Number of Snapshots	The number of snapshots to be captured when the detection rule is triggered. Range: 1 to 30. Default: 5.
Enable Face Selection	Select whether to select face snapshots to report.
Face Selection Mode	- Effect Priority: Set the Number of Selected Photos, then the DVR selects the specified number of snapshots with the best quality from all the snapshots captured when a face is detected to report. - Speed Priority: Set the Number of Selected Photos and Selection Timeout, then the DVR selects the specified number of snapshots from the moment that a face is detected till Selection Timeout is up to report. Range: 1 to 1800. Face Selection Mode Speed Priority ▾ Number of Selected Photos 1 Selection Timeout(s) 30 - Periodic Selection: Set the Selection Timeout, for example, 600ms, then the DVR selects a face snapshot every 600ms to report. Face Selection Mode Periodic Selection ▾ Selection Timeout(100ms) 10

Parameter	Description
Number of Selected Photos	The number of face snapshots to be selected. Range: 1 to 3. This parameter is set to 1 by default and cannot be modified on certain models.
Max/Min Face Width(px)	The DVR only captures faces within Min. Face Width and Max Face Width . Range: 20 to 500.

8. Click **Apply**.

5.1.4 Cross Line Detection

Cross line detection detects objects crossing a user-specified virtual line in a specified direction. The DVR takes snapshots and reports an alarm when the detection rule is triggered.




Note:

- Before you use camera side analysis, make sure an intelligent server with **Platform Communication Type** set to **LAPI** is enabled on the camera.
- The functions and parameters supported by camera side analysis and DVR side analysis are different.
- To perform this function on the camera side, enable **Intelligent Mark** under **Menu > System > Basic**.
- To configure cross line detection, enable the **Smart Intrusion Prevention** mode in [Analyzer Configuration](#).

Configure Cross Line Detection

1. Go to **Menu > VCA > VCA Config**.
2. Select a Camera
3. Select **Cross Line Detection** and click  to configure it.

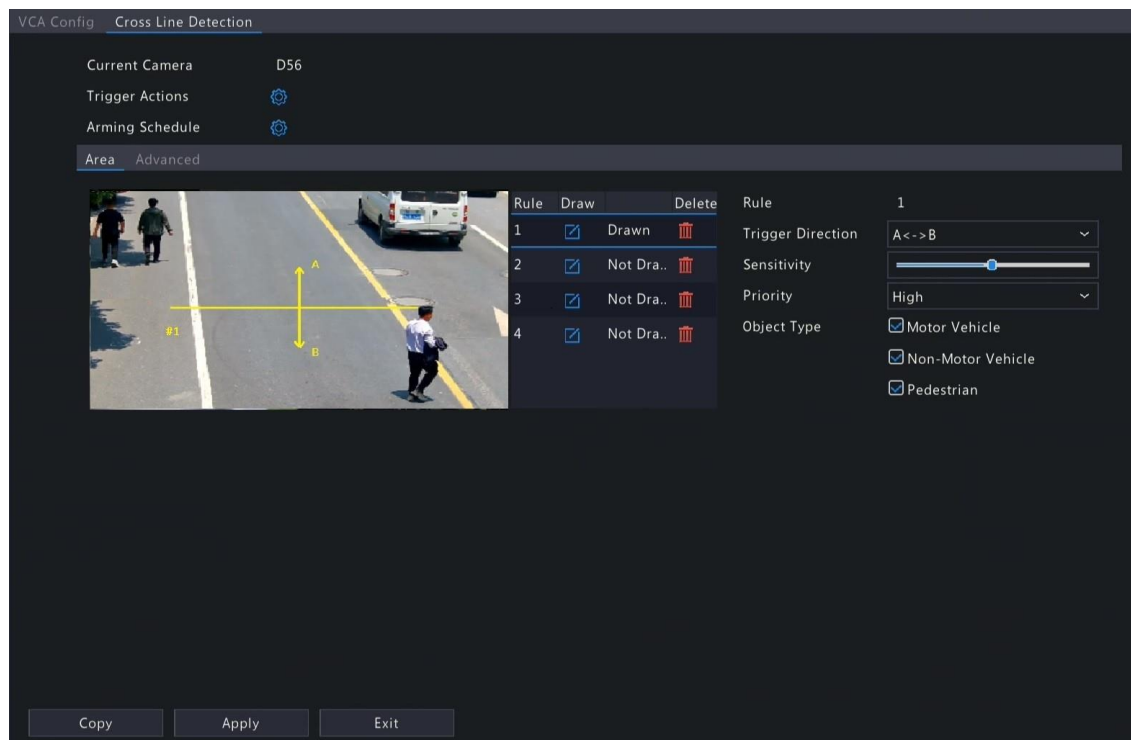


4. Set detection rules. The 4 detection rules shall be set separately. The following takes Rule 1 as an example.

Parameter	Description
Detection Line	Select Rule 1, click  , then click on the left image and drag to draw a detection line. The line defaults to A<->B direction. You can modify it as needed.
Trigger Direction	Select the direction from which the object crosses the line to trigger an alarm. • A->B: A cross line alarm occurs when an object crossing the line from A to B is detected. • B->A: A cross line alarm occurs when an object crossing the line from B to A is detected. • A<->B (default): A cross line alarm occurs when an object crossing the line from A to B or from B to A is detected.

Sensitivity	Set the sensitivity by dragging the slider. The higher the sensitivity, the more likely cross line behaviors will be detected, but the false alarm rate will increase.
Priority	Select the priority of the detection rule, including High , Medium , and Low . The DVR detects the rule that is triggered first by default. If multiple rules are triggered at the same time, the DVR detects the rule with higher priority.
Object Type	Select the object(s) to be detected, including Motor Vehicle , Non-Motor Vehicle , and Pedestrian .

- Under the **Advanced** tab, you can filter objects by size. For example, if you have selected **Motor Vehicle** as a detection object, after you set the **Max. Size** and **Min. Size** for it, motor vehicles larger than the max. size and smaller than the min. size will not be detected.

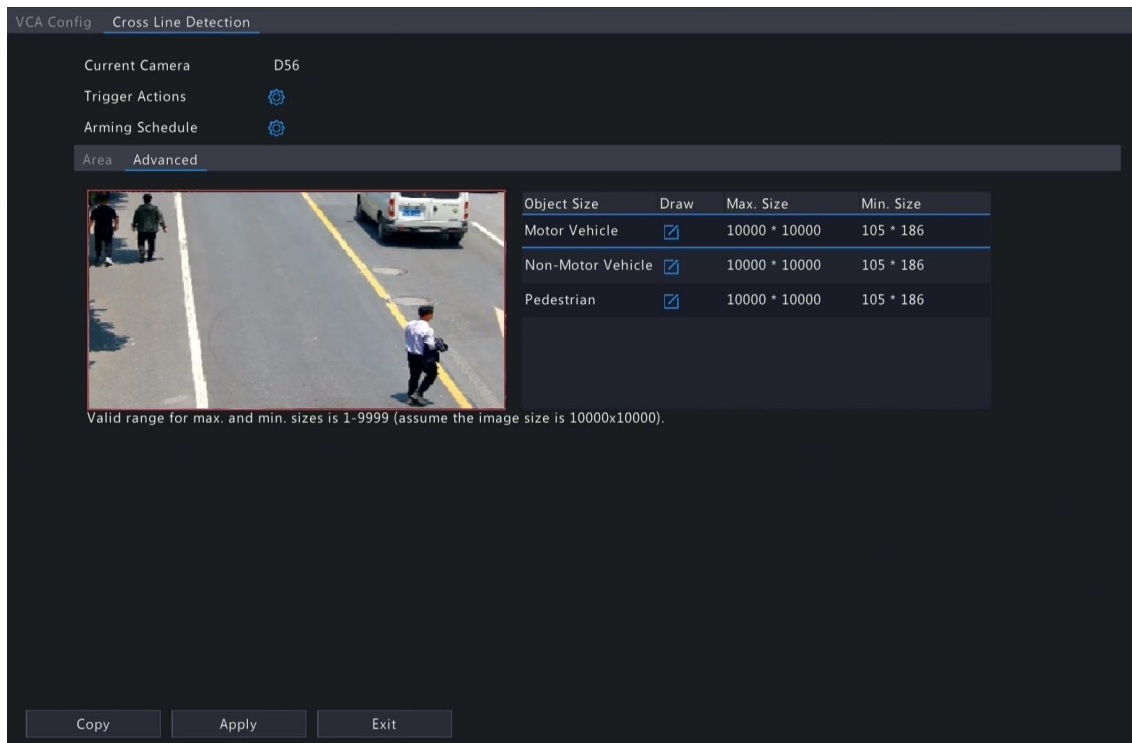

- Select an object type and click . A **Max. Size** box and a **Min. Size** box appear in the left preview window.
- Modify the max./min. size by adjusting the size of the box as follows: Point to a handle of the box and drag to resize it.

Note:

- The **Max. Size** and **Min. Size** settings take effect after you select the object as a detection object.
- The width and height of the maximum size must be greater than that of the minimum size.

- Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
- (Optional) To apply the same settings to other cameras, click **Copy**, select the desired setting(s) and camera(s), and then click **OK**.
- Click **Apply**.

View Real-time Snapshots

- Right-click on the live view page and select **Preview Mode > Smart**, then the real-time snapshots are shown on the right.
- Click a snapshot to view detailed information. See [Perimeter](#) for details.

5.1.5 Intrusion Detection

Intrusion detection detects objects entering a user-specified area and staying for a preset time. The DVR takes snapshots and reports an alarm when the detection rule is triggered.




Note:

- Before you use camera side analysis, make sure an intelligent server with **Platform Communication Type** set to **LAPI** is enabled on the camera.
- The functions and parameters supported by camera side analysis and DVR side analysis are different.
- To perform this function on the camera side, enable **Intelligent Mark** under **Menu > System > Basic**.
- To configure intrusion detection, enable the **Smart Intrusion Prevention** mode in [Analyzer Configuration](#).

Configure Intrusion Detection

1. Go to **Menu > VCA > VCA Config**.
2. Select a camera.
3. Select Intrusion Detection and click to configure it.

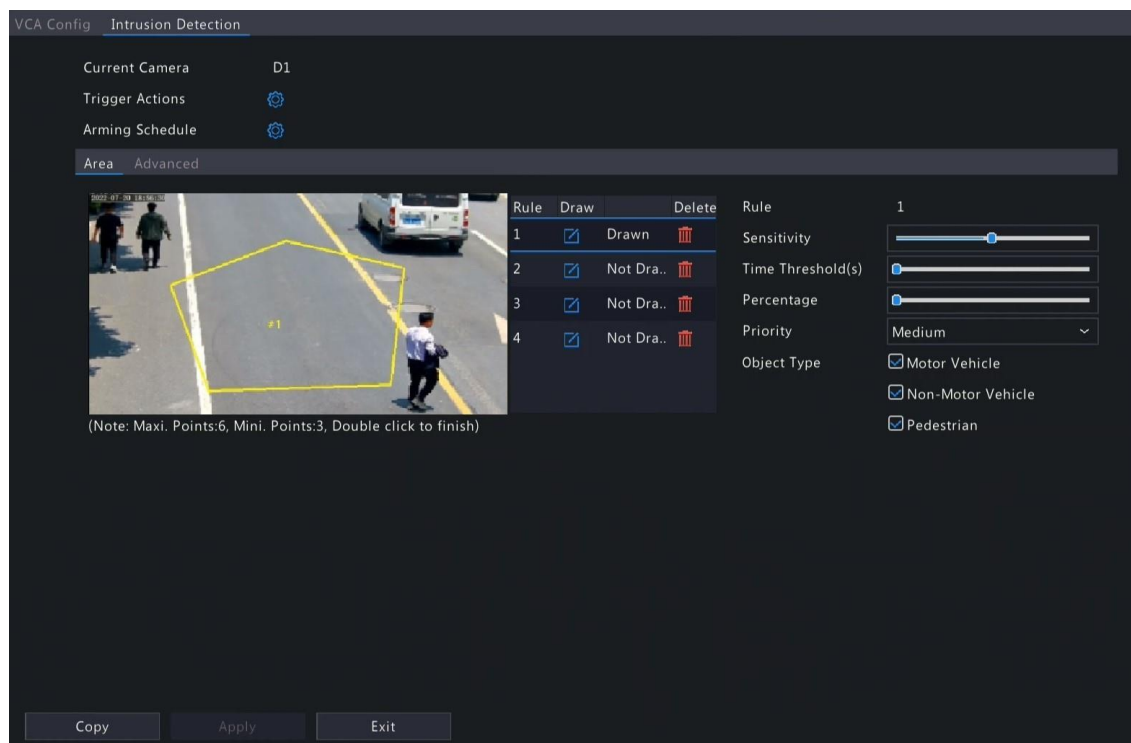


4. Set detection rules. The 4 detection rules shall be set separately. The following takes Rule 1 as an example.

Parameter	Description
Detection Area	Select Rule 1, click , and then draw a detection area in the left preview window. Click on the image and drag to draw a line. Repeat the action to draw more lines to form an enclosed shape as needed. Up to 6 lines are allowed. Note: For a rule in Drawn state, you can click to redraw a detection area. To delete a detection area, click .
Sensitivity	Set the sensitivity by dragging the slider. The higher the sensitivity, the more likely intrusion behaviors will be detected, but the false alarm rate will increase.

Time Threshold(s)	Set the time threshold by dragging the slider. If an object stays in the detection area for the set time, an intrusion alarm will be triggered.
Percentage	Set the percentage by dragging the slider. If the proportion of the object size to the detection area size reaches the set value, an intrusion alarm will be triggered.
Priority	Select the priority of the detection rule, including High , Medium , and Low . The DVR detects the rule that is triggered first by default. If multiple rules are triggered at the same time, the DVR detects the rule with higher priority.
Object Type	Select the object(s) to be detected, including Motor Vehicle , Non-Motor Vehicle , and Pedestrian .

- Under the **Advanced** tab, you can filter objects by size. For example, if you have selected **Motor Vehicle** as a detection object, after you set the **Max. Size** and **Min. Size** for it, motor vehicles larger than the max. size and smaller than the min. size will not be detected.

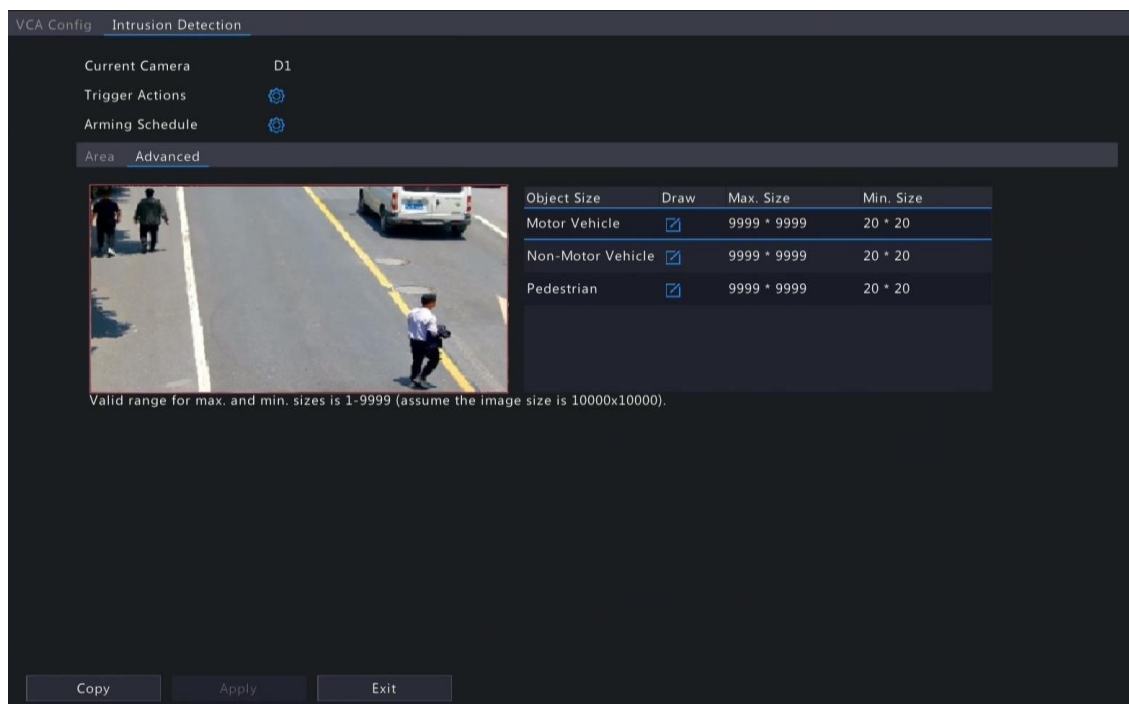

- Select an object type and click . A **Max. Size** box and a **Min. Size** box appear in the left preview window.
- Modify the max./min. size by adjusting the size of the box as follows: Point to a handle of the box and drag to resize it.

Note:

- The **Max. Size** and **Min. Size** settings take effect after you select the object as a detection object.
- The width and height of the maximum size must be greater than that of the minimum size.

- Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
- (Optional) To apply the same settings to other cameras, click **Copy**, select the desired setting(s) and camera(s), and then click **OK**.
- Click **Apply**.

View Real-time Snapshots

- Right-click on the live view page and select **Preview Mode > Smart**, then the real-time snapshots are shown on the right.
- Click a snapshot to view detailed information. See [Perimeter](#) for details.

5.1.6 Enter Area Detection


Enter area detection detects objects entering a user-specified area. The DVR takes snapshots and reports an alarm when the detection rule is triggered.

Note:

- Before you use camera side analysis, make sure an intelligent server with **Platform Communication Typeset to LAPI** is enabled on the camera.
- The functions and parameters supported by camera side analysis and NVR side analysis are different.
- To perform this function on the camera side, enable **Intelligent Mark** under **Menu > System > Basic**.
- To configure enter area detection, enable the **Smart Intrusion Prevention** mode in [Analyzer Configuration](#).

Configure Enter Area Detection

1. Go to **Menu > VCA > VCA Config**.
2. Select a camera.
3. Select **Enter Area** and click  to configure it.

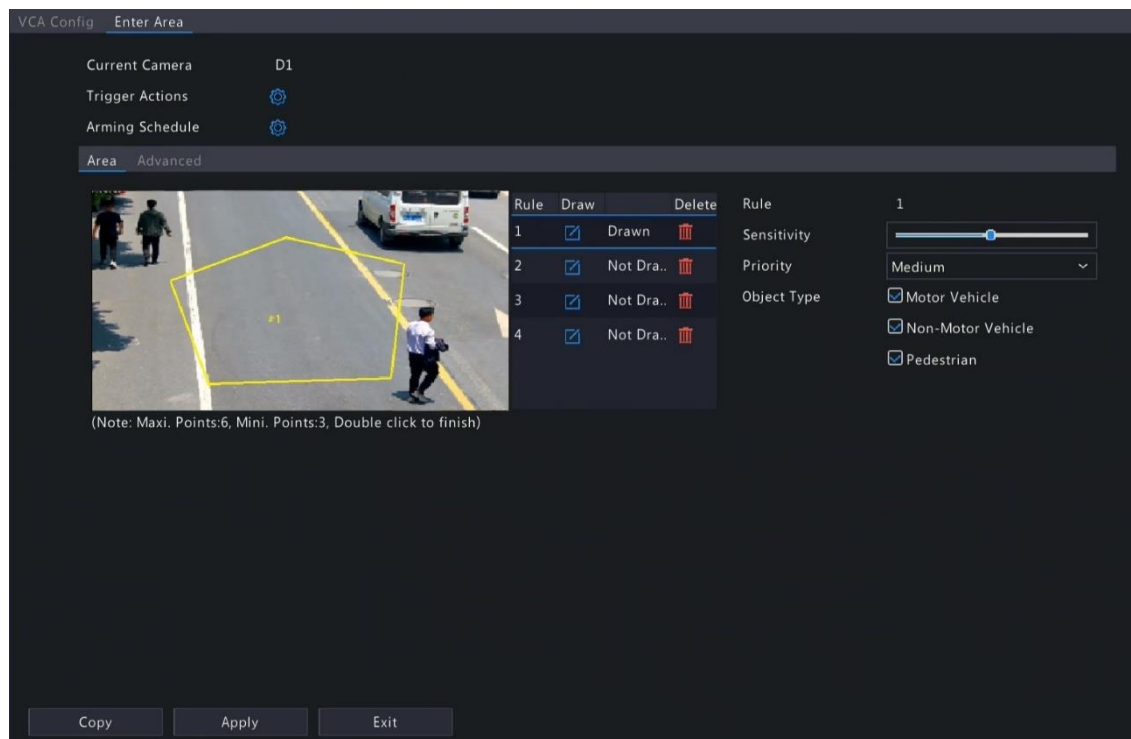


4. Set detection rules. The 4 detection rules shall be set separately. The following takes Rule 1 as an example.

Parameter	Description
Detection Area	Select Rule 1, click , and then draw a detection area in the left preview window. Click on the image and drag to draw a line. Repeat the action to draw more lines to form an enclosed shape as needed. Up to 6 lines are allowed.  Note: For a rule in Drawn state, you can click  to redraw a detection area. To delete a detection area, click .

Sensitivity	Set the sensitivity by dragging the slider. The higher the sensitivity, the more likely entry behaviors will be detected, but the false alarm rate will increase.
Priority	Select the priority of the detection rule, including High , Medium , and Low . The DVR detects the rule that is triggered first by default. If multiple rules are triggered at the same time, the DVR detects the rule with higher priority.
Object Type	Select the object(s) to be detected, including Motor Vehicle , Non-Motor Vehicle , and Pedestrian .

4. Under the **Advanced** tab, you can filter objects by size. For example, if you have selected **Motor Vehicle** as a detection object, after you set the **Max. Size** and **Min. Size** for it, motor vehicles larger than the max. size and smaller than the min. size will not be detected.

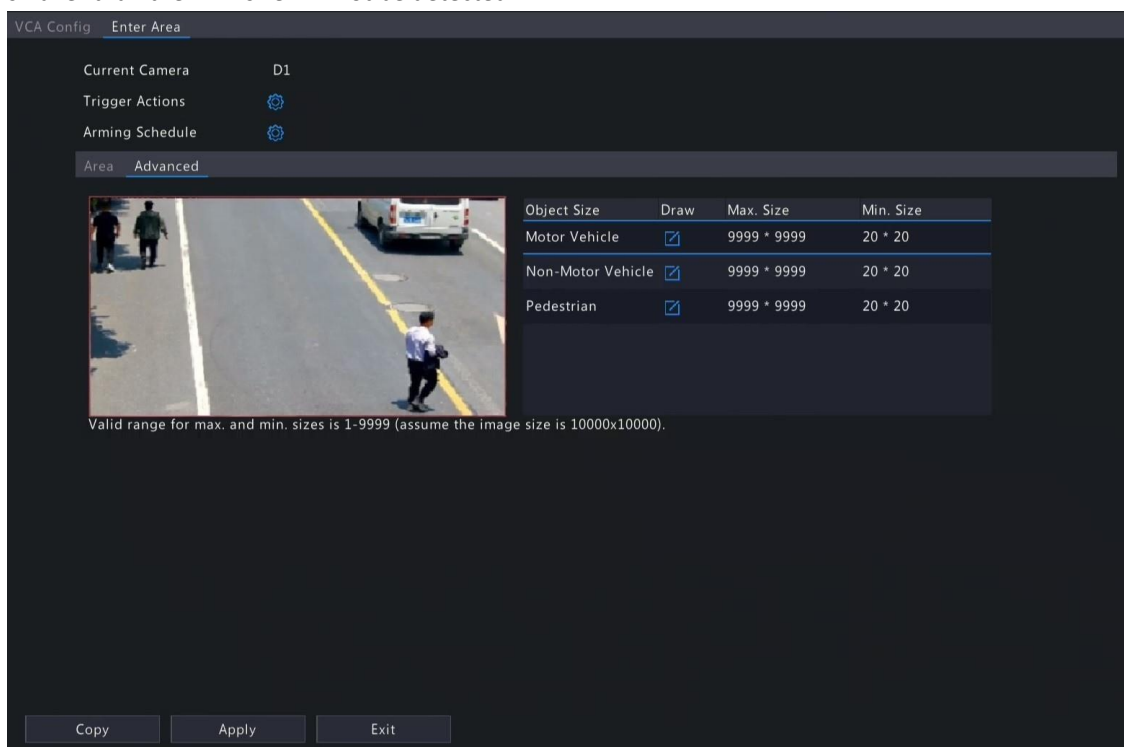

- (1) Select an object type and click . A **Max. Size** box and a **Min. Size** box appear in the left preview window.
- (2) Modify the max./min. size by adjusting the size of the box as follows: Point to a handle of the box and drag to resize it.

 Note:

- The **Max. Size** and **Min. Size** settings take effect after you select the object as a detection object.
- The width and height of the maximum size must be greater than that of the minimum size.

5. Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
6. (Optional) To apply the same settings to other cameras, click **Copy**, select the desired setting(s) and camera(s), and then click **OK**.
7. Click **Apply**.

View Real-time Snapshots

1. Right-click on the live view page and select **Preview Mode > Smart**, then the real-time snapshots are shown on the right.
2. Click a snapshot to view detailed information. See [Perimeter](#) for details.

5.1.7 Leave Area Detection

Leave area detection detects objects leaving a user-specified area. The DVR takes snapshots and reports an alarm when the detection rule is triggered.




Note:

- Before you use camera side analysis, make sure an intelligent server with **Platform Communication Type** set to **LAPI** is enabled on the camera.
- The functions and parameters supported by camera side analysis and NVR side analysis are different.
- To perform this function on the camera side, enable **Intelligent Mark** under **Menu > System > Basic**.
- To configure leave area detection, enable the **Smart Intrusion Prevention** mode in [Analyzer Configuration](#).

Configure Leave Area Detection

1. Go to **Menu > VCA > VCA Config**.
2. Select a camera.
3. Select **Leave Area** and click to configure.

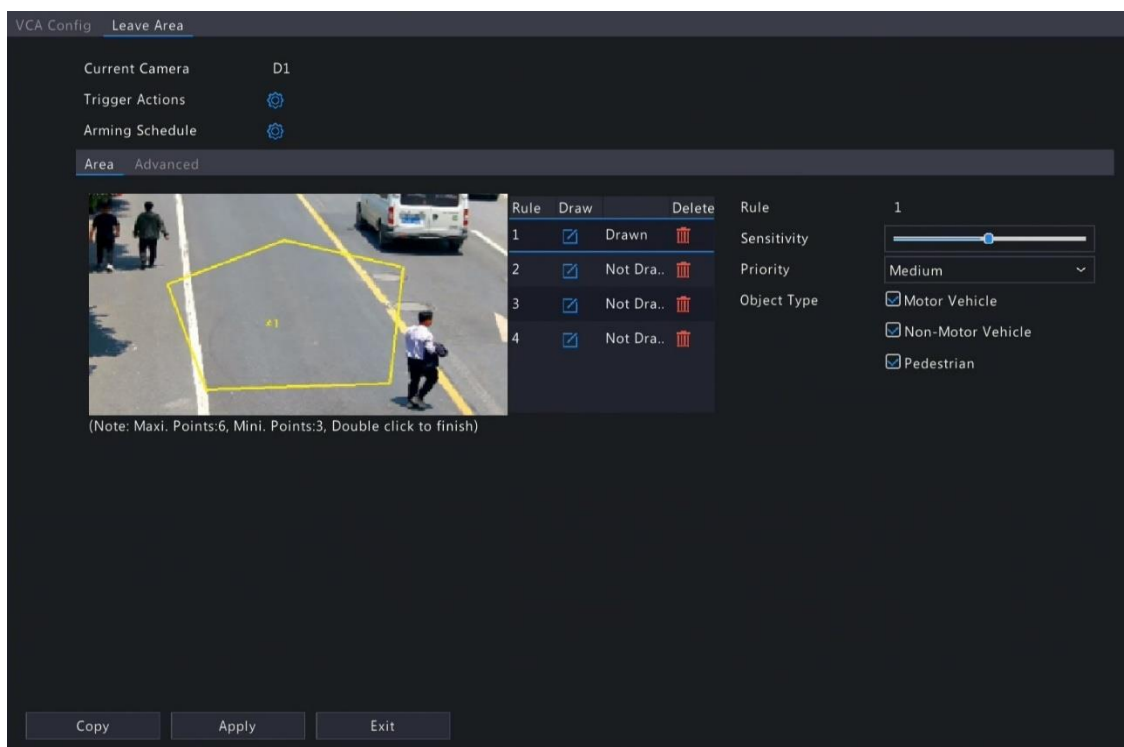


4. Set detection rules. The 4 detection rules shall be set separately. The following takes Rule 1 as an example.

Parameter	Description
Detection Area	Select Rule 1, click and then draw a detection area in the left preview window. Click on the image and drag to draw a line. Repeat the action to draw more lines to form an enclosed shape as needed. Up to 6 lines are allowed. Note: For a rule in Drawn state, you can click to redraw a detection area. To delete a detection area, click .
Sensitivity	Set the sensitivity by dragging the slider. The higher the sensitivity, the more likely leaving behaviors will be detected, but the false alarm rate will increase.
Priority	Select the priority of the detection rule, including High , Medium , and Low .

Parameter	Description
	The DVR detects the rule that is triggered first by default. If multiple rules are triggered at the same time, the DVR detects the rule with higher priority.
Object Type	Select the object(s) to be detected, including Motor Vehicle , Non-Motor Vehicle , and Pedestrian .

- Under the **Advanced** tab, you can filter objects by size. For example, if you have selected **Motor Vehicle** as a detection object, after you set the **Max. Size** and **Min. Size** for it, motor vehicles larger than the max. size and smaller than the min. size will not be detected.

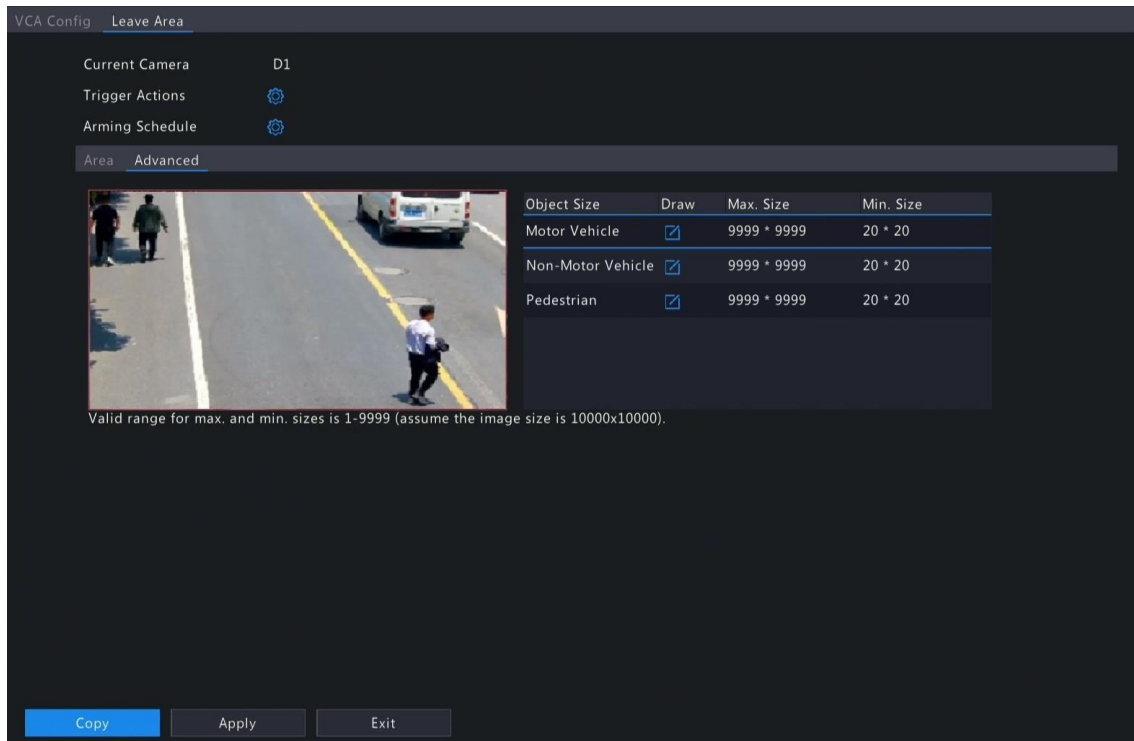

- Select an object type and click . A **Max. Size** box and a **Min. Size** box appear in the left preview window.
- Modify the max./min. size by adjusting the size of the box as follows: Point to a handle of the box and drag to resize it.



Note:

- The **Max. Size** and **Min. Size** settings take effect after you select the object as a detection object.
- The width and height of the maximum size must be greater than that of the minimum size.

- Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
- (Optional) To apply the same settings to other cameras, click **Copy**, select the desired setting(s) and camera(s), and then click **OK**.
- Click **Apply**.


View Real-time Snapshots

- Right-click on the live view page and select **Preview Mode > Smart**, then the real-time snapshots are shown on the right.
- Click a snapshot to view detailed information. See [Perimeter](#) for details.

5.1.8 Defocus Detection

Defocus detection detects lens defocus. The DVR takes snapshots and reports an alarm when the detection rule is triggered.

1. Go to **Menu > VCA > VCA Config**.
2. Select a camera.
3. Select **Defocus Detection** and click  to configure.

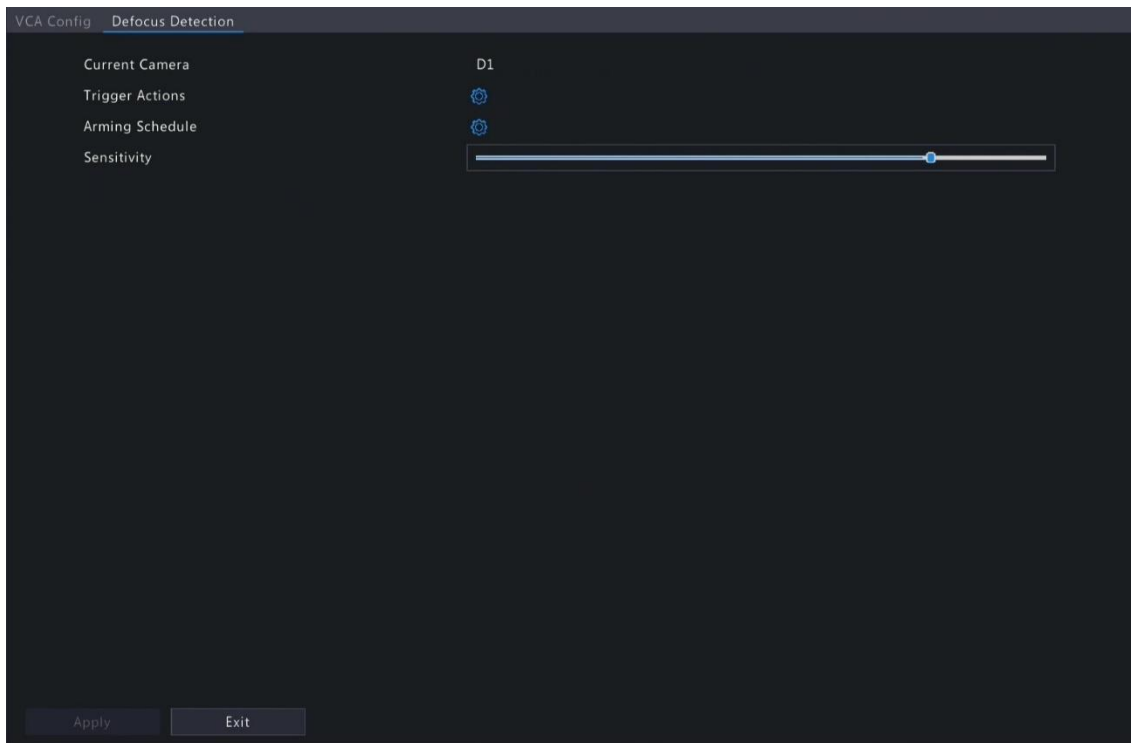


4. Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
5. Set the sensitivity by dragging the slider. The higher the sensitivity, the more likely defocus will be detected, but the false alarm rate will increase.
6. Click **Apply**.

5.1.9 Scene Change Detection

Scene change detection detects the change of surveillance scene caused by external factors such as intentional camera movement. The DVR takes snapshots and reports an alarm when the detection rule is triggered.

1. Go to **Menu > VCA > VCA Config**.
2. Select a camera.
3. Select **Scene Change Detection** and click  to configure it.

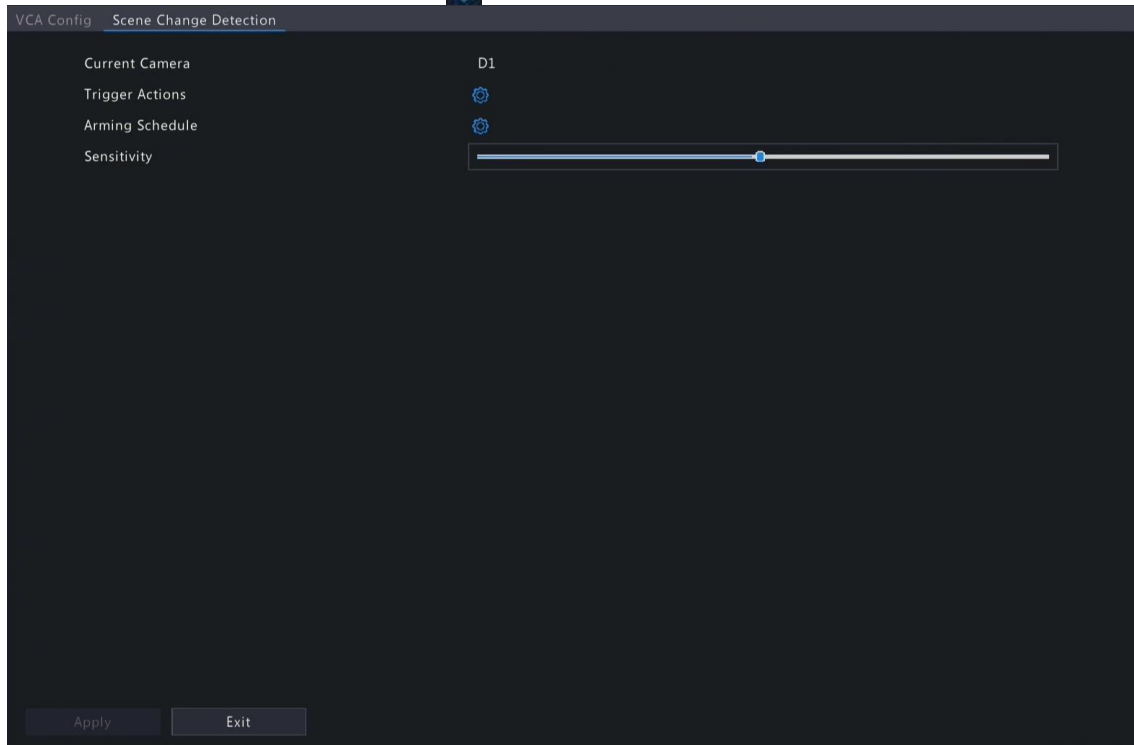


4. Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
5. Set the sensitivity by dragging the slider. The higher the sensitivity, the more likely scene change behaviors will be detected, but the false alarm rate will increase.
6. Click **Apply**.

5.1.10 Object Removed Detection

Object removed detection detects objects removed from a user-specified area for a preset time. The DVR takes snapshots and reports an alarm when the detection rule is triggered.

1. Go to **Menu > VCA > VCA Config**.
2. Select a camera.
3. Select **Object Removed** and click  to configure it.

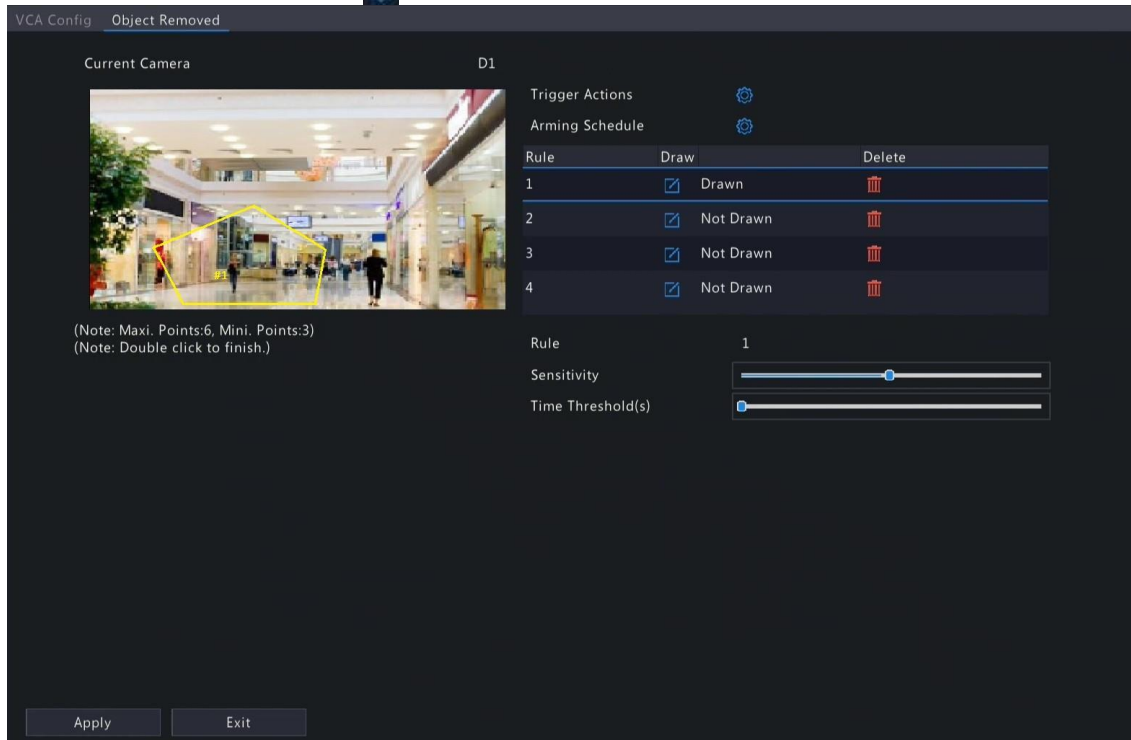

4. Set detection rules. The 4 detection rules shall be set separately. The following takes Rule 1 as an example.


Parameter	Description
Detection Area	Select Rule 1, click , and then draw a detection area in the left preview window. Click on the image and drag to draw a line. Repeat the action to draw more lines to form an enclosed shape as needed. Up to 6 lines are allowed.  Note: For a rule in Drawn state, you can click  to redraw a detection area. To delete a detection area, click .
Sensitivity	Set the sensitivity by dragging the slider. The higher the sensitivity, the more likely object removal behaviors will be detected, but the false alarm rate will increase.
Time Threshold(s)	Set the time threshold by dragging the slider. If an object is removed from the detection area for the set time, an alarm will be triggered.

5. Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
6. Click **Apply**.

5.1.11 Object Left Behind Detection

Object left behind detection detects objects left behind in a user-specified area for a preset time. The DVR takes snapshots and reports an alarm when the detection rule is triggered.

1. Go to **Menu > VCA > VCA Config**.
2. Select a camera.
3. Select **Object Left Behind** and click  to configure it.

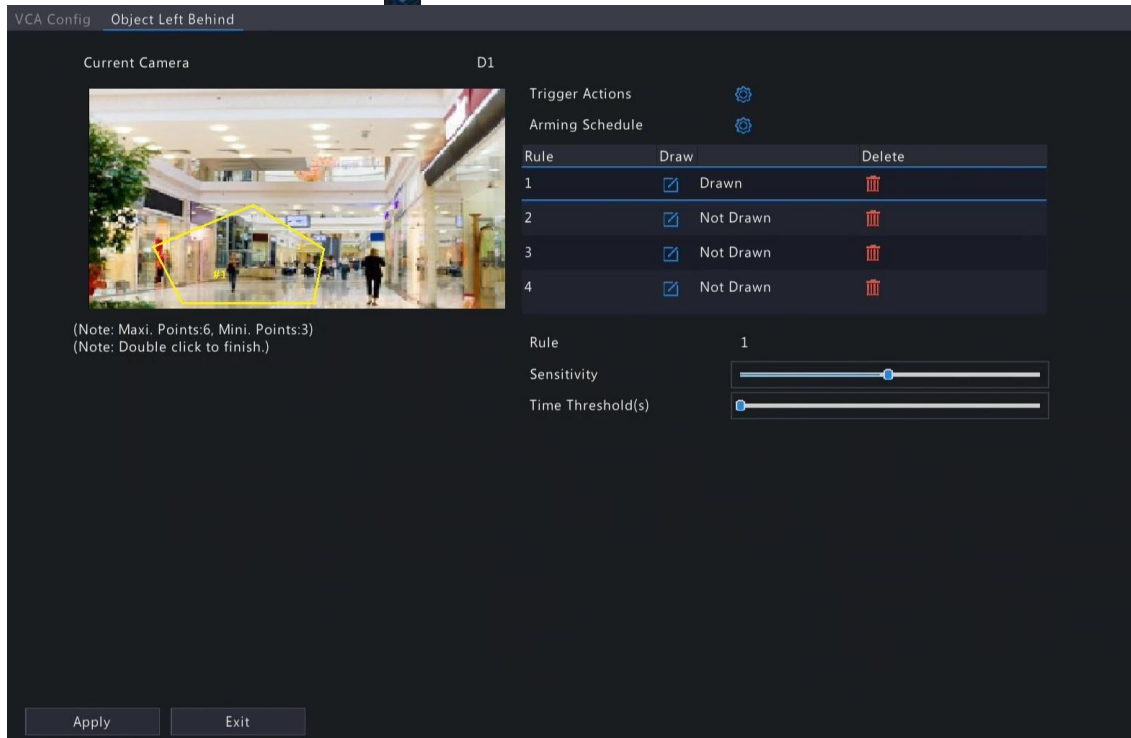

4. Set detection rules. The 4 detection rules shall be set separately. The following takes Rule 1 as an example.


Parameter	Description
Detection Area	Select Rule 1, click  , and then draw a detection area in the left preview window. Click on the image and drag to draw a line. Repeat the action to draw more lines to form an enclosed shape as needed. Up to 6 lines are allowed.  Note: For a rule in Drawn state, you can click  to redraw a detection area. To delete a detection area, click  .
Sensitivity	Set the sensitivity by dragging the slider. The higher the sensitivity, the more likely object left behind behaviors will be detected, but the false alarm rate will increase.
Time Threshold(s)	Set the time threshold by dragging the slider. If an object is left behind in the detection area for the set time, an alarm will be triggered.

5. Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
6. Click **Apply**.


5.1.12 Auto Tracking

Auto tracking detects moving objects in the live video and tracks the first object detected.

1. Go to **Menu > VCA > VCA Config**.
2. Select a camera.
3. Select **Auto Tracking** and click  to configure it.

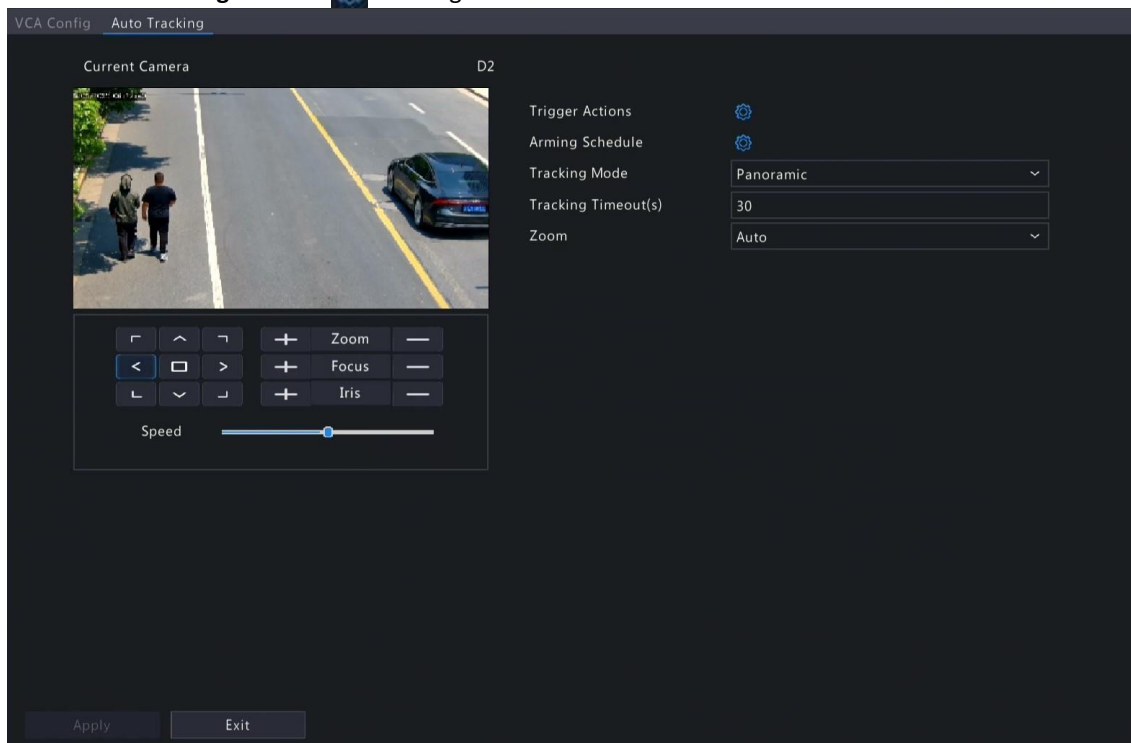

4. Set the tracking parameters.

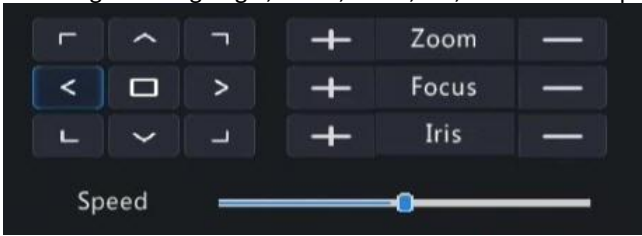Parameter	Description
Tracking Area	In the PTZ operation area, use the PTZ control buttons to adjust the tracking area, including shooting angle, zoom, focus, iris, and rotation speed. 
Tracking Mode	Panoramic: Continuously tracks objects that appear in the tracking area until they disappear from the tracking area.
Tracking Timeout(s)	Set the maximum tracking time. The device stops tracking when the object disappears, or the set time is up. Range: 1 to 300. Default: 30.
Zoom	Select the tracking zoom ratio: Auto or Current Zoom . The default is Auto . • Auto: Automatically adjusts the zoom ratio according to the tracking distance, focusing more on the object behavior. • Current Zoom: Keeps the zoom ratio when the object is tracked, focusing more on the whole monitoring scene.


5. Set the alarm-triggered actions and arming schedule. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
6. Click **Apply**.

5.1.13 People Flow Counting

People flow counting counts people passing a specified tripwire in a user-defined area.

Configure People Flow Counting

1. Go to **Menu > VCA > VCA Config**.
2. Select a camera.
3. Select **People Flow Counting** and click  to configure.

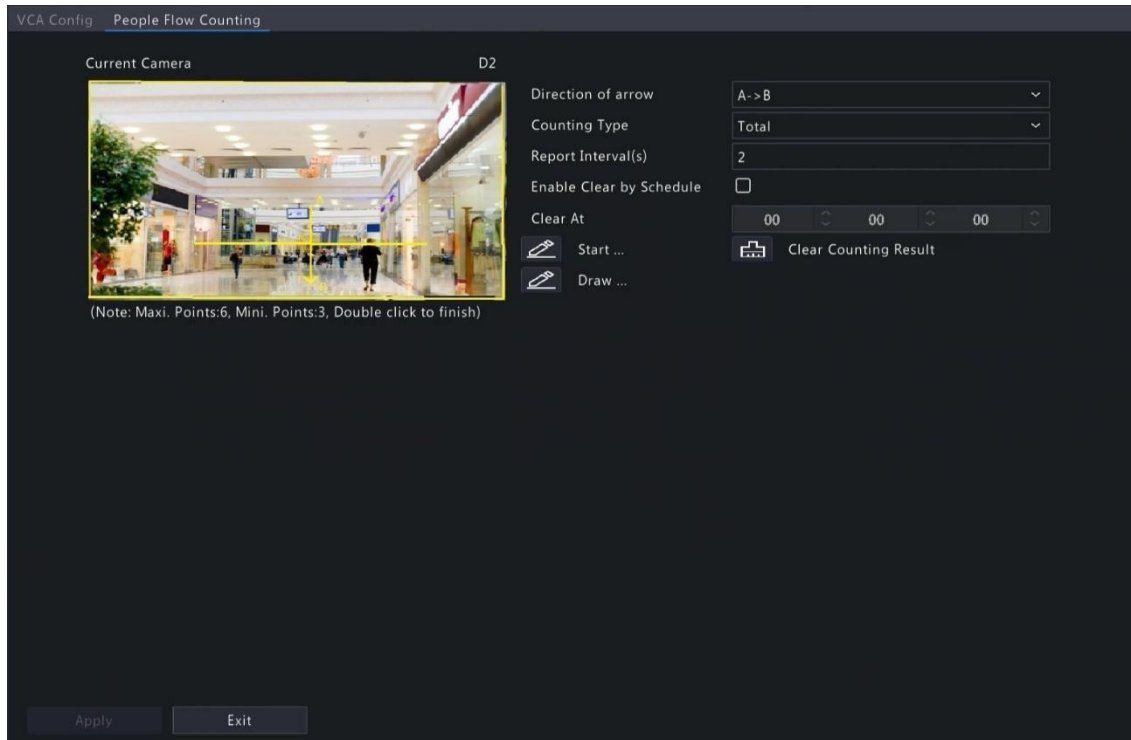

4. Set the people flow counting rule.

Parameter	Description
Draw Area	Click  and draw a detection area in the left preview window. Click on the image and drag to draw a line. Repeat the action to draw more lines to form an enclosed shape as needed. Up to 6 lines are allowed.
Draw Tripwire	Click  and draw a tripwire in the left preview window. Only 1 tripwire is allowed.
Direction of arrow	Set the entry direction. • A->B: A to B is entry, B to A is exit. • B->A: B to A is entry, A to B is exit.
Counting Type	Select the counting type: Total , People Entered , or People Exited . Total is the default counting type. • Total: Displays the number of people entering and leaving the detection area. • People Entered: Displays the number of people entering the detection area. An entry is counted as a person crosses the tripwire in the direction of the arrow and passes through the detection area. • People Exited: Displays the number of people leaving the detection area. An exit is counted as an object crosses the tripwire in the opposite direction of the arrow and passes through the detection area.

Parameter	Description
	 Note: - Before use, you need to enable people counting OSD under Menu > Camera > OSD. - People that loiter in the detection area, cross the tripwire only, or cross the detection area only are not counted.
Report Interval(s)	Set the time interval for reporting people flow statistics. Default: 60. Range: 1 to 60. The DVR reports people flow statistics to the uplink platform at set intervals. The uplink platform must subscribe to the function to receive the statistics.
Enable Clear by Schedule	Select the Enable Clear by Schedule check box and set the time to clear people counting statistics.
Clear At	The clearing time defaults to 00:00:00. You can modify it as needed. The DVR will clear people counting statistics on the OSD at the set time everyday. This operation does not affect statistics and data reporting.
Clear Counting Result	Click  to clear people counting statistics displayed on the live video immediately. This operation only affects the people counting OSD and does not affect statistics and data reporting.

- To be alerted when the number of people in the detection area exceeds a certain number, you can enable and configure **People Present Alarm** under **Menu > Alarm > People Present Alarm**. See [People Present Alarm](#) for details.
- Click **Apply**.

View Real-time Statistics

Right-click on the live view page and select **Preview Mode > Smart**, then the real-time people statistics are shown on the right. See [People Flow Counting](#) for details.

5.2 Analyzer Configuration

View the analyzer usage and change the analysis mode.

Analyzer is a smart chip used to process smart intrusion protection and ultra motion detection. The analyzer capacity may vary by DVR model, which requires you to allocate channels appropriately.

1. Go to **Menu > VCA > Analyzer Config**.
2. Select an analysis mode. **Ultra Motion Detection** is the default analysis mode.



Note:

Changing the analysis mode will disable the channel configuration in the original mode. Before you change the analysis mode, disable the functions in the current analysis mode for all channels. For example, if ultra motion detection is enabled for D1 and D2, you need to disable intrusion detection for D1 and D2 first before changing the analysis mode to smart intrusion prevention.

3. View the analyzer's capacity usage. The analyzer's capacity is divided into the number of video stream analysis channels and the number of image stream analysis channels. Video stream analysis is NVR-side analysis, and image stream analysis is camera-side analysis.

5.3 VCA Search

Search for face snapshots, VCA event snapshots and people counting statistics.

5.3.1 Face Snapshot Search

Search for face snapshots.

Search Face Snapshots

1. Go to **Menu > VCA > VCA Search > Face Snapshot Search**.

Face Snapshot Search

Select Camera

All

Glasses

All

Start Time

2024-02-04 00:00:00

End Time

2024-02-04 23:59:59


Search

Exit

2. Set search conditions.

Parameter	Description
Select Camera	Select the camera(s) to search.
Glasses	Select the glasses status: All , No Glasses , or With Glasses .
Start/End Time	Specify the time period to search for face snapshots.  Note: A search range smaller than five months is recommended, because earlier snapshots and recordings may have been overwritten due to full storage.

3. Click **Search**. The search results are shown in tile mode by default. You may click  to switch to list mode.

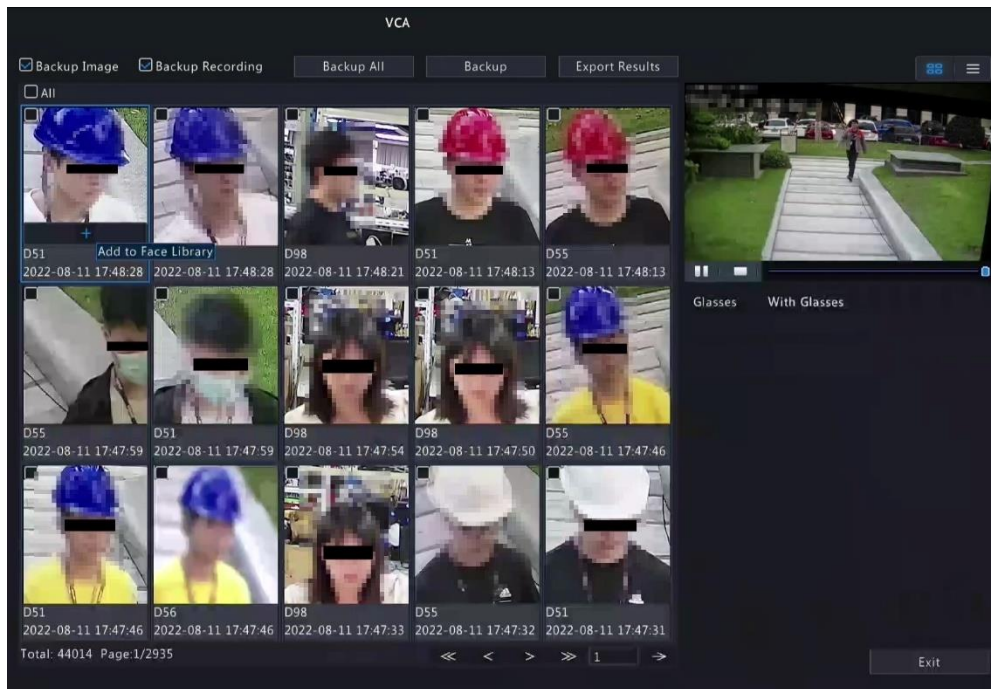

Click any image to view the 20s video (10s before and 10s after the snapshot time) and detailed information about it even if the object lowers his/her head or turns his/her head away, or when the head is occluded.


Other Operations

Operation	Description
Backup/Backup All	1. Enable Backup Image and/or Backup Recording as needed. By default, they are both enabled. • Backup Image: Back up the selected image(s) to an external device. • Backup Recording: Back up the 10s video of the selected image(s) to an external device. 2. Select Backup or Backup All. • Backup: Back up specified search results. Select the search result(s) you want to back up and click Backup. • Backup All: Back up all search results. Click Backup All.
Export Results	1. Enable Backup Image or/and Backup Recording as needed and click Export Results. 2. Select the export partition and click Export Results to export the search results to an external storage device.

5.3.2 Behavior Search

Search for images based on VCA behaviors including cross line detection, enter area detection, leave area detection, smart motion detection, etc. Behaviors supported for search may vary with DVR model.

1. Go to **Menu > VCA > VCA Search > Behavior Search**.

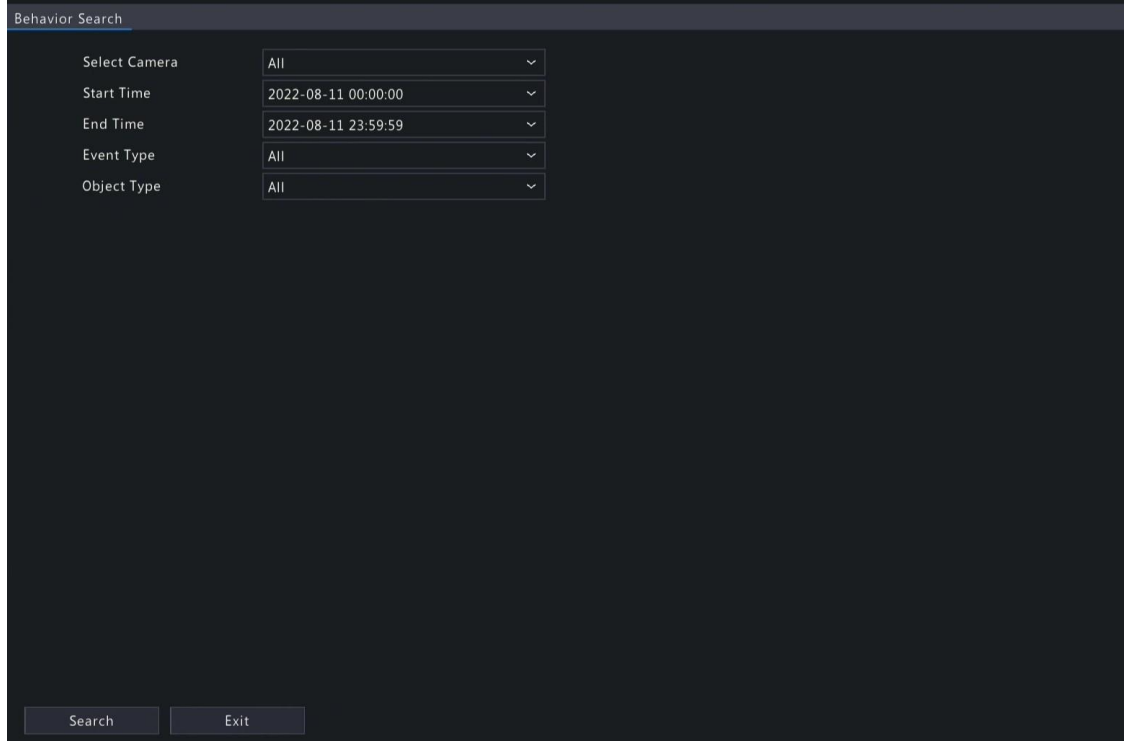


2. Set search conditions.

Parameter	Description
Select Camera	Select the camera(s) to search.
Start/End Time	Specify the time period to search.  Note: A search range smaller than five months is recommended, because earlier snapshots and recordings may have been overwritten due to full storage.
Event Type	Select the event type to search.
Object Type	Select the object type to search: All, Pedestrian, Non-Motor Vehicle, or Motor Vehicle.

3. Click **Search**. The search results are shown in tile mode by default. You may click  to switch to list mode.


- Tile :

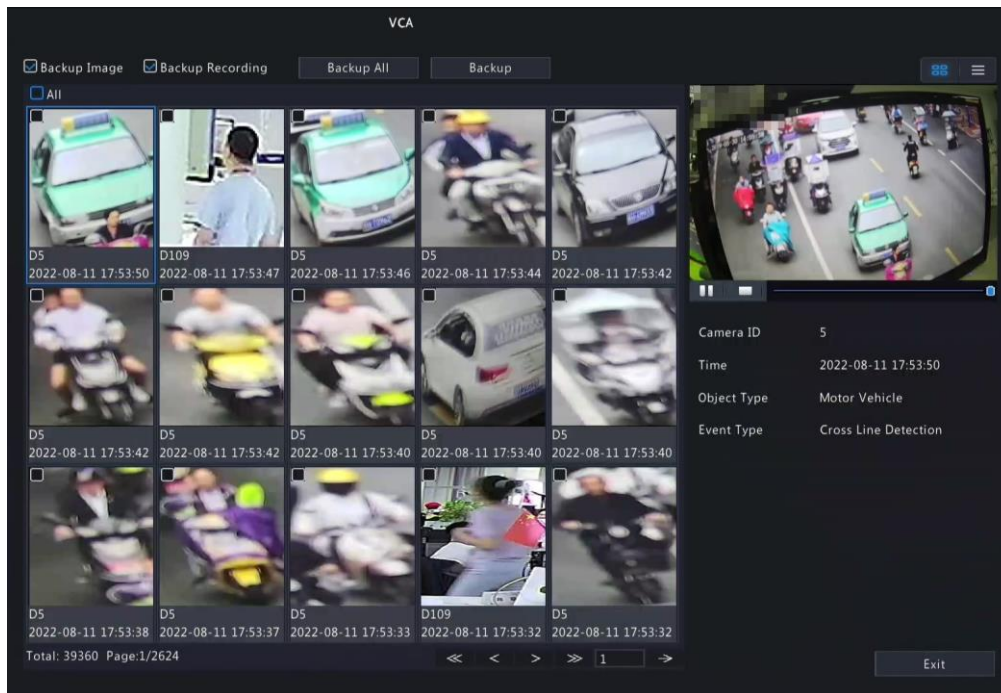

Note:

- By default, a 10s video (5s before and 5s after the first image) and the detailed information about the first image are displayed on the right.
- You can click any image to view the 10s video and detailed information about it.

- List :

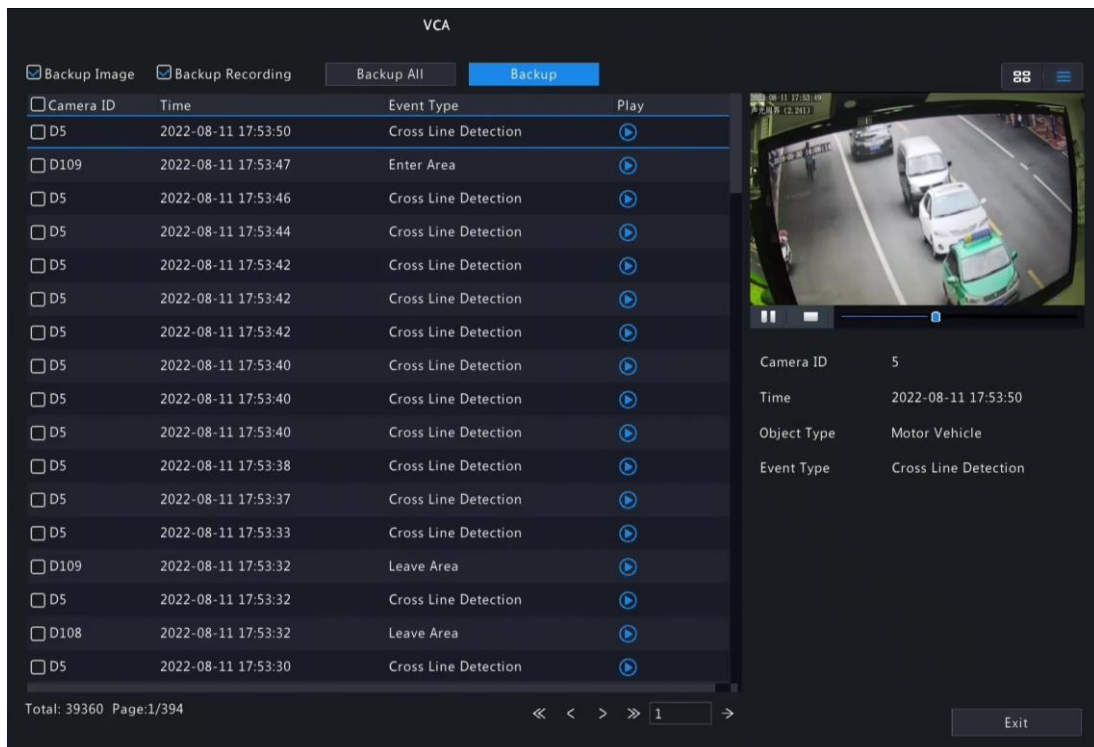

Note:

- By default, a 10s video (5s before and 5s after the first item) and the detailed information about the first item are displayed on the right.
- You can click any item and click  or  to view the 10s video and detailed information about it.

5. Back up search results. See [Back up search results](#) for details.

5.3.3 People Counting Report

Search for people counting data. You can view daily/weekly/monthly/yearly people counting reports-the number of people entering and/or leaving a certain area during a specified time period.

1. Go to **Menu > VCA > VCA Search > People Counting Report**.

People Counting Report

Select Camera: All

Counting Type: Total

Report Type: Daily

Statistical Time: 2022 08 11 17

Count Backup

Result: ☒ Chart ☐ Table

People

People Entered People Exited

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 Hour


Exit

2. Set search conditions.


Parameter	Description
Select Camera	Select the camera(s) to search.
Counting Type	Select the counting type to search: Total , People Entered , or People Exited .
Report Type	Select the report type to view: Hourly , Daily , Weekly , Monthly , or Yearly .
Statistical Time	Select the time to count.

3. Select to create the report as a chart or a table.

- Chart

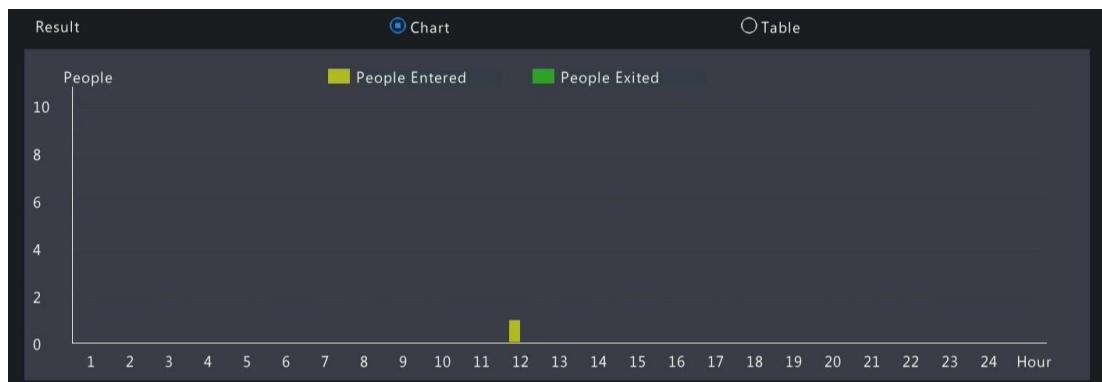

- Table

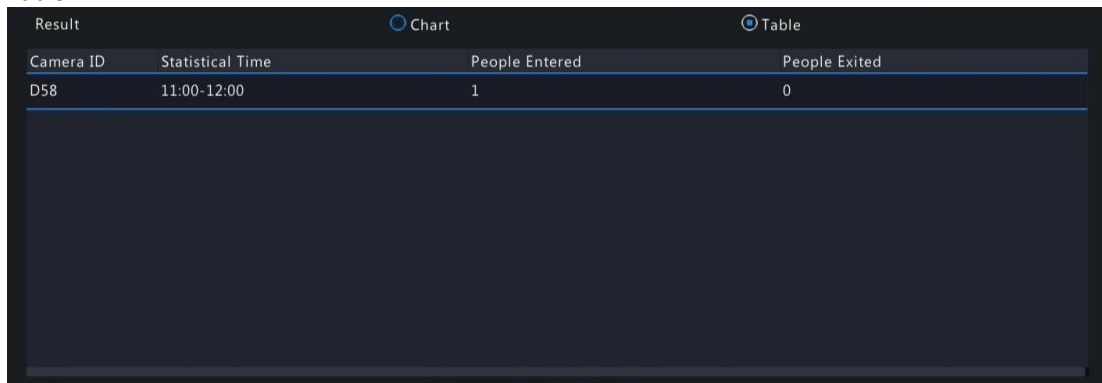

Result			
		Chart	Table
Camera ID	Statistical Time	People Entered	People Exited
D58	11:00-12:00	1	0


4. Click **Backup** to export the report to an external storage device as a .CSV file. The content of the file exported from a report in chart or table format is the same.

5.4 Smart Preview

View real-time snapshots and statistics of four major categories of VCA functions on the live view page, including vehicle, face, perimeter, and people counting.



Right-click on the live view page and select **Preview Mode > Smart**, then the real-time snapshots are displayed on the right.

Main Interface

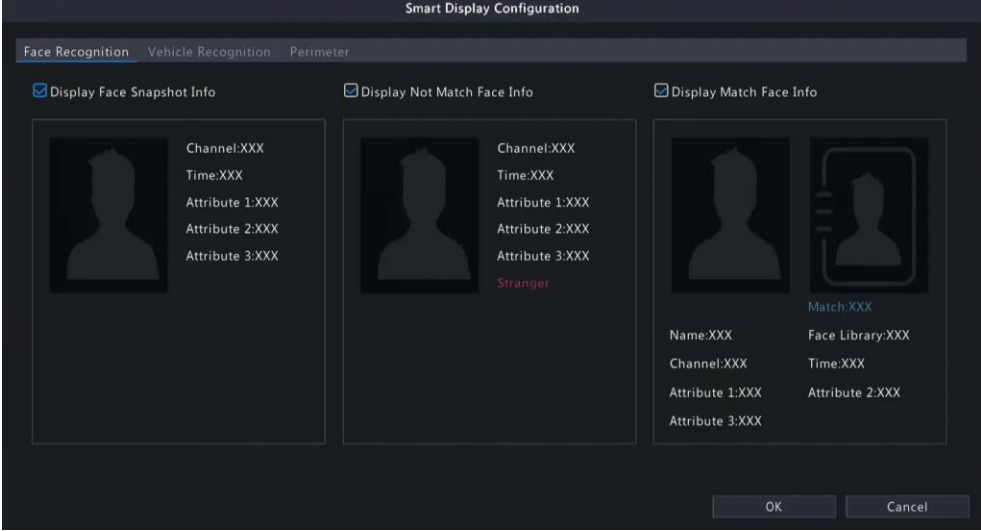Icon	Description
	Select the event type(s) for which you want to view real-time snapshots. 
	Set the display mode of snapshot information for face recognition, vehicle recognition and perimeter protection. 
	Open the Behavior Search page.
	Open the VCA Config page.
	Clear real-time snapshots displayed on the live view page. Search records and statistics are not affected.

Face

View face snapshots, face snapshot information, and face matching/mismatching information.

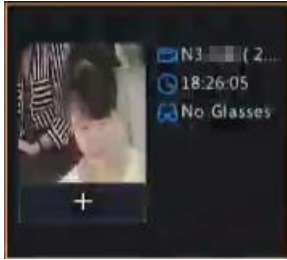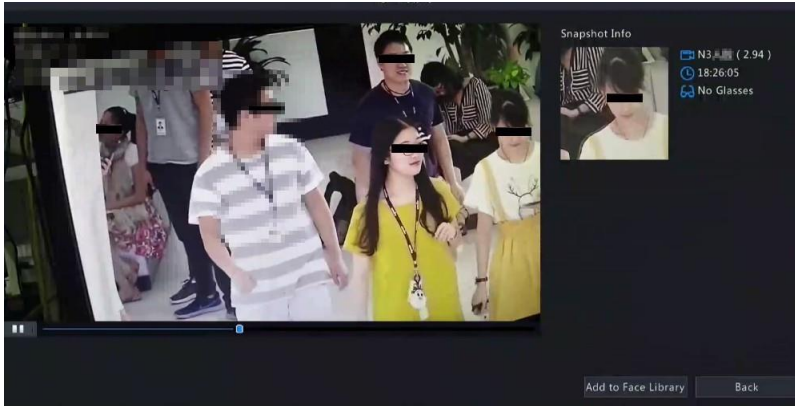Type	Description
Not Match Face Info	1. Select a mismatched face snapshot.  2. Click on the snapshot to view more details. 
Face Snapshot Info	1. Select a face snapshot. 2. Click on the snapshot to view more details.
Match Face Info	1. Select a matched face snapshot. The left image is the captured image, and the right image is the face image in the face list. 2. Click on the snapshot to view more details.


Note:

- In the **View Details** dialog box, a 10s video (5s before and 5s after the snapshot) is automatically played on the left, and the snapshot and its detailed information are displayed on the right.
- You can click **+** under a face snapshot or click **Add to Face Library** in the details page of a face snapshot to add the snapshot to the face list and click **Q** to search face images in face lists by this snapshot.

Perimeter


View real-time snapshots of perimeter protection functions including cross line detection, intrusion detection, enter area detection and leave area detection.

1. Select a snapshot.

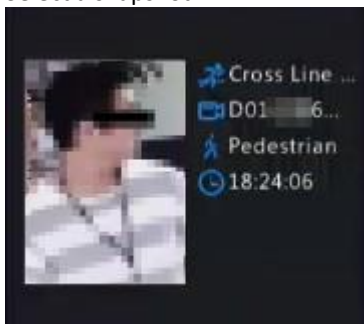

2. Click on the snapshot to view more details.

In the **View Details** dialog box, a 10s video (5s before and 5s after the snapshot) is automatically played on the left, and the snapshot and its detailed information including event type, camera name, time, and object type are displayed on the right.

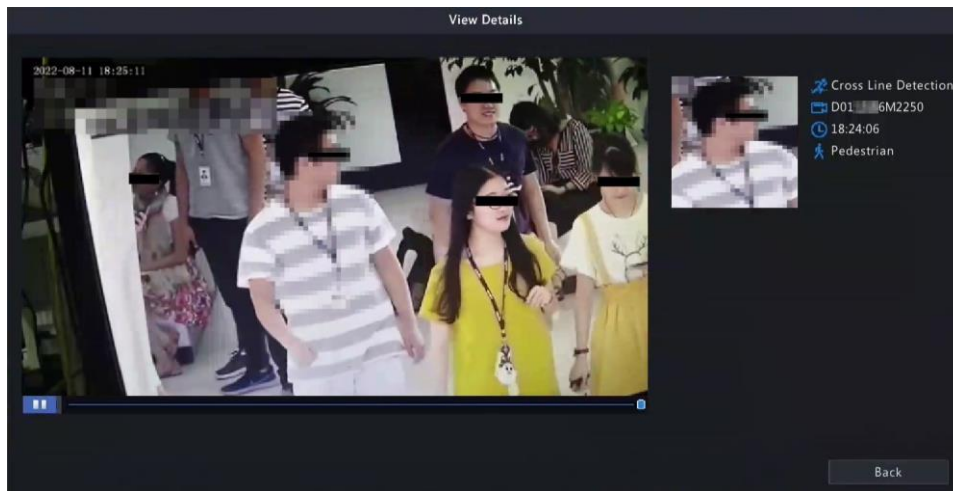

People Flow Counting

View real-time people flow statistics including the number of people entering/leaving/currently allowed/present.



- : The number of people present in the detection area does not exceed the set threshold.
 : The number of people present in the detection area exceeds the set threshold.
- : Clear the people counting statistics on the current page. This operation does not affect statistics and data reporting.

6 Network Configuration

Configure the network parameters of the DVR, such as IP address.

 **Note:** The default IP address of network interface 1 is 192.168.1.30, and that of network interface 2 is 192.168.2.30.


6.1 Basic Configuration

Configure the network, mobile app, DDNS, email, etc.

6.1.1 Network Configuration

Configure IP address and other network parameters of the DVR.

1. Go to **Menu > Network > Basic > Network**.

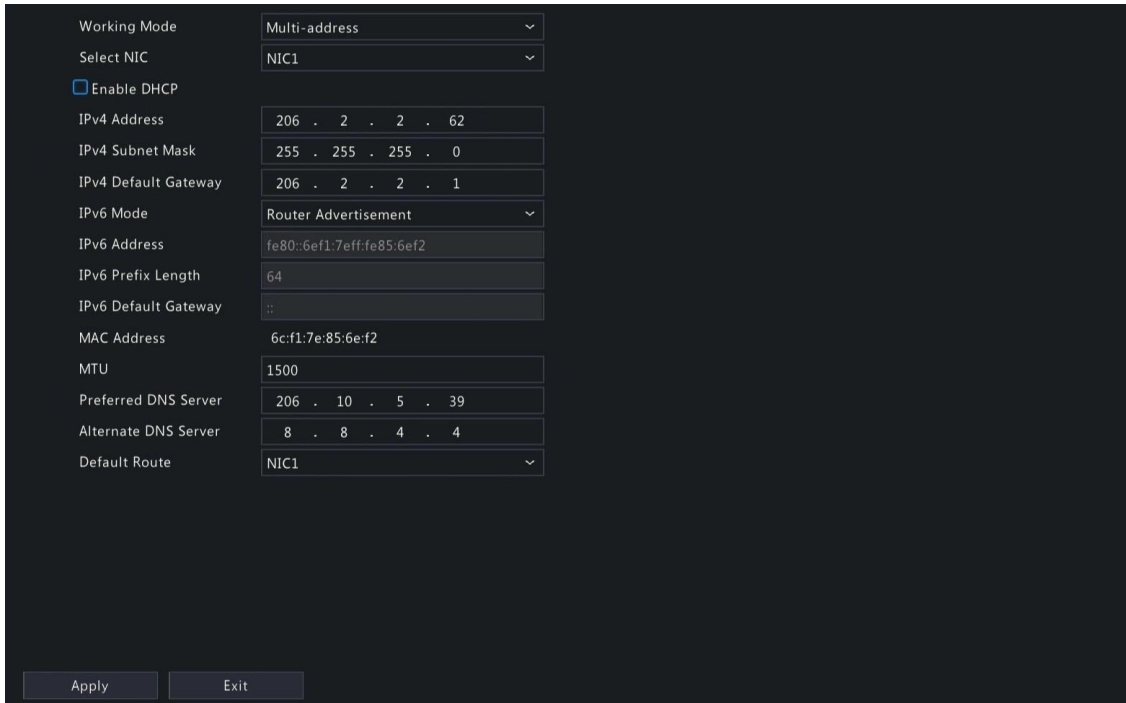

The screenshot shows a network configuration window with the following settings:

- Working Mode: Multi-address
- Select NIC: NIC1
- Enable DHCP: ☐
- IPv4 Address: 206 . 2 . 2 . 62
- IPv4 Subnet Mask: 255 . 255 . 255 . 0
- IPv4 Default Gateway: 206 . 2 . 2 . 1
- IPv6 Mode: Router Advertisement
- IPv6 Address: fe80::6ef1:7eff:fe85:6ef2
- IPv6 Prefix Length: 64
- IPv6 Default Gateway: ::
- MAC Address: 6c:f1:7e:85:6e:f2
- MTU: 1500
- Preferred DNS Server: 206 . 10 . 5 . 39
- Alternate DNS Server: 8 . 8 . 4 . 4
- Default Route: NIC1

Buttons: Apply, Exit

2. Choose a working mode. Only multi-NIC DVRs support these three working modes.

Working Mode	Description
Multi-address	Two NICs work independently. You need to configure the NICs separately.
Load Balance	Two NICs use the same IP address and work together to share the sending and receiving bandwidth.
Net Fault-tolerance	Two NICs use the same IP address, and if the primary NIC fails, the standby NIC takes over seamlessly to ensure uninterrupted network connection.

3. Configure the network parameters according to the actual network environment.



Note:


- For a multi-NIC DVR, you can choose an NIC as the default route. When the DVR connects to an external network, data will be forwarded via the default route.
- For a DVR with PoE ports, you can configure an IPv4 address for the internal NIC.
- The MTU must be in the range of [576-1500]. To use IPv6, you must set MTU within [1280-1500], and make sure the IPv6 addresses of the DVR and PC are connected. To use functions such as live view, playback, make sure IPv4 addresses of the DVR and PC are also connected.

4. Click **Apply**.

6.1.2 P2P

With P2P you can manage and operate the DVR remotely on a mobile phone.

1. Go to **Menu > Network > Basic > P2P**. P2P is enabled by default.

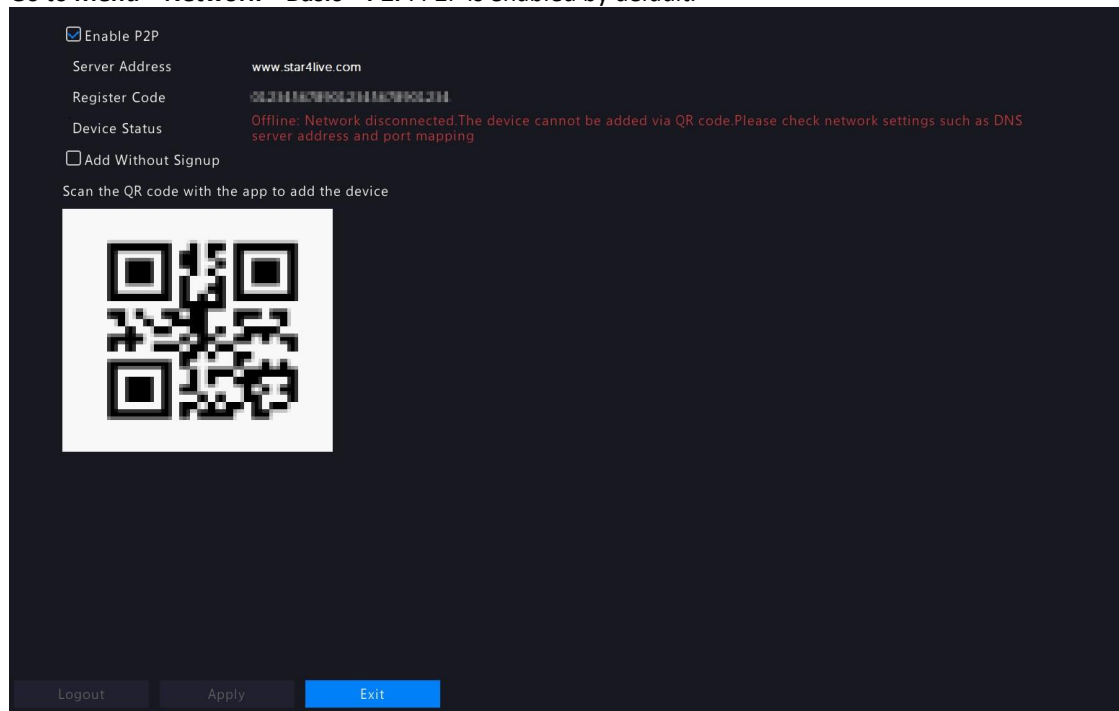

2. Choose a way to add the DVR to cloud:
 - App: Download and install the Guard Viewer app, and then scan the QR code using the app to add the DVR.
 - Website: Go to os.star4live.com and follow instructions to add the DVR.
3. Click **Apply**.
4. Check the device status. If online, the current username will be displayed. If offline, the common cause will be displayed, and troubleshoot accordingly.


 **Note:** You may also check the device status on the cloud website (os.star4live.com).
5. (Optional) To delete the DVR from cloud, click **Delete**.

6.1.3 DDNS

Configure DDNS so you can access the DVR on the LAN from the Internet by visiting a fixed domain name instead of changing IP addresses.

 **Note:** You can open the DVR's Web page by visiting **`http://server address/DVR's domain name`** using a Web browser.

1. Go to **Menu > Network > Basic > DDNS**.

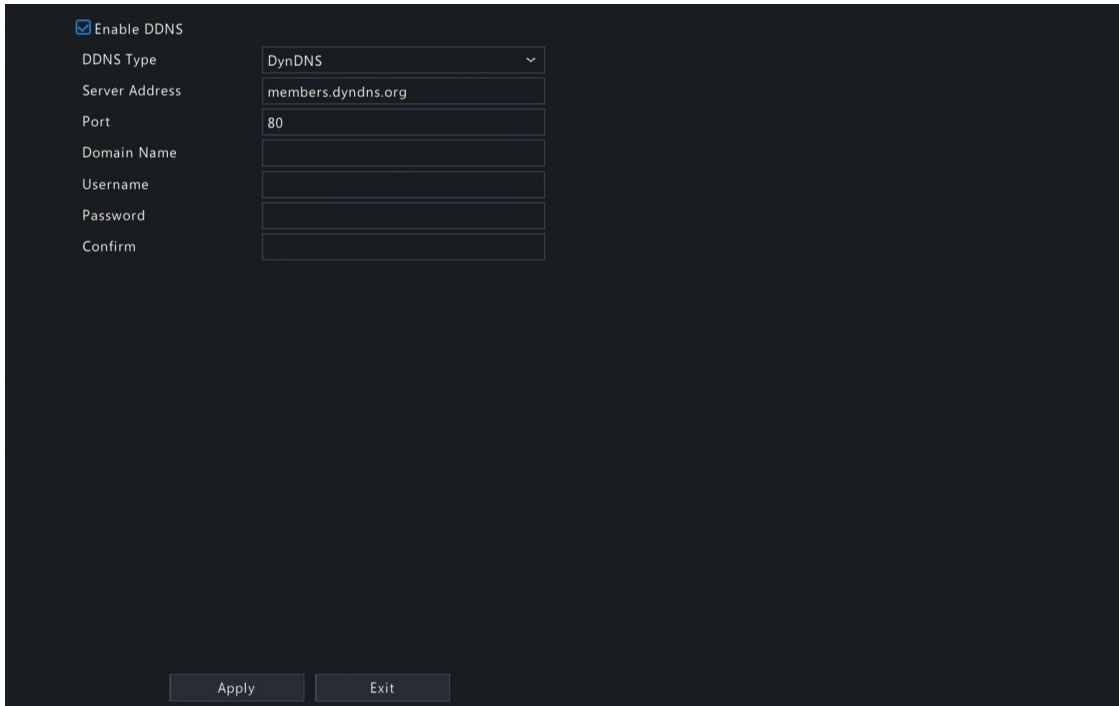

The screenshot shows the DDNS configuration page. At the top, there is a checkbox labeled "Enable DDNS" which is checked. Below it, there are several input fields: "DDNS Type" (a dropdown menu showing "DynDNS"), "Server Address" (a text box containing "members.dyndns.org"), "Port" (a text box containing "80"), "Domain Name" (an empty text box), "Username" (an empty text box), "Password" (an empty text box), and "Confirm" (an empty text box). At the bottom of the form, there are two buttons: "Apply" and "Exit".


2. Select **Enable DDNS**, choose a DDNS type, and configure the parameters.
 - DynDNS/No-IP: Third-party DDNS service provider. Enter the domain name and username/password that you acquired from your DDNS service provider.
 - Domain name: Domain name assigned by your DDNS service provider.
 - Username and password: The corresponding username/password for your DDNS account.
 - MyDDNS: Enter a domain name, and then click **Test** to check its validity.
3. Click **Apply**.

6.1.4 Email

Configure email so the DVR can send alarm information to specified users through email when an alarm occurs.

 **Note:** Select the **Send Email** checkbox on the **Trigger Actions** page before you start configuration.

1. Go to **Menu > Network > Basic > Email**.

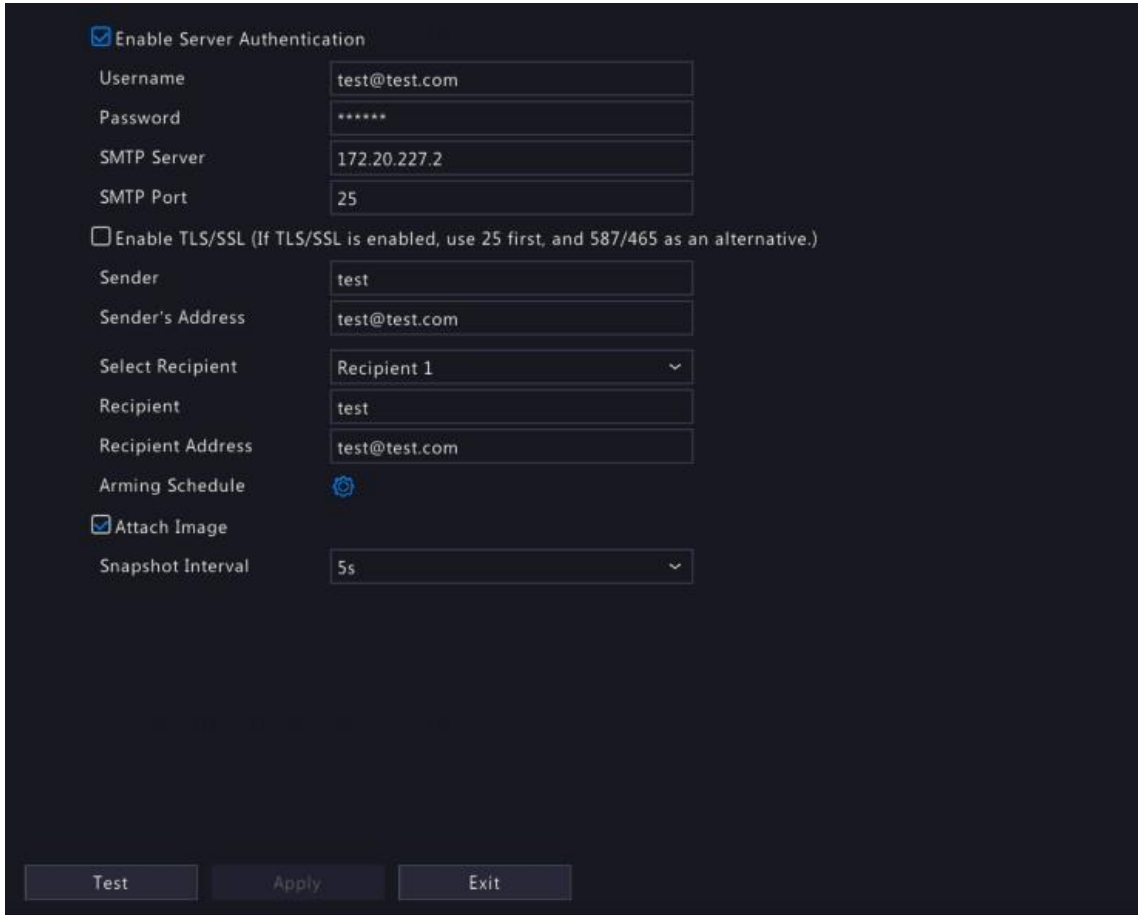


2. Configure the parameters.

Parameter	Description
Enable Server Authentication	SMTP server authentication, when enabled, can enhance email security. This feature is disabled by default. To enable it, you need to enter the correct username and password.
Username/Password	Username and password of the SMTP server. Usually, it is the username and password of the email box.
SMTP Server	SMTP server address.
SMTP Port	Default: 25. Range: [1-65535].
Enable TLS/SSL	When enabled, communication security will be improved by encrypting emails via TLS or SSL. This feature requires the SMTP server to support TLS/SSL.  Note: After TLS/SSL is enabled, if email sending via port 25 failed, try 587 or 465.
Sender	Sender's name.
Sender's Address	Sender's email address, which can be the same as the recipient's address.
Select Recipient	Choose a recipient from the list and then complete the recipient information. Up to 6 recipients are allowed.
Recipient	Recipient's name.
Parameter	Description

Recipient Address	Recipient's email address.
Arming Schedule	Click  to configure an arming schedule. See Arming Schedule .
Attach Image	When enabled, the NVR will send an email attached with alarm information and snapshot(s) every snapshot interval when an alarm occurs. When disabled, the NVR will send only an email with alarm information when an alarm occurs.  Note: This function is only available to certain devices.
Snapshot Interval	Options are 2s (default), 3s, 4s, and 5s.

- Click **Test**. The system will check the recipient address by sending it a test email.  in the **Status** column means the test succeeded and the email address is valid.

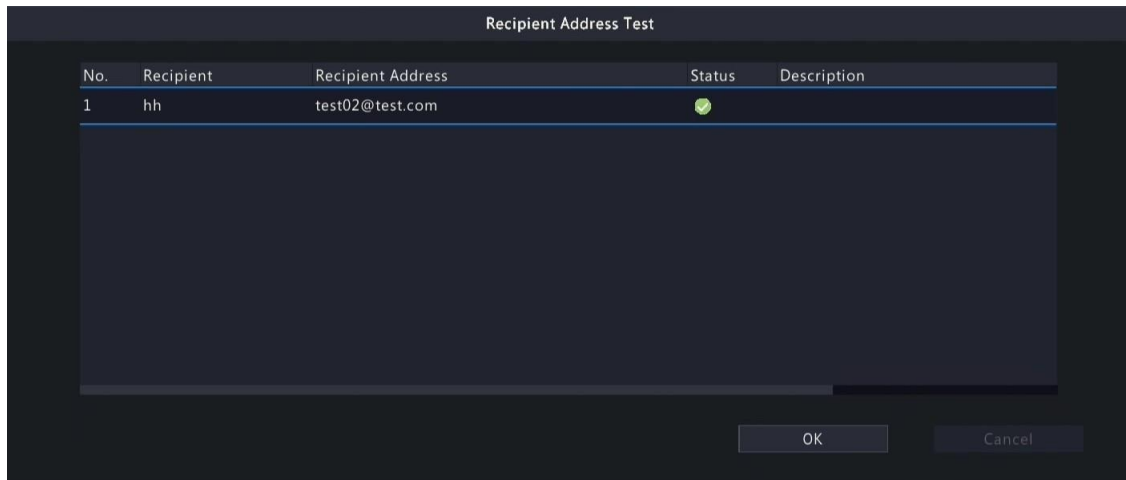

- Click **Apply**.


6.2 Platform Configuration

Configure an upper platform for the DVR.

6.2.1 Alarm Service

Configure an upper server to receive alarms and images from the DVR.

1. Go to **Menu > Network > Platform > Alarm Service**.

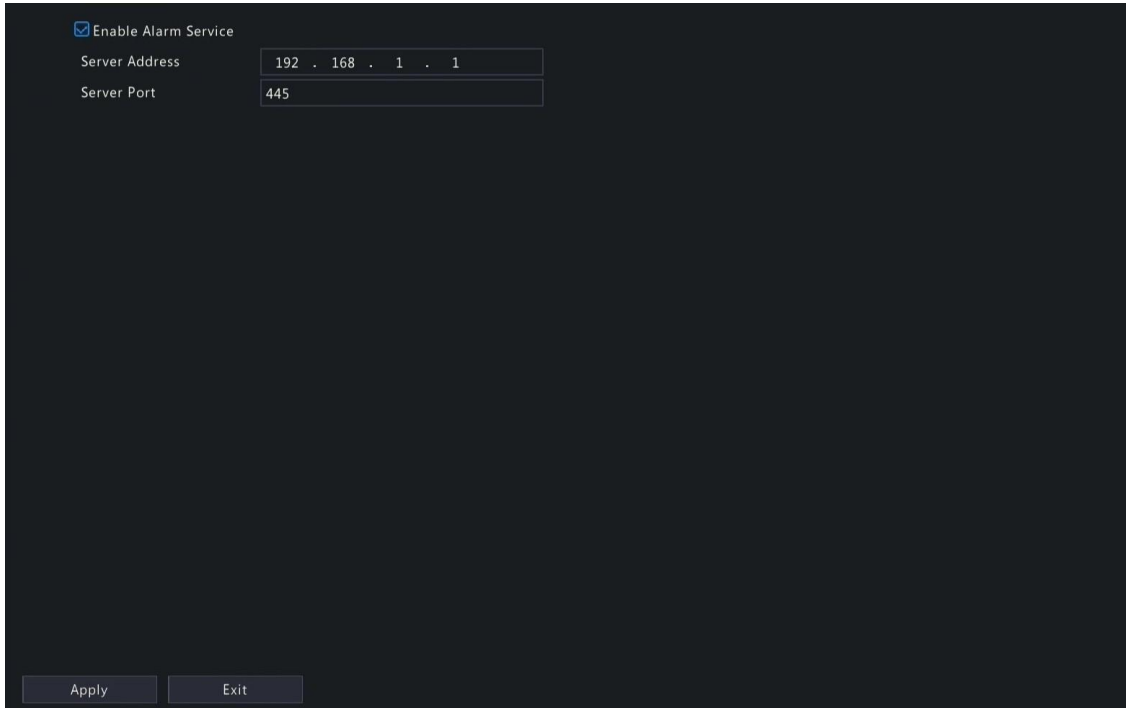

2. Select **Enable Alarm Service**.
3. Configure the parameters.

Parameter	Description
Server Address	Upper server's IP address.
Server Port	Upper server's port number.

 **Note:** This configuration only enables the sending of alarm-related packets to the alarm host. The specific alarm methods on the alarm host need to be configured separately.

4. Click **Apply**.


6.3 Advanced Configuration

Configure ports, port mapping, and multicast.

6.3.1 Port

Configure HTTP, HTTPS, RTSP, HTTP redirect port, and RTSP redirect port.

1. Go to **Menu > Network > Advanced > Port**.

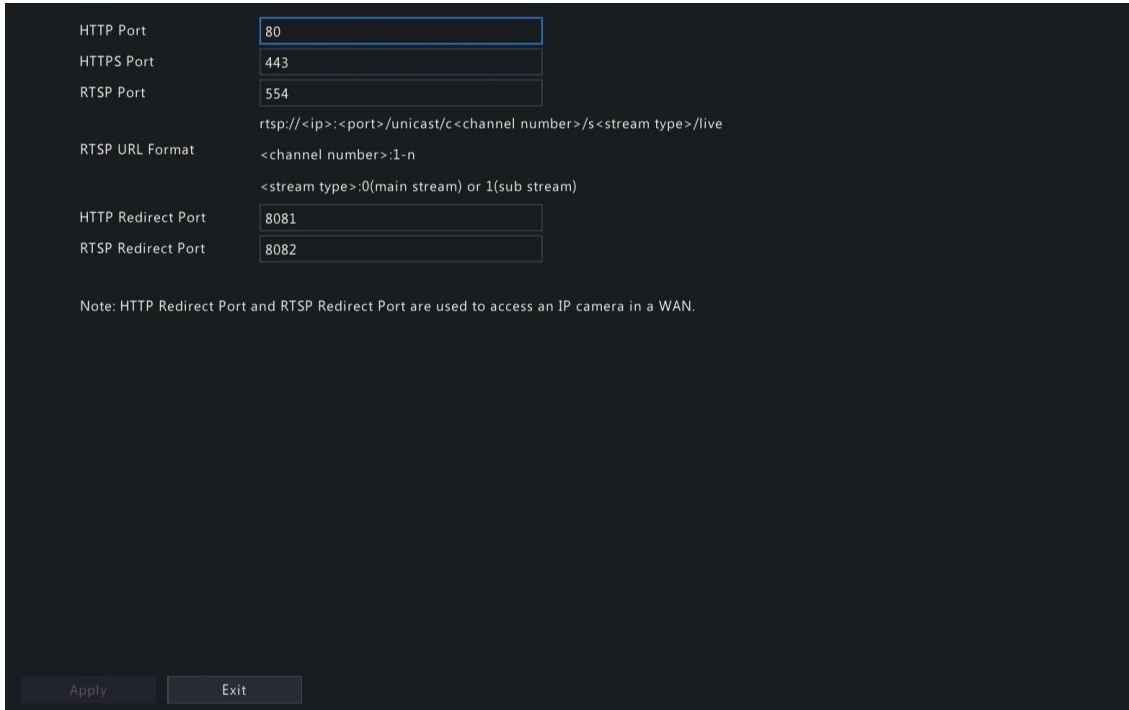

The screenshot shows a configuration page with a dark background. It contains several input fields for port numbers and a text area for the RTSP URL format. The fields are as follows:

Field	Value
HTTP Port	80
HTTPS Port	443
RTSP Port	554
RTSP URL Format	rtsp://<ip>:<port>/unicast/c<channel number>/s<stream type>/live <channel number>:1-n <stream type>:0(main stream) or 1(sub stream)
HTTP Redirect Port	8081
RTSP Redirect Port	8082

Below the fields, there is a note: "Note: HTTP Redirect Port and RTSP Redirect Port are used to access an IP camera in a WAN." At the bottom of the page, there are two buttons: "Apply" and "Exit".

2. Configure the ports.



Note:

- The port range is 1-65535, among which, ports 21, 23, 2000, 3702 and 60000 are reserved for other purposes. Duplicate ports are not allowed.
- The upper platform can access the live video of a camera using the displayed RTSP URL.

3. Click **Apply**.

6.3.2 Port Mapping

Configure port mapping so client computers can access the DVR on the LAN across the Internet.


1. Go to **Menu > Network > Advanced > Port Mapping**.
2. Port mapping is enabled by default. You can choose a mapping mode, UPnP, or manual port mapping.

UPnP

UPnP is short for Universal Plug and Play. UPnP-enabled network address translation (NAT) can perform automatic port mapping to enable client computers to access the DVR on the LAN from the Internet.

 **Note:** This function requires router support. You need to enable UPnP on the router before starting configuration on the DVR.

1. Choose the **UPnP** mapping mode.

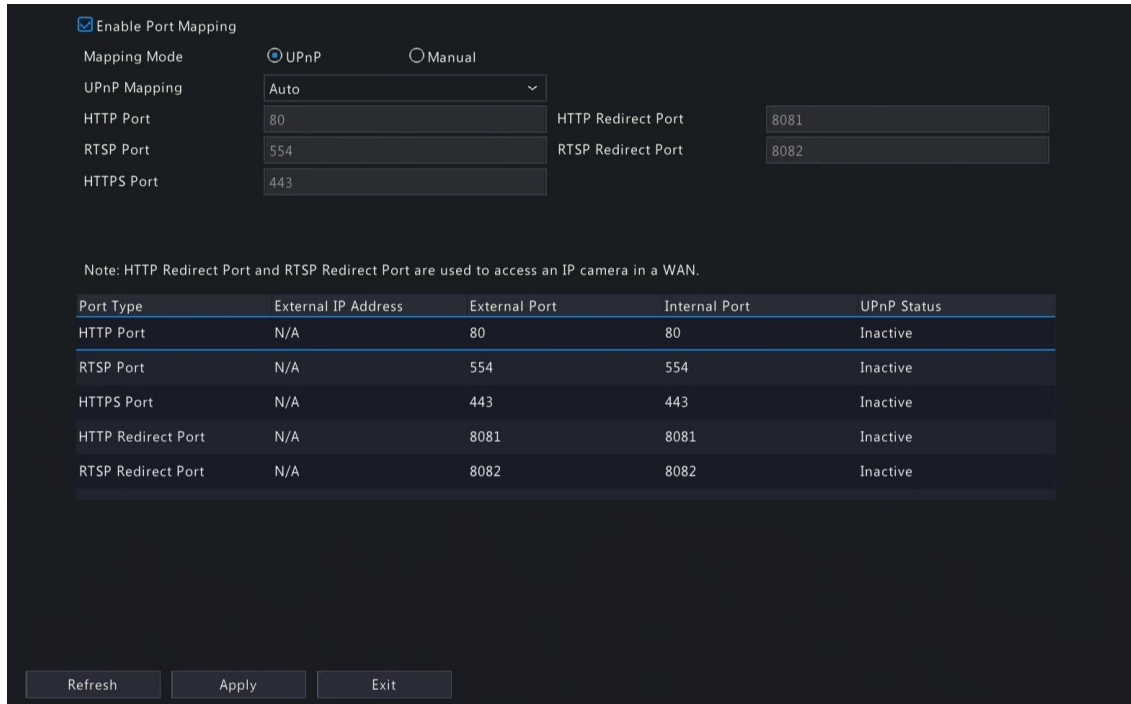

The screenshot shows the 'Port Mapping' configuration window. At the top, 'Enable Port Mapping' is checked. Under 'Mapping Mode', 'UPnP' is selected with a radio button, and 'Manual' is unselected. The 'UPnP Mapping' dropdown is set to 'Auto'. Below this, there are input fields for 'HTTP Port' (80), 'RTSP Port' (554), and 'HTTPS Port' (443). To the right, there are corresponding 'HTTP Redirect Port' (8081) and 'RTSP Redirect Port' (8082) fields. A note states: 'Note: HTTP Redirect Port and RTSP Redirect Port are used to access an IP camera in a WAN.' Below the note is a table showing the current port mapping status.

Port Type	External IP Address	External Port	Internal Port	UPnP Status
HTTP Port	N/A	80	80	Inactive
RTSP Port	N/A	554	554	Inactive
HTTPS Port	N/A	443	443	Inactive
HTTP Redirect Port	N/A	8081	8081	Inactive
RTSP Redirect Port	N/A	8082	8082	Inactive

At the bottom of the window are three buttons: 'Refresh', 'Apply', and 'Exit'.

2. Choose a mode from the **UPnP Mapping** list:
 - Auto: The DVR automatically assigns external port numbers, which are usually the same as the internal port numbers.
 - Specify ports: User specifies ports within the range of [1-65535].

 Note:

- Auto is recommended. Port conflict may occur when external ports are specified manually.
- For a multi-NIC DVR, port mapping shall be performed on the NIC that is configured as the default route.

3. Click **Refresh**, and check whether **Active** is displayed in the **UPnP Status** column.
4. Click **Apply**.

Manual

If the router does not support UPnP, you must configure internal and external ports manually.

 Note:

- Make sure the ports configured on the DVR are consistent with that configured on the router.
- For some routers, the DVR's external and internal ports must be the same, and they also must be the same as the ports on the router.

1. Choose the **Manual** mapping mode.

☒ Enable Port Mapping

Mapping Mode ☐ UPnP ☒ Manual

HTTP Port	80	HTTP Redirect Port	8081
RTSP Port	554	RTSP Redirect Port	8082
HTTPS Port	443		

Note: HTTP Redirect Port and RTSP Redirect Port are used to access an IP camera in a WAN.

2. Set the external ports manually.
3. Click **Apply**.




Note:

After port mapping is configured, you can open the Web interface using the following address: *Router's WAN IP:external HTTP port*. For example, the router's external IP address is 10.2.2.10, and the external HTTP port is 82, then enter `http://10.2.2.10:82` in the Web browser's address bar.

6.3.3 Multicast


When the number of users accessing the Web client has reached the upper limit and live video is unavailable, you can use multicast to solve this issue.

1. Go to **Menu > Network > Advanced > Multicast**.

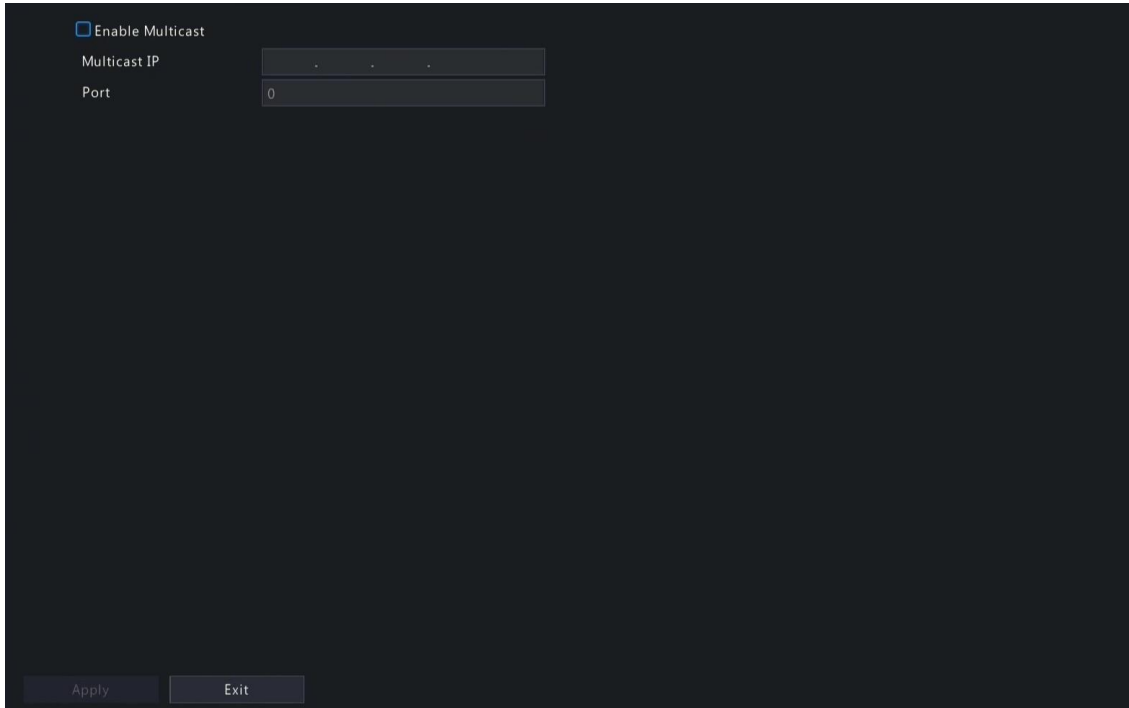

The screenshot shows the 'Multicast' configuration page. At the top, there is a checkbox labeled 'Enable Multicast'. Below it, there are two input fields: 'Multicast IP' and 'Port'. The 'Port' field currently contains the value '0'. At the bottom of the page, there are two buttons: 'Apply' and 'Exit'.

2. Select **Enable Multicast**, enter the multicast IP address and port number.
3. Click **Apply**.
4. Log in to the Web interface, go to **Setup > Client**, set **Live View Protocol** to **Multicast**. Now live view is available through multicast.

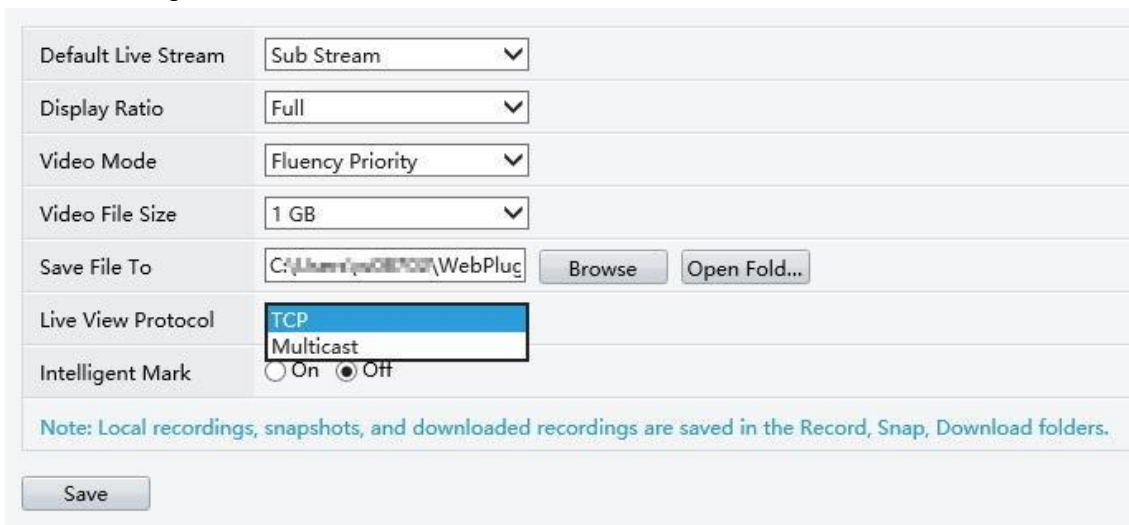

The screenshot shows the 'Client' configuration page. It contains several settings: 'Default Live Stream' is set to 'Sub Stream'; 'Display Ratio' is set to 'Full'; 'Video Mode' is set to 'Fluency Priority'; 'Video File Size' is set to '1 GB'; 'Save File To' is set to 'C:\Users\Administrator\AppData\Local\Temp\WebPlug'; 'Live View Protocol' is set to 'Multicast' (with 'TCP' also visible in the dropdown); 'Intelligent Mark' has 'On' and 'Off' radio buttons, with 'Off' selected. A note at the bottom states: 'Note: Local recordings, snapshots, and downloaded recordings are saved in the Record, Snap, Download folders.' A 'Save' button is at the bottom.

Note:

- IP multicast addresses are class-D addresses. 224.0.1.0 - 238.255.255.255 can be used on the Internet.
- In the range of 224.0.0.0 - 239.255.255.255, some are reserved for special uses, for example, 224.0.0.0 - 244.0.0.255 can only be used on the LAN, where packets with these addresses will not be forwarded by a router; 224.0.0.1 is used by all the hosts on the subnet; 224.0.0.2 is used by all the routers on the subnet; 224.0.0.5 is used by OSPF routers; 224.0.0.13 is used by PIMv2 routers; and 239.0.0.0 - 239.255.255.255 are private addresses (e.g., 192.168.x.x).

6.3.4 FTP

Configure FTP so the DVR can upload images to the FTP server.



Note:

- This feature is only available to certain DVRs.
- To use this feature, you need to deploy an FTP server first.
- After the FTP server is enabled and connected, the DVR can automatically upload images to the FTP server.

1. Go to **Menu > Network > Advanced > FTP**.

2. Select **Enable FTP**.

3. Configure server parameters. Click **Test** to test the connection between the DVR and the FTP server.


Parameter	Description
IP Address	FTP server address.
Port	The default is 21. You can set a different port as needed.
Anonymous	When enabled, the DVR will connect to the FTP server as anonymous user without username/password required.
Username	Username used to access the FTP server.
Password	Password used to access the FTP server.
Remote Directory	Input the remote directory in the correct format (abc/efg/xyz), and the system will create folders level by level accordingly under the root directory, and then create different folders based on IP, time, and channel. Note: • For example, if the remote directory is abc, then the created folder is FTP > abc > 206.2.5.8 > 2022-10-08 > D5. If the remote directory is abc/efg/xyz, then the created folder is FTP > abc > efg > xyz > 206.2.5.8 > 2022-10-08 > D5. • If the remote directory is empty, the system will create folders under the root directory based on IP, time, and channel, for example, FTP > 206.2.5.8 > 2022-10-08 > D5.

Upload Interval(s)	The DVR uploads images captured within the set periods to the FTP server at the set interval. The default is 30 seconds. You can alter the setting as needed.
Range(s)	Show the range of image upload interval: [5-600] seconds

4. Set an upload schedule.

(1) Choose a camera from the list.

(2) Click  behind **Upload Schedule**, configure time periods during which the camera will upload images of the desired type(s). Click **OK**.

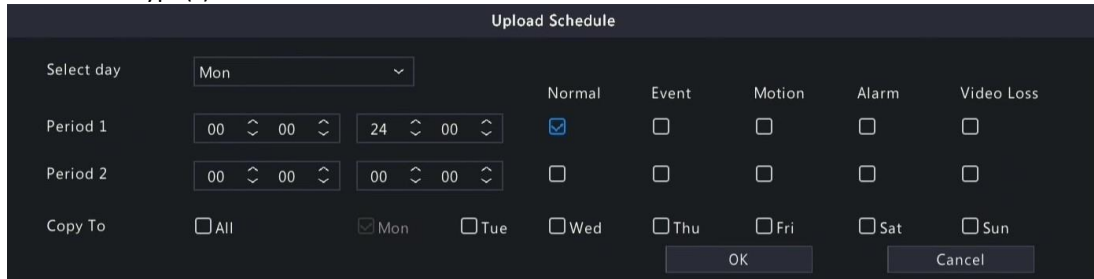

 Note:

- Two image upload periods are allowed each day, and the periods must not overlap.
- To apply the schedule to other days, select **All** or days and then click **OK**.

5. (Optional) To apply the current upload schedule to other cameras, click behind **Copy**, select cameras, and then click **OK**.



6. Click **Apply**.

7 System Configuration

This chapter describes how to configure the system parameters.

7.1 Basic Configuration

Configure the basic information of the system.

1. Go to **Menu > System > Basic Setup**.



2. Configure the basic parameters.

Parameter	Description
Device Name	The default name is the DVR model. You can change it as needed.
Device ID	Used to distinguish devices if you have more than one device. You can change it as needed.
Device Language	Choose the system language. The system will restart after you change the system language. Note: Not all devices can switch the language.
Auto Logout(min)	If you are not on the live view page and don't perform any operation, you will log out automatically when the set time is over, and the live view page will be displayed. Default: 5 minutes. You can change it as needed.
Instant Playback (min)	Set the instant playback time. Default: 5 minutes.
Mouse Pointer Speed	Drag the slider to adjust the speed (left to right: slow to fast).
Enable Password Protection	When the auto logout time is over, the user needs to enter the login password in order to access the main menu. This feature is enabled by default. Note: Only admin can change the setting.
Enable Startup Wizard	Startup wizard appears when the DVR starts up for the first time. If the checkbox is selected, the startup wizard appears every time the device starts up. You may click Wizard to set wizard on the Menu page.

Intelligent Mark	When enabled, smart detection rules will be displayed on the live video, or smart detection objects will be marked, and the corresponding smart data will be displayed. Smart rules are yellow detection boxes or detection lines. Detection boxes have two colors with different meaning as described below: • Green: Data has changed but didn't trigger the rules. • Red: Data in the area have triggered the rules configured for the VCA alarm and a VCA alarm has occurred. Note: Some smart functions do not support this feature.
------------------	---

3. Click **Apply**.


7.2 Preview Configuration

Configure the screen display and preferred stream type for preview.

7.2.1 Preview Configuration

Configure the basic preview parameters and display mode.

Go to **Menu > System > Preview**.

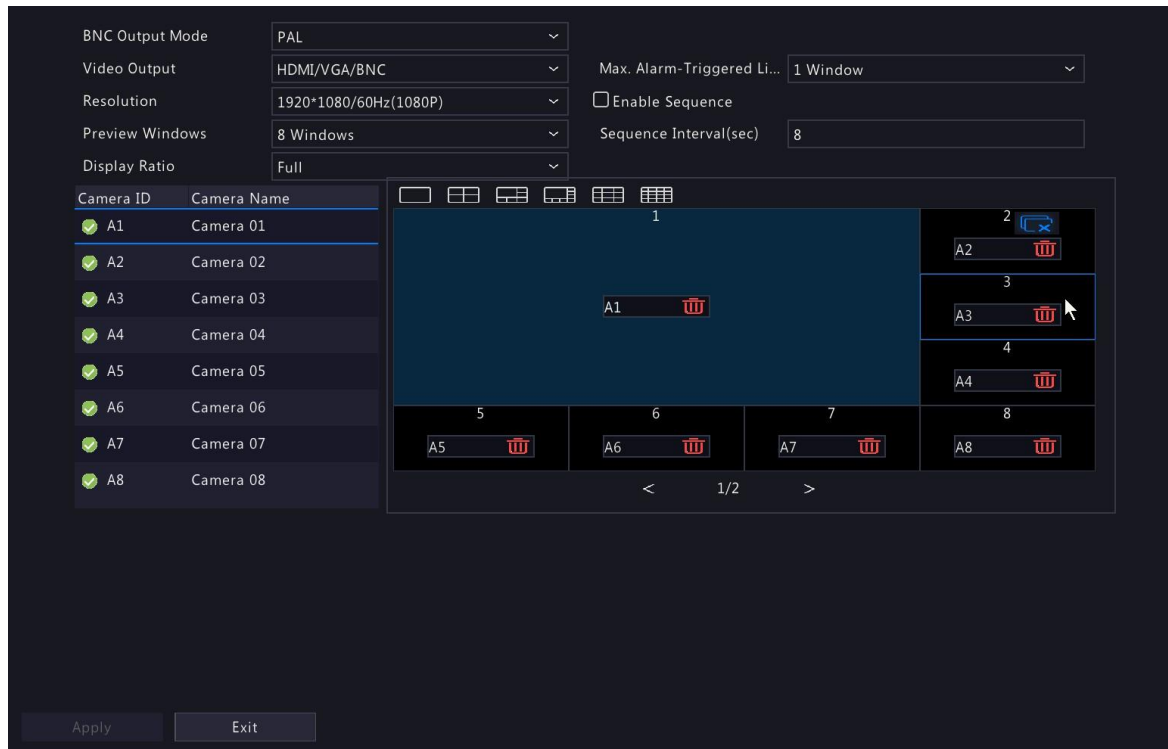

Basic Preview Configuration

Parameter	Description
Video Output	Outputs the system display to an external display device. Choose an output port.  Note: The DVR provides three output ports (VGA, HDMI1/HDMI2, BNC) and can output the system display to three displays simultaneously for independent operations. The actual port types available may vary with device.
Resolution	The resolution includes the display format and refresh rate. The display format refers to the number of pixels that can be displayed on the screen, for example, 1920x1080, 1280x720, 1280x1024, etc. More pixels displayed means higher image quality. The refresh rate can be 60Hz, 50Hz, 25Hz, etc. Choose an option that best fits your needs.
Preview Windows	Displays images in the desired window layout. Choose an option from the list or click an icon to choose the layout. 
Max. Alarm-Triggered Live View Windows	Three options: 1/4/9 windows. See Preview for more information.
Enable Sequence	Select the Enable Sequence checkbox. See Sequence for more information.
Sequence Interval(sec)	Set the sequence interval time. Default: 8 seconds.
Display Ratio	- Full: Displays images according to the window size. - Original: Displays images with original size.

Screen Configuration


By default, camera IDs correspond to live view windows: D1 to window 1, D2 to window 2, and so on. You can change the correspondence relationship as follows. The example below shows how to switch D1 and D2.

 **Note:** You may also drag an image on the live view page to swap windows, and then view the changed window-channel binding relationship on this page. But this method requires the Configure permission, and it cannot switch windows that are not on the same screen.

1. Click window 1 on the right side. Window 1 is selected.



2. Click D2 on the left-side channel list. Now window 1 shows D2, and window 2 shows None.

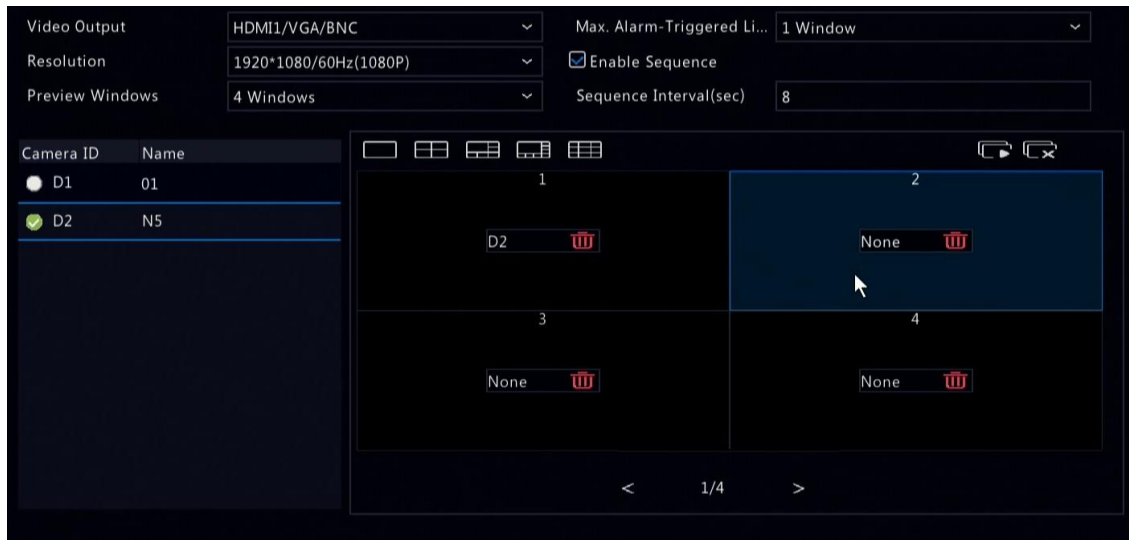

 **Note:** On the left-side channel list,  is empty for D1, which means the channel is not bound to any window.

- Click window 2 on the right side. Window 2 is selected.




- Click D1 on the left-side channel list. Now window 2 shows D1, which means D1 and D2 have switched windows with each other.



- Click **Apply**.

7.2.2 Advanced Configuration

- Go to **Menu > System > Preview > Advanced**.

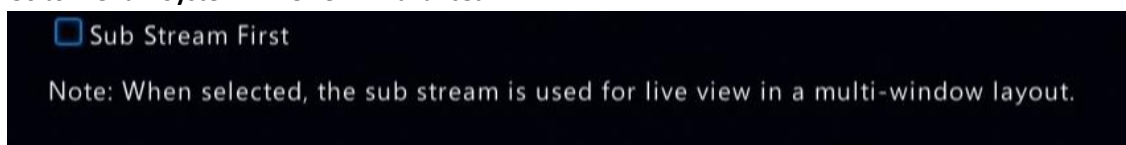

- Select **Sub Stream First**.
- Click **Apply**.

7.3 Time Configuration

Configure the time display mode, time synchronization mode, and holidays.

7.3.1 Time Configuration

Configure the time format and update method.

Configure Time Format

1. Go to **Menu > System > Time > Time**.



The screenshot displays a configuration page with the following fields and values:

Time Zone	(UTC+08:00) Beijing, Hong Kong, Urumqi
Date Format	YYYY-MM-DD
Time Format	24-hour
System Time	2022-10-10 18:13:13
☐ Auto Update	
NTP Server Address	
NTP Port	123
Update Interval	10m

2. Choose the time zone, date, and time format.
3. Set the system time.

Enable Auto Update


When enabled, the system syncs time with the NTP server.

1. Select **Auto Update**.
2. Enter the NTP server address and port number.
3. Choose an update interval.

7.3.2 DST

Configure DST.

1. Go to **Menu > System > Time > DST**.

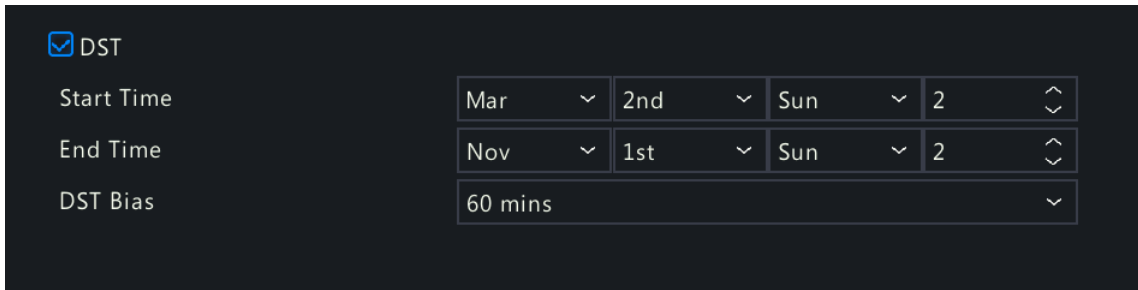

☒ DST				
Start Time	Mar	2nd	Sun	2
End Time	Nov	1st	Sun	2
DST Bias	60 mins			

2. Select DST.
3. Configure the parameters.
4. Click **Apply**.

7.3.3 Camera Time Synchronization


When **Sync Camera Time** is enabled, the DVR syncs time to the connected cameras regularly.

This feature is enabled by default.

Note:

- Time sync occurs when a camera goes online for the first time.
- If **Sync Camera Time** is enabled, time sync occurs every 30 minutes.

1. Go to **Menu > System > Time > Time Sync**.

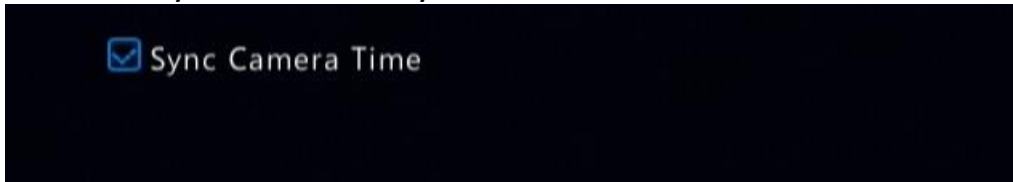

☒ Sync Camera Time
--

2. Enable/disable this feature as needed.
3. Click **Apply**.

7.3.4 Holiday Configuration

Configure special time periods as holidays for use in recording schedules.

1. Go to **Menu > System > Time > Holiday**.

The screenshot shows a table with the following columns: No., Status, Holiday Name, Start Time, End Time, Repeat, Configure, and Delete. The table is currently empty. Below the table, there is an 'Add' button in the lower-right corner. At the bottom of the interface, there are three buttons: 'Enable', 'Disable', and 'Exit'.

2. Click **Add** in the lower-right corner.

The screenshot shows the 'Holiday' configuration dialog box. It contains the following fields and options:


- Holiday Name:** A text input field.
- Status:** Two radio buttons: ☒ Enable and ☐ Disable.
- Repeat:** Two radio buttons: ☒ No and ☐ Yes.
- Mode:** Two radio buttons: ☒ By Day and ☐ By Week.
- Start Time:** Three dropdown menus showing '2022', '08', and '06'.
- End Time:** Three dropdown menus showing '2022', '08', and '06'.
- Buttons:** 'Apply', 'OK', and 'Cancel' at the bottom.

3. Configure the parameters.

Parameter	Description
Holiday Name	Set a meaningful and easy-to-remember holiday name.
Status	The new holiday is enabled by default. If you want to disable it, select Disable .
Repeat	• No: The holiday is effective once only in the specified year. Specify a year for the holiday. • Yes: The holiday is effective every year.
Mode	• By Day: Set the holiday in the specified format: year/month/day. • By Week: Set the holiday in the specified format: year/month/week/day of the week.

Start Time/End Time	Set according to the specified format.
---------------------	--

4. Click **Apply**.
5. Click **OK**.

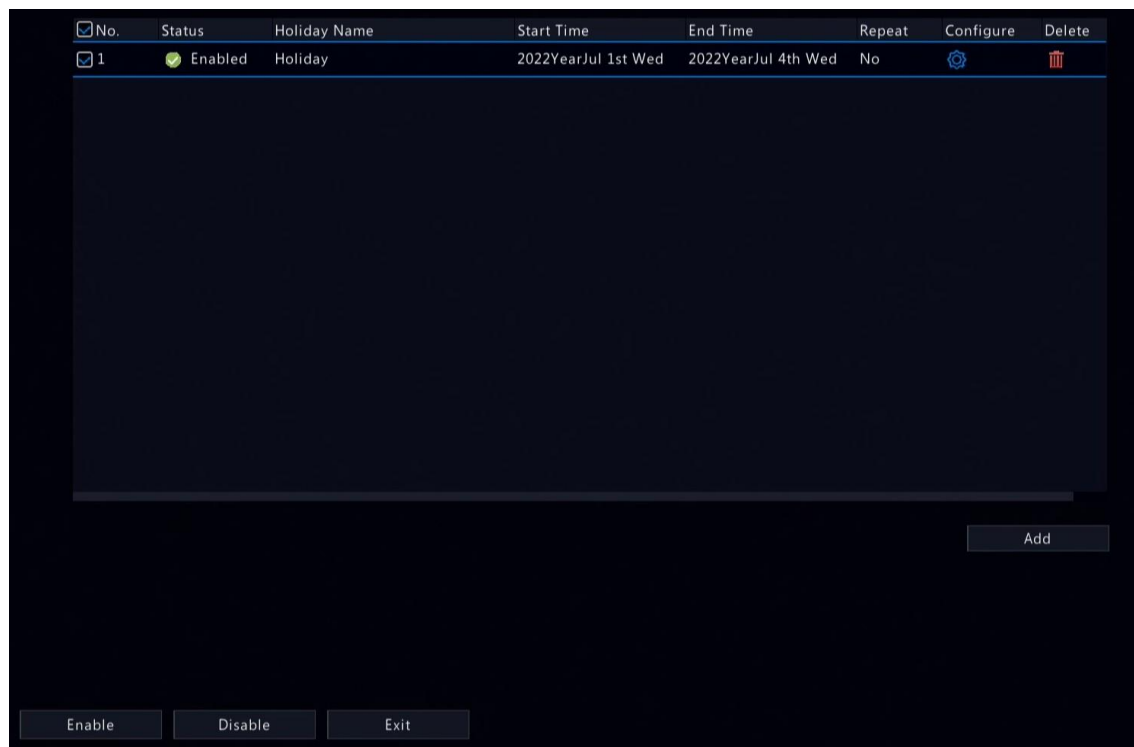


- Click to edit the current holiday.
- Click to delete a holiday. Deleting a holiday will not delete the relevant recordings.
- Click **Disable** to disable the holiday.

7.4 Serial Port Configuration

Configure serial port parameters to connect a keyboard. The serial port settings configured on the DVR must match the serial port settings on the keyboard.

1. Go to **Menu > System > Serial**.

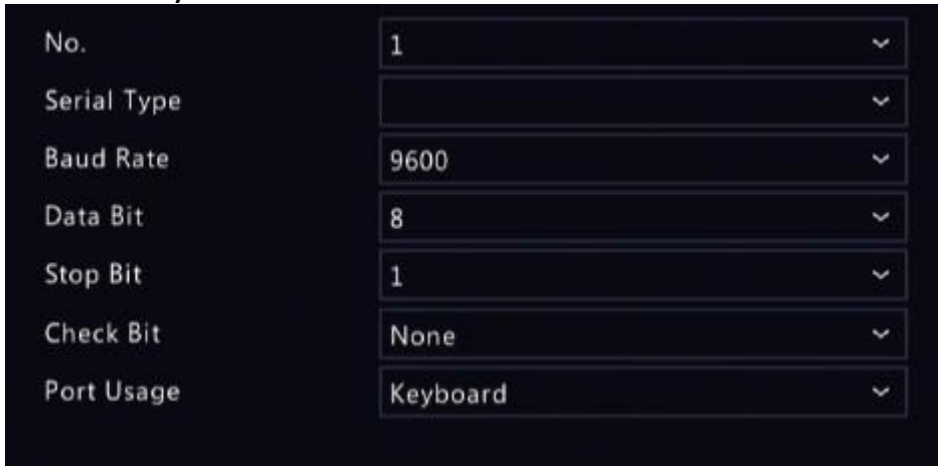

The screenshot shows a configuration menu with the following settings:

Parameter	Value
No.	1
Serial Type	
Baud Rate	9600
Data Bit	8
Stop Bit	1
Check Bit	None
Port Usage	Keyboard

2. Configure the parameters.

Parameter	Description
No.	Choose the serial port ID. The number of serial ports available may vary with device.
Serial Type	Currently only RS485 is available.
Baud Rate	Data transmission speed (unit: bits per second). The greater the value, the faster the transmission speed, and the shorter the transmission distance. Usually, the default value is used.
Data Bit	The actual number of data bits in a data packet. Usually, the default value is used.
Stop Bit	Indicates the end of a unit of transmission. Usually, the default value is used.
Check Bit	Used to check whether the received data bits are erroneous. Choose Odd, Even, or None (default) as needed.
Port Usage	Keyboard or Control PTZ.

3. Click **Apply**.


7.5 User Configuration

Users are entities that manage and operate the system. A user type is a set of operation permissions. After a user type is assigned to a user, the user has all the permissions defined in the type.

The system supports four user types:

User Type	Description
admin	The default super administrator, which has the maximum permissions. The initial password is 123456 . Note: Only admin can add or delete users and edit other users' permissions.
default	The default reserved user, which cannot be added or deleted, only has live view and two-way audio permissions by default and can be configured by admin only.  Note: If the default user is forbidden to use live view and two-way audio on a camera, the camera will be locked when no user is logged in and  is displayed in the corresponding window.
Operator	By default, an operator has basic permissions and camera permissions.
Guest	By default, a guest only has camera permissions.

Go to **Menu > System > User**.

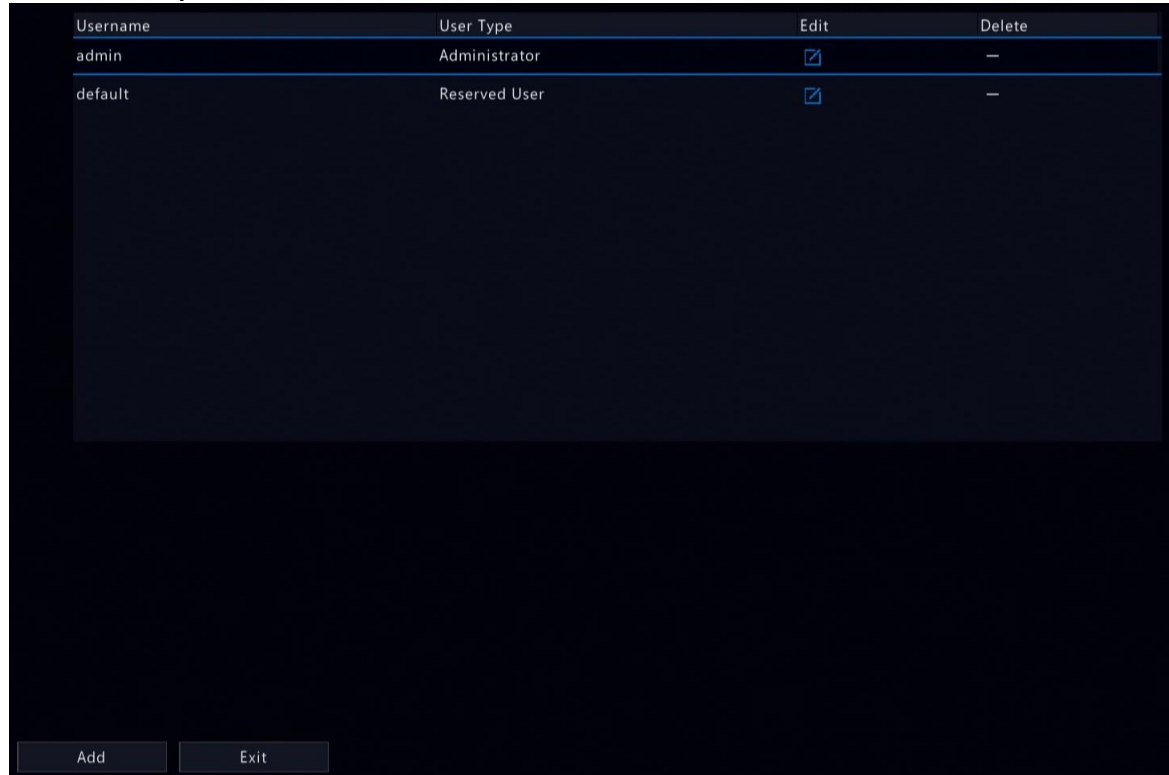

Add User

1. Click **Add**.

Modify/Add User

Username

User Type Operator

Password Weak

Confirm

Pattern ☐ Enable Unlock Pattern

Note: If NVR is added to managing platform, you also need to edit the password on the platform.

Basic Permissions

☒ Configure ☒ Upgrade ☒ View and Export L... ☒ Restart

Smart Permissions

☒ Preview

Camera Permissions

Select Permission

Live View

Control PTZ

Playback

Manual Recording on NVR

☒ Select Camera

☒ D1

☒ D2

☒ D3

☒ D4

Apply Exit

2. Configure the parameters. Enter the username, password, choose a user type, enable/disable unlock pattern, and choose permissions.

Item	Description
Username	Set a username as you need. Cannot be empty or include Chinese characters.
Password/Confirm	Set a strong password.
Pattern	To enable the unlock pattern, select the checkbox. Click , and then follow on-screen instructions to set a pattern.
Basic Permissions/Smart Permissions	Select the permissions you want to assign to the user.

3. Click **OK**.

Delete User

1. On the **User** page, select the user you want to delete.
2. Click . A confirmation message appears.
3. Click **Yes**.

Edit User

1. On the **User** page, select the user you want to edit.
2. Click , enter the password.

Change Password

Username	admin
Change Password	☐
Password	***** Weak
Confirm	*****
Sync to Camera	☐ Change Online Private Protocol Camera Pass...
Pattern	☒ Enable Unlock Pattern 
☒ Email	

Note: If NVR is added to managing platform, you also need to edit the password on the platform.

OK Back

3. Edit the user type, password, or permissions.
4. Click **OK**.


7.6 Security Configuration

Security configuration includes IP address filtering, Onvif authentication, ARP protection, and watermark.

7.6.1 IP Address Filtering

IP address filtering can ensure only certain source IP addresses can be used to access the DVR's web interface.

1. Go to **Menu > System > Security > IP Address Filtering**.

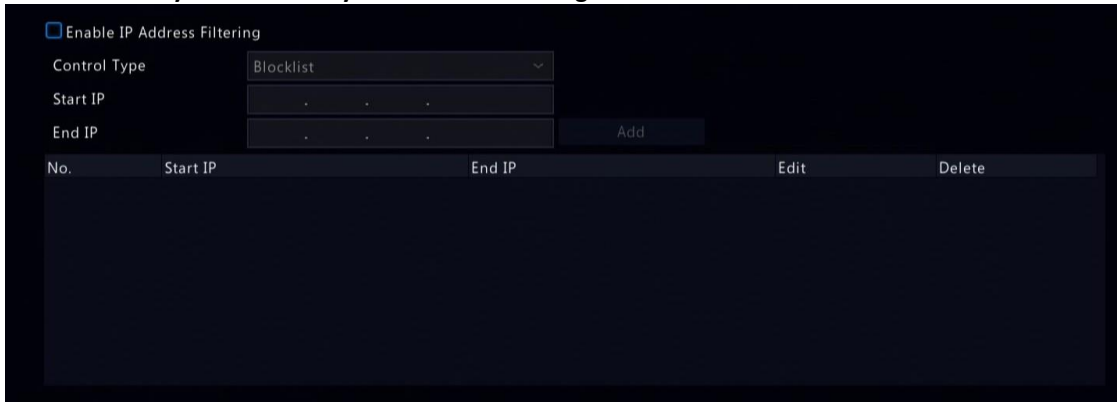

2. Select **Enable IP Address Filtering**.
3. Configure the parameters.


Parameter	Description
Control Type	• Blocklist: Access is forbidden if the IP is on the blocklist. • Allowlist: Access is allowed only when the IP is on the allowlist. If Allowlist is selected but is empty, remote access will be forbidden.
Start IP/End IP	Enter the start and end IP addresses. If you want to add only one IP address, enter it in the Start IP field.

4. Click **Add**.

7.6.2 ONVIF Authentication

When Onvif authentication is enabled, a username and password will be required to access the DVR via Onvif.

This feature is enabled by default. Go to **Menu > System > Security > ONVIF Auth**.

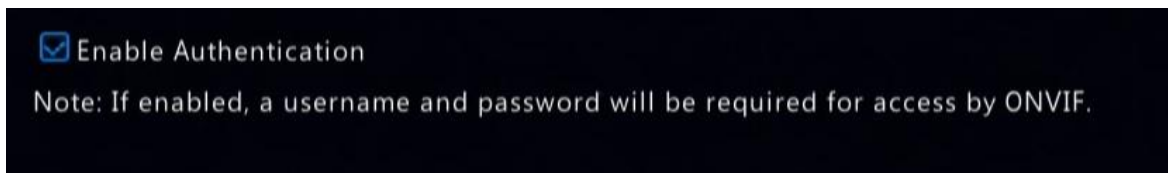


7.6.3 ARP Protection

The Address Resolution Protocol (ARP) dynamically maps an IP address to a MAC address. In a local area network, ARP is necessary for devices to communicate with each other through MAC addresses. ARP attacks exploit ARP vulnerabilities to forge IP addresses and MAC addresses. ARP protection can bind the gateway's IP address and an MAC address to prevent ARP spoofing.

 **Note:** For multi-NIC devices, this feature will be disabled automatically if you change the NIC's working mode. For information about changing the working mode, see [Network Configuration](#).

1. Go to **Menu > System > Security > ARP Protection**.

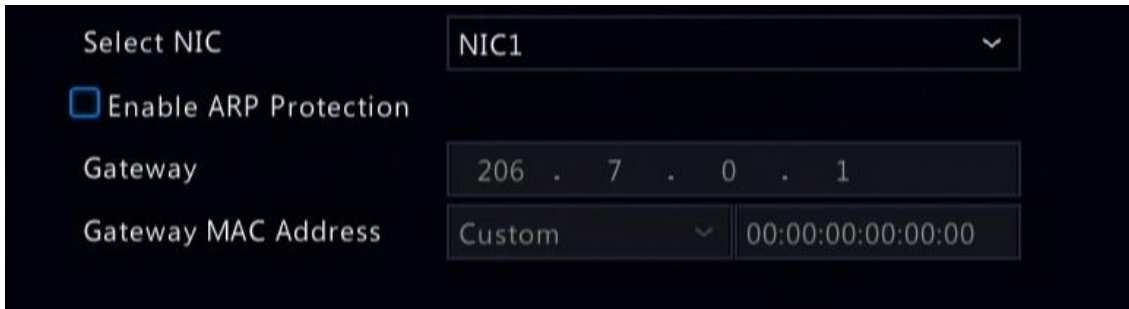

2. Choose the NIC. Skip this step if the device only has one NIC.
3. Select **Enable ARP Protection**.
4. Configure the parameters.


Parameter	Description
Gateway	Gateway you have configured in Menu > Network > Basic > Network .
Gateway MAC Address	Custom: Enter the gateway's physical address in the network switch.
	Auto: Automatically obtains the gateway's physical address in the network switch.

5. Click **Apply**.

7.6.4 Watermark

Use the watermark function to encrypt custom information into video contents to prevent video tampering.

1. Go to **Menu > System > Security > Watermark**.

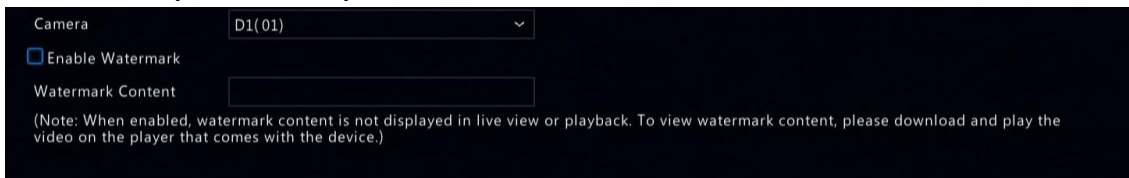

2. Choose the channel and select **Enable Watermark**.
3. Enter the watermark contents.
4. Click **Apply**.

8 Backup

This chapter introduces recording backup and image backup.

8.1 Recording Backup

Recording backup refers to backing up videos stored on the DVR's hard disk to a USB storage device. It has the following conditions:

- The USB storage device has been formatted to FAT32 or NTFS.
- Backup permission is required.
- The recording to back up is stored on a hard disk of the DVR.
- The storage device is connected correctly to the DVR.



Note:

- Recordings are backed up as .mp4 files by default.
- You can back up recordings in HD or SD mode.

Normal Video Backup

Refers to backing up scheduled recording, manual recording, and event-triggered recording.

1. Go to **Menu > Backup > Recording > Recording**.
2. Select the desired camera(s). All cameras are selected by default.

Recording

☒ All ☒ D1 ☒ D2 ☒ D3 ☒ D4 ☒ D5 ☒ D6


Start Time	2022-10-06 00:00:00
End Time	2022-10-06 23:59:59
Type	All
Event Type	All
VCA Type	All
File Type	All

Search Exit

3. Set search conditions, including the start time, end time, recording type, event type, VCA type, and file type.

4. Click **Search**. Search results are displayed. The image from the first search result is displayed on the right side.

Click  to play the video.

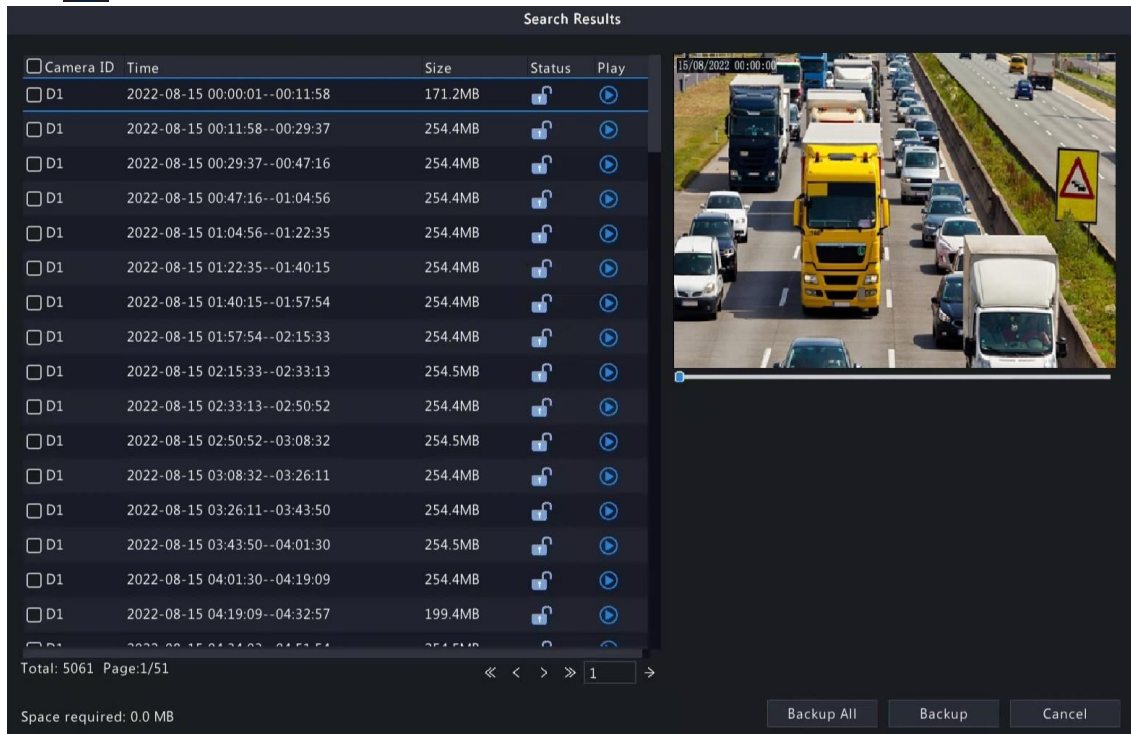


Camera ID	Time	Size	Status	Play
D1	2022-08-15 00:00:01--00:11:58	171.2MB		
D1	2022-08-15 00:11:58--00:29:37	254.4MB		
D1	2022-08-15 00:29:37--00:47:16	254.4MB		
D1	2022-08-15 00:47:16--01:04:56	254.4MB		
D1	2022-08-15 01:04:56--01:22:35	254.4MB		
D1	2022-08-15 01:22:35--01:40:15	254.4MB		
D1	2022-08-15 01:40:15--01:57:54	254.4MB		
D1	2022-08-15 01:57:54--02:15:33	254.4MB		
D1	2022-08-15 02:15:33--02:33:13	254.5MB		
D1	2022-08-15 02:33:13--02:50:52	254.4MB		
D1	2022-08-15 02:50:52--03:08:32	254.5MB		
D1	2022-08-15 03:08:32--03:26:11	254.4MB		
D1	2022-08-15 03:26:11--03:43:50	254.4MB		
D1	2022-08-15 03:43:50--04:01:30	254.5MB		
D1	2022-08-15 04:01:30--04:19:09	254.4MB		
D1	2022-08-15 04:19:09--04:32:57	199.4MB		

Total: 5061 Page: 1/51

Space required: 0.0 MB

Backup All Backup Cancel

5. Choose a way to back up recording(s) as needed.
- Select the recording(s) you want to back up, and then click **Backup**.
 - Or click **Backup All** to back up all the recordings in the list.

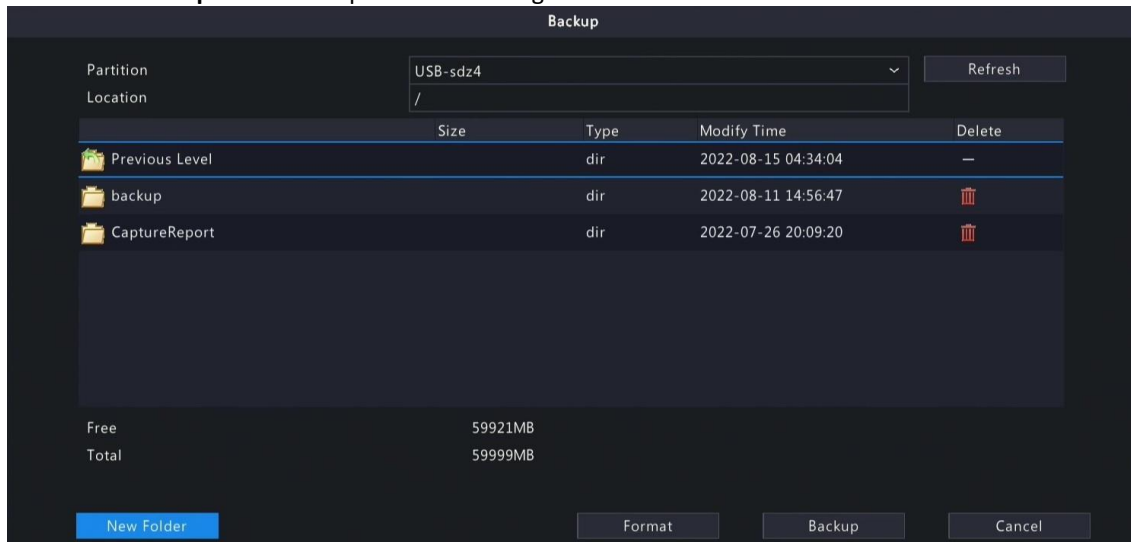

Partition	Location	Size	Type	Modify Time	Delete
USB-sdz4	/				
	Previous Level		dir	2022-08-15 04:34:04	—
	backup		dir	2022-08-11 14:56:47	
	CaptureReport		dir	2022-07-26 20:09:20	

Free 59921MB

Total 59999MB

New Folder Format Backup Cancel

6. Select the partition and storage path, and then click **Backup**. You can also create a new folder for the recording(s) by clicking **New Folder**.


 Note:

- Click **Format** to format the USB device. A USB device with more than 2TB capacity can only be formatted to NTFS, with 2TB or less capacity can be formatted to NTFS or FAT32. Only certain DVRs can format a USB device with more than 2TB capacity.
- During backup, a progress bar is displayed to indicate the progress (e.g., Exporting X/Y), where X indicates the current number being backed up, and Y indicates the total number of recordings. To stop the backup, click **Cancel**.
- A backup file is named in this format: Camera ID_S recording start time_E recording end time.file extension. For example, D1-S20220823000400_E20220823003148.mp4, where S means the start time, and E means the end time.


Video Clip Backup

Refers to clipping a recording and saving it to a USB storage device.


1. Right-click and select **Playback** to go to the **Playback** page.

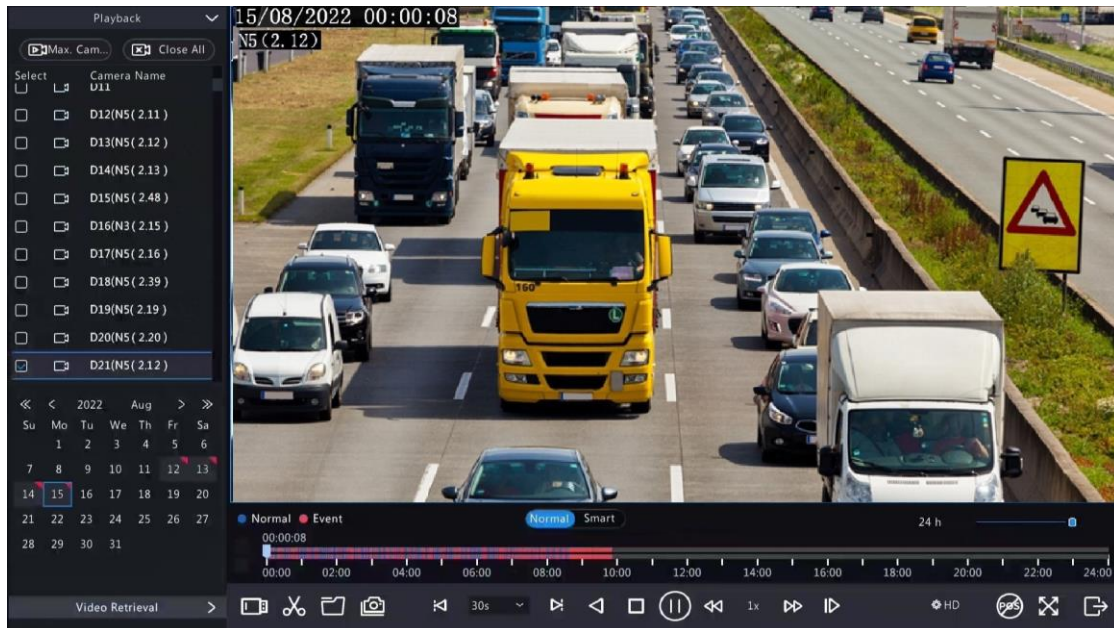

2. Click  to select HD or SD on the playback toolbar. The default is HD.
3. Select the desired camera to play the recorded video. Click  to clip the video during playback. Click  to save the video clip
4. Click  to view the video clip in the **Video Clip** tab.

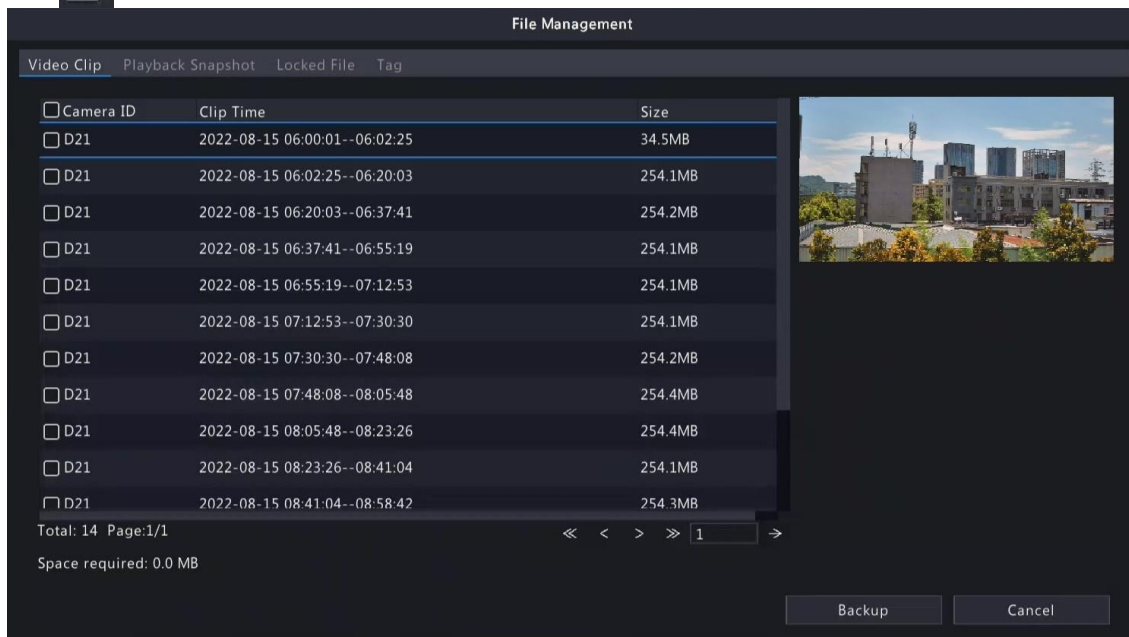

5. Select the desired video clip(s) and then click **Backup**.

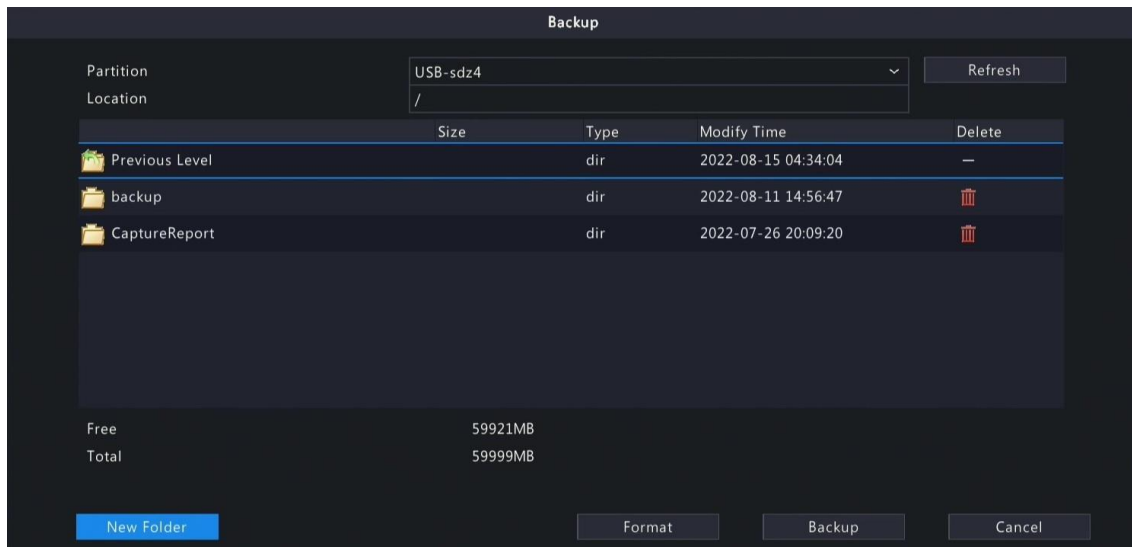

6. Select the partition and storage path, click **Backup**. Then the recordings are saved to the specified path on the storage device. You can also create a new folder for the recording(s) by clicking **New Folder**.

8.2 Image Backup


Image backup refers to backing up images stored on the DVR's hard disk to a USB storage device.

 **Note:** The default format of image backup is *.JPG.

Normal Snapshot Backup

Refers to backing up scheduled snapshot, manual snapshot, and event-triggered snapshot.

1. Go to **Menu > Backup > Image > Snapshot Backup**.

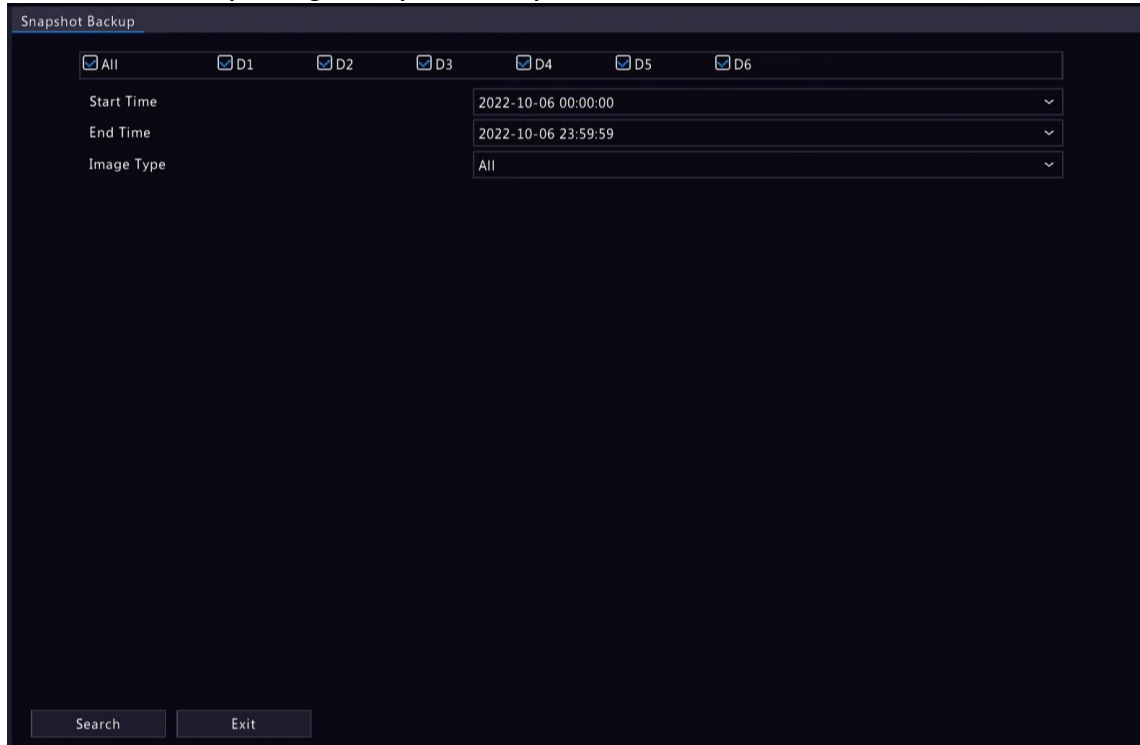

Snapshot Backup						
☒ All	☒ D1	☒ D2	☒ D3	☒ D4	☒ D5	☒ D6
Start Time	2022-10-06 00:00:00					
End Time	2022-10-06 23:59:59					
Image Type	All					
Search Exit						

2. Select the desired camera(s). All cameras are selected by default.
3. Set search conditions, including the image type, start time, and end time.
4. Click **Search**. Search results are displayed. The image displayed on the right is from the first result in the list by default.

Search Results

☐ Camera ID
 Time
 Size

☐ D21
 2022-08-15 00:00:35
 161KB

15/08/2022 00:00:37

Resolution: 1920 x 1080

Total: 1 Page:1/1

<< < > >> 1 >

Space required: 0 KB

Backup All

Backup

Cancel


 **Note:** The image resolution depends on the resolution from the output interface and the number of windows displayed when the snapshot is taken.

5. Choose one way to back up image(s) as needed.
 - To back up one or more images, select the desired image(s), and then click **Backup**.
 - To back up all the images in the list, click **Backup All**.
6. Select the partition and storage path, click **Backup**. Then the images are backed up to the specified path on the storage device. You can also create a new folder for the image(s) by clicking **New Folder**.


Playback Snapshot Backup

Refers to backing up snapshots that are taken during playback to a USB storage device.


1. Go to the **Playback** page.

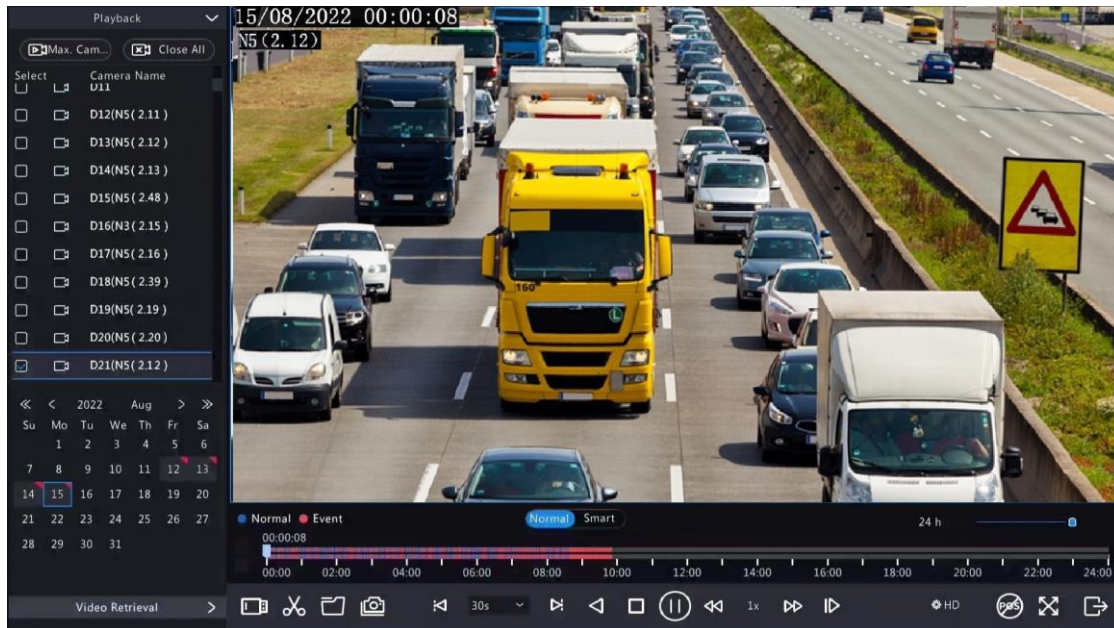

2. Click  to select HD or SD on the playback toolbar. The default is HD.
3. Select the desired camera to play the recorded video. Click  to take a snapshot during the playback.
4. To view the saved snapshot(s), click .

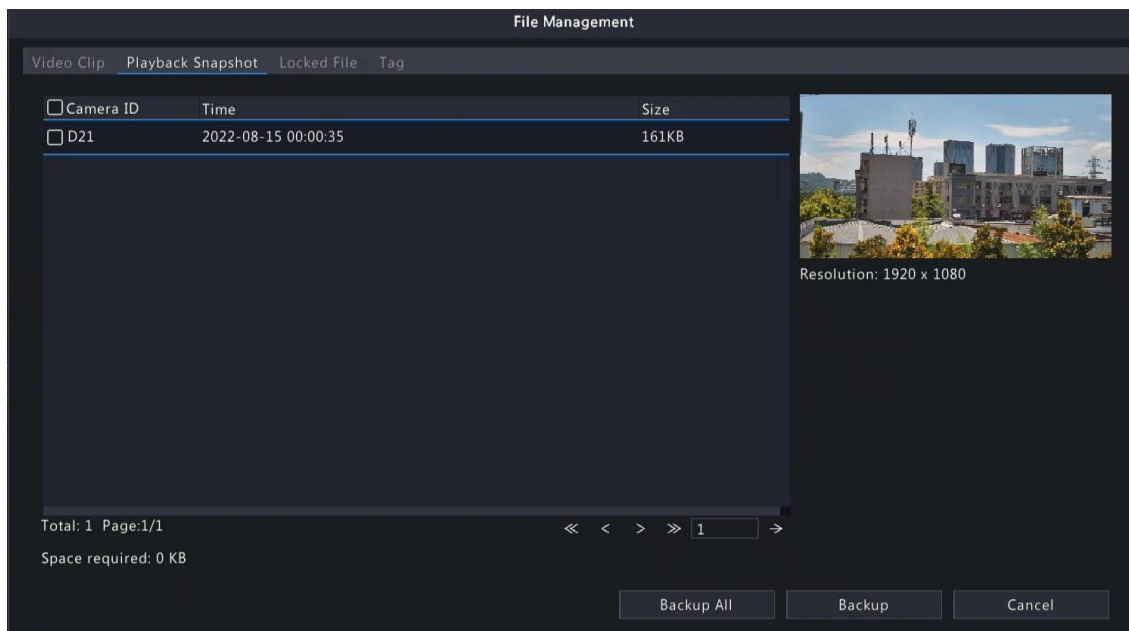

5. Select the desired snapshot(s) and then click **Backup**.

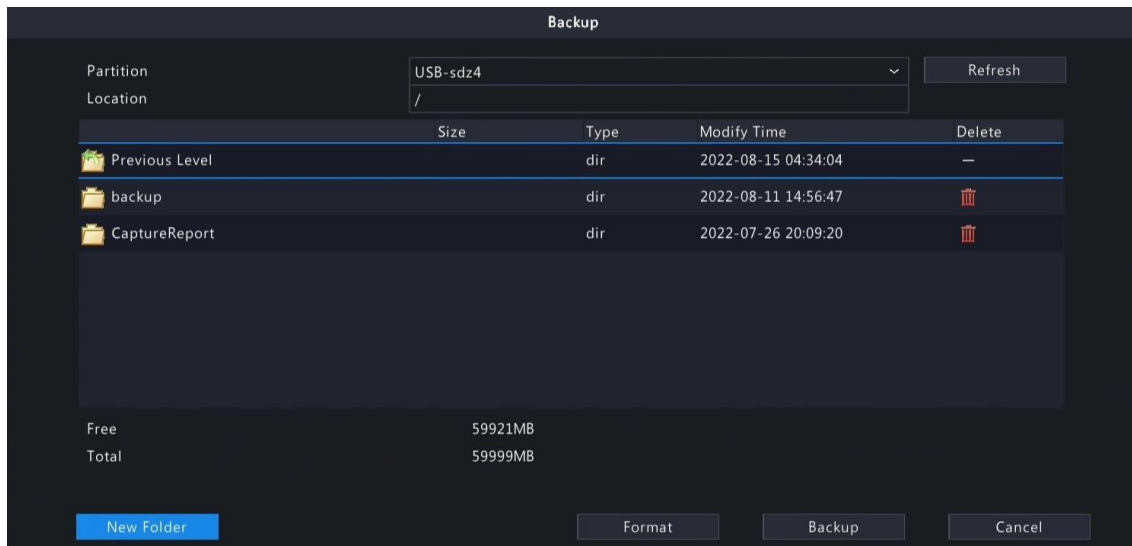

6. Select the partition and storage path, and then click **Backup**. The snapshots are saved in the specified path on the storage device. You can also create a new folder for the snapshot(s) by clicking **New Folder**.

9 Storage

Configure disk storage parameters.


 **Note:** You can configure the storage mode under **Menu > Camera > Encoding**.

9.1 Recording Schedule

Make a recording schedule.

A 24/7 normal recording schedule is enabled by default. You can modify the schedule by drawing or editing as needed.


Go to **Menu > Storage > Recording Schedule**. Select the camera for which you want to make a recording schedule.

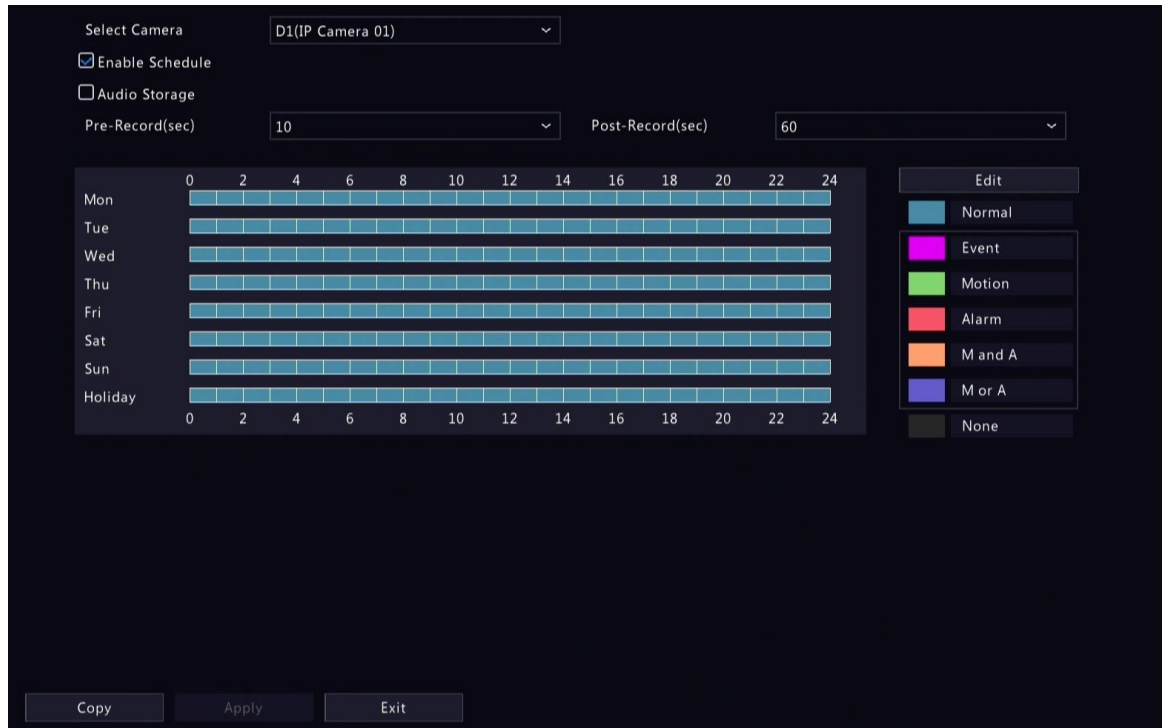

The interface shows the 'Recording Schedule' configuration for 'D1(IP Camera 01)'. It includes checkboxes for 'Enable Schedule' (checked) and 'Audio Storage' (unchecked). Below these are dropdowns for 'Pre-Record(sec)' (10) and 'Post-Record(sec)' (60). The main area is a 24-hour timeline grid for each day of the week (Mon-Sun) and a 'Holiday' row. A legend on the right lists recording types: Normal (blue), Event (red), Motion (green), Alarm (yellow), M and A (orange), M or A (purple), and None (grey). At the bottom are 'Copy', 'Apply', and 'Exit' buttons.

Draw a Schedule

1. Select a recording type.

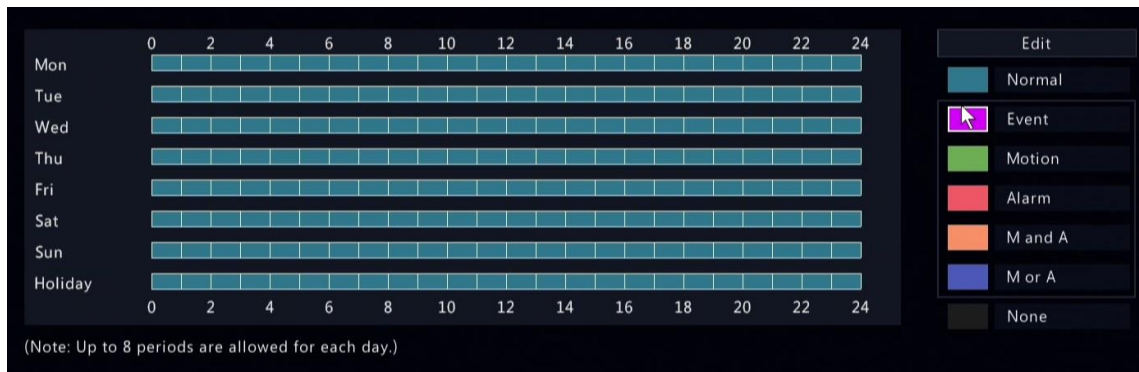

This image shows the same interface as above, but with the 'Event' recording type selected in the legend. A note at the bottom states: '(Note: Up to 8 periods are allowed for each day.)'

Recording Type	Description
Normal	Records video during specified time periods.
Event	Records video in the event of an event-triggered alarm.
Motion	Records video in the event of motion.
Alarm	Records video in the event of alarm input. Configure Alarm Input first before making an alarm schedule.

Recording Type	Description
M and A	Records video when motion and alarm input occur simultaneously.
M or A	Records video when motion or alarm input occurs.
None	No recording schedule.

- Drag on the time schedule to specify time periods for the recording type. The figure below shows a recording schedule with event recording from 18:00 to 24:00 on Monday and Tuesday, and normal recording during the rest of the time.




- Click **Apply**.

Edit a Schedule

- Click **Edit**.

2. Select a day.

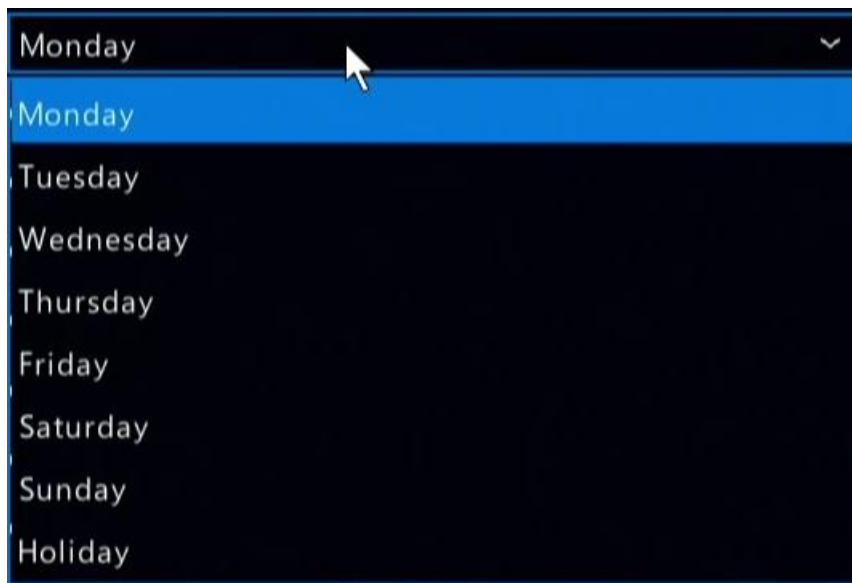


 **Note:** Before you select **Holiday**, go to **System > Time > Holiday** and complete the holiday settings.

3. Clear the **All Day** check box. As a 24/7 normal recording schedule is enabled by default, you cannot modify the schedule unless **All Day** is unchecked.
4. Set time periods and the corresponding recording types.

A screenshot of the 'Edit' dialog box. At the top, there's a 'Select Day' dropdown menu set to 'Monday'. Below it, there's an 'All Day' checkbox which is unchecked. To the right, there's a 'Type' dropdown menu set to 'Normal'. Below these, there are eight rows of time period settings. Each row has two time range selectors (e.g., '00:00' to '18:00') and a 'Type' dropdown menu. The first row's time range is '00:00' to '18:00' with 'Type' set to 'Normal'. The second row's time range is '18:00' to '24:00' with 'Type' set to 'Event'. The remaining six rows have time ranges from '00:00' to '00:00' (representing 00:00 to 24:00) with 'Type' set to 'Normal'. At the bottom, there's a 'Copy To' section with checkboxes for 'All', 'Mon', 'Tue', 'Wed', 'Thu', 'Fri', 'Sat', 'Sun', and 'Holiday'. The 'Mon' checkbox is checked, and the 'Holiday' checkbox is highlighted in blue. 'OK' and 'Cancel' buttons are at the bottom right.

5. To apply the same settings to other days, select the desired day(s) after **Copy To**.
6. Click **OK**.

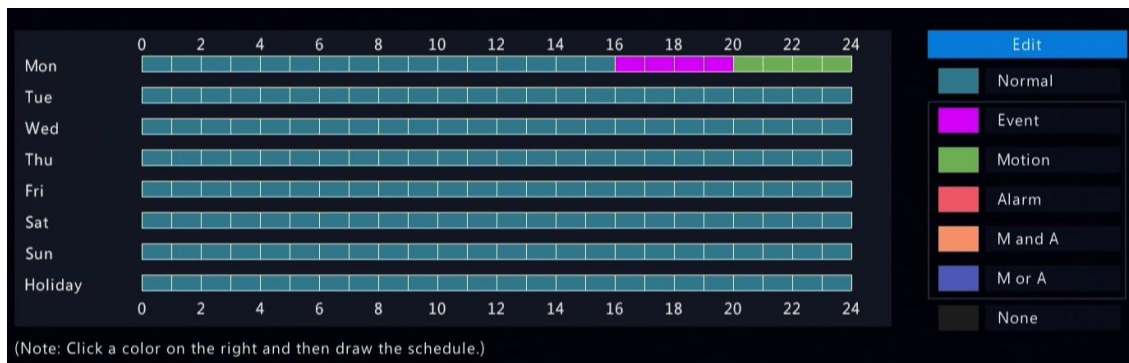

7. Click **Apply**.

Other Settings

Item	Description
Pre-Record	The duration of video to be recorded before an alarm. The default value is 10s.
Post-Record	The duration of video to be recorded after an alarm. The default value is 60s.
Audio Storage	Set whether to record audio. Audio is not recorded by default.

9.2 Disk Management


Configure disk usage and property, add external disks, and format disks.



Note:

- Before you start, make sure all disks are installed properly.
- Only admin can format disks and configure the disk property.

Go to **Menu > Storage > Hard Disk**.

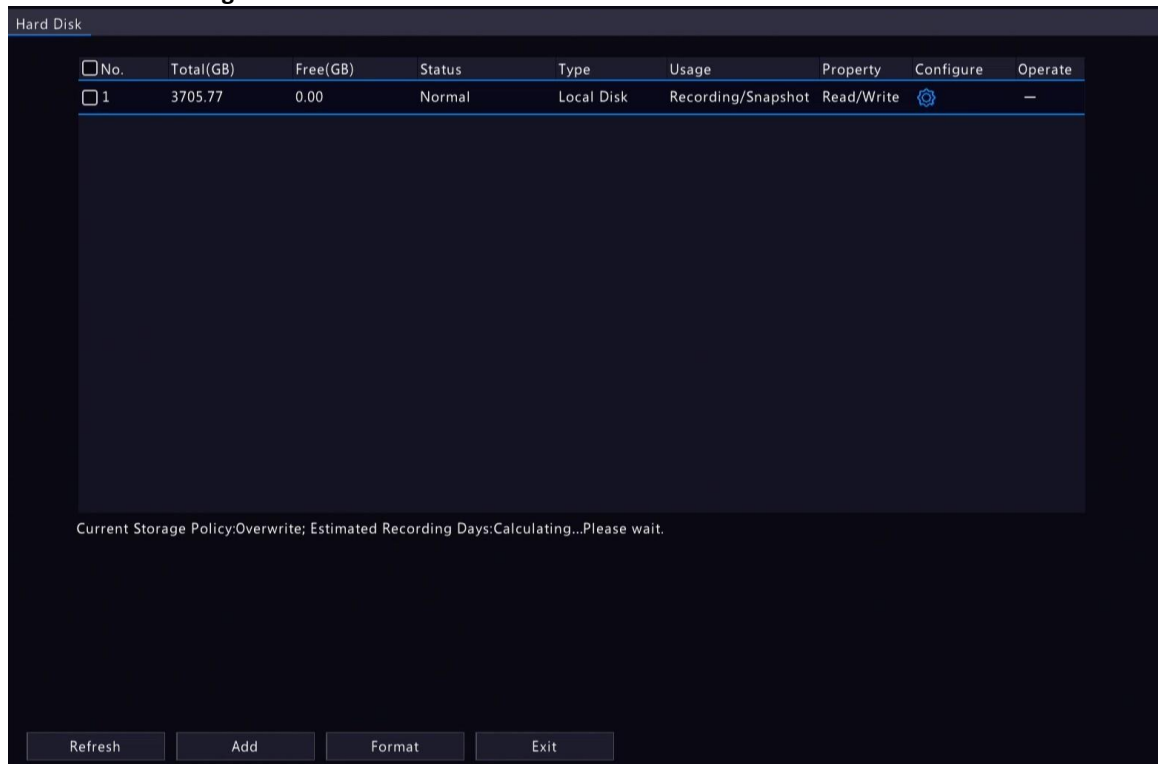

Configure the Disk Usage and Property

1. Click  for the disk to edit.



2. Select the usage and property. You can only configure the usage of NAS and eSATA.

Usage	Description
Recording/Snapshot	Used to automatically store recordings or snapshots.

Property	Description
Read/Write	The disk supports recording/snapshot storage, recording playback and snapshot retrieval.
Read Only	The disk only supports recording playback and snapshot retrieval and does not support recording/snapshot storage.

- Click **OK**.

Add an External Disk

You can add external disks to the device, including NAS, eSATA, and disk enclosure. eSATA disks and disk enclosures are automatically added when connected to the device. The following describes how to add a NAS.

- Click **Add**.

- Enter the NAS server address and directory.
- Click **Add**.

Format a Disk

Formatting a disk will erase all data stored on it. Please handle with caution.

- Select the disk you want to format.
- Click **Format**.
- A confirmation message appears.
 - Local disk: Click **Yes**.
 - External disk: Select the files you want to format.

Other Operations

Click / to unmount/mount an eSATA disk.

9.3 Disk Group


You can group disks and allocate a disk group for videos and images from a specified camera to meet the different storage duration requirements of cameras. Different arrays can be assigned to different disk groups. See [Space Allocation](#) for details.



Note:

- Redundant disks cannot be assigned to any disk group.
- Disk group information will be initialized if any disk in the group is formatted.

1. Go to **Menu > Storage > Disk Group**.
2. Select the **Enable Disk Group** check box.

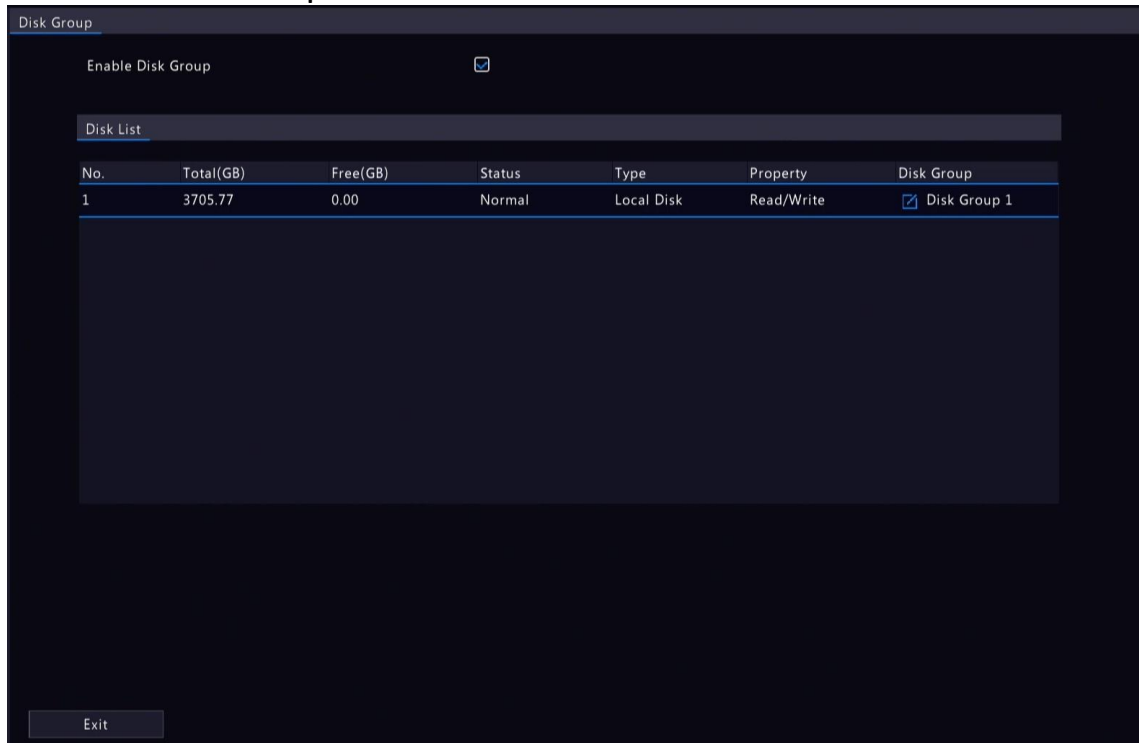

3. Click



4. Select a disk group for the disk.
5. Click **Apply**.

9.4 Space Allocation

Allocate storage space for videos and images from a specified camera.

1. Go to **Menu > Storage > Allocate Space**.



Select Camera: D1(01)

Used Recording Space(GB): 31

Used Image Space(GB): 0

Select Group: Disk Group 1

Disk Capacity: 3705 GB free of 3705 GB

Group Capacity: 3705 GB free of 3705 GB

Max Recording Space(GB): 0

Max Image Space(GB): 0

Buttons: Copy, Apply, Exit

2. Select a camera, select a disk group for storage by the camera, and allocate storage space for videos and images from this camera on the disk group.


Space Type	Description
Recording Space	Used to store first stream videos, smart snapshots, POS data, people flow data, and heat map images.
Image Space	Used to store common snapshots, such as snapshots captured by schedule or manually.

3. Click **Apply**.
4. (Optional) Click **Copy** to apply the same settings to other camera(s).

9.5 Advanced Settings

Configure the storage policy when the storage is full.

1. Go to **Menu > Storage > Advanced**.



2. Select whether to overwrite the existing data or stop storage when the storage is full.

When HDD Full	Description
Overwrite	The disk space is divided into allocated space and remaining space according to whether the disk is used for storage by cameras. • If a camera is not allocated storage space, it will use the remaining disk space, and its oldest data will be overwritten when the remaining space is used up.  Note: As the remaining disk space is variable and older recordings may be overwritten due to insufficient storage space, please allocate storage space with caution. For example, on a device with 20G disk capacity and two cameras, if camera 1 is allocated 10G, camera 2 will use the remaining 10G if it is not allocated storage space. In this case, you can view the last 5 days of recordings from camera 2. However, if you add a new camera to the device, there will be less storage space available to camera 2, and fewer days of recordings can be viewed. • If a camera is allocated storage space, its oldest data will be overwritten when the allocated space is used up.
Stop	This option is only effective to cameras that have been allocated storage space. When enabled, if the allocated space of a camera is used up, new recordings/snapshots will not be saved.

10 Alarm Configuration

Set alarm rules and alarm-triggered actions to alert users when an alarm occurs.

10.1 Motion Detection

Motion detection detects motions in specified grids on the image. An alarm is reported when detection rules are triggered.


Note:

- The ultra motion detection may be unavailable to certain devices.
- The parameters may vary with DVR model.
- To configure ultra motion detection, enable the **Ultra Motion Detection** mode in [Analyzer Configuration](#).

1. Go to **Menu > Alarm > Motion Detection**.
2. Select the desired camera and enable motion detection.
3. Select the detection mode: **Motion** or **Ultra Motion Detection**.

Motion Detection

1. Select the detection mode as **Motion**.

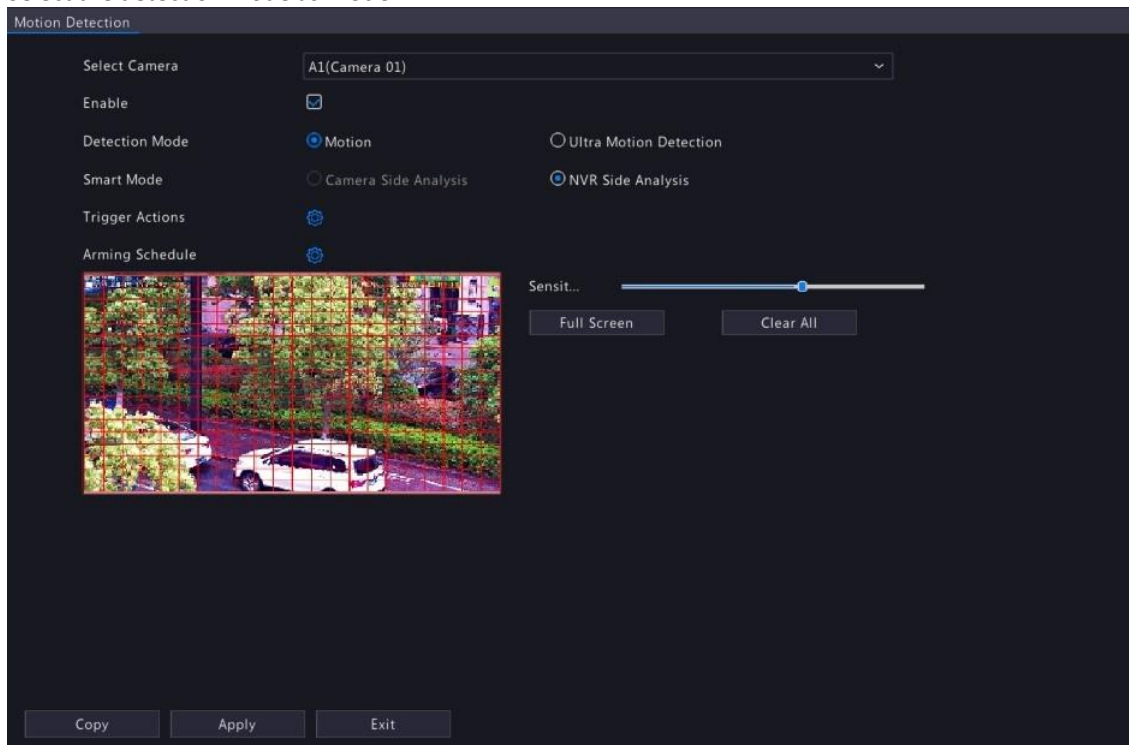

2. Set the detection area. The default is the full screen. You can adjust grid detection areas as needed.

- To erase grids, click or drag on grid areas.
- To redraw grids, click **Clear All**, and then click or drag on blank areas to draw grids.
- To detect the full screen, click **Full Screen**

Note: When a moving object is detected, the grids where the object appears on the left-side image are filled by .

3. Drag the slider to adjust detection sensitivity. The higher the sensitivity, the more likely small motions will be detected, and the more likely false alarms will occur. Set based on the scene and your actual needs.
4. Set the alarm-triggered actions and arming schedule. Click the corresponding  to go to the **Trigger Actions** page and **Arming Schedule** page, respectively. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
5. (Optional) To apply the same settings to other cameras, click **Copy** and select the desired parameter(s) and camera(s).


Note: The settings of analog camera can only be copied to analog cameras, and the settings of digital camera can only be copied to digital cameras.

6. Click **Apply**.

Ultra Motion Detection

Ultra motion detection detects motions in specified grids on the image, and judges that the motion object is pedestrian or motor vehicle. An alarm is reported when detection rules are triggered.

1. Select the detection mode as **Ultra Motion Detection**.

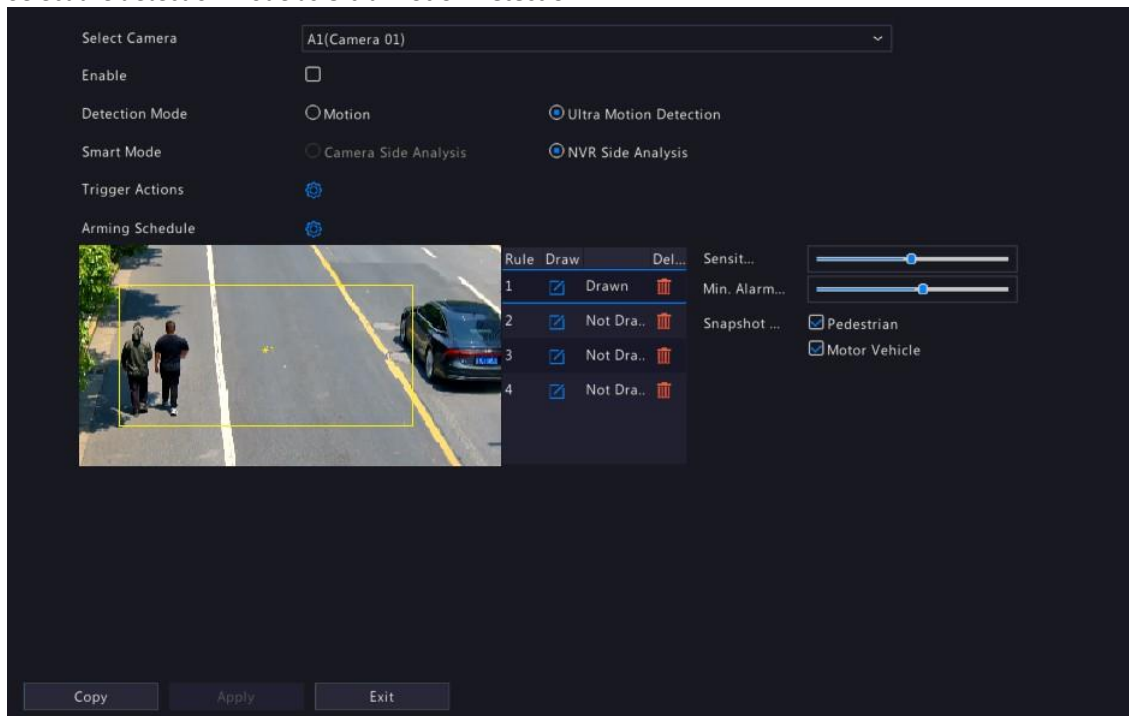

2. Set detection rules. The 4 detection rules shall be set separately. The following takes Rule 1 as an example.

Parameter	Description
Detection Area	Select Rule 1, click , and the full screen is displayed, then draw a detection area. Click on the image and drag to draw a line. Repeat the action to draw more lines to form an enclosed shape as needed. Up to 6 lines are allowed. Right click to exit the full screen.  Note: For a rule in Drawn state, you can click  to redraw a detection area. To delete a detection area, click 
Sensitivity	Set the sensitivity by dragging the slider. The higher the sensitivity, the more likely motion behaviors will be detected, but the false alarm rate will increase.
Min. Alarm Interval (s)	Set the sensitivity by dragging the slider. Alarm interval refers to how frequent the alarm is reported. When a pedestrian or motor vehicle enters the detection area, an alarm will be triggered and reported immediately, and repeated after the alarm interval. The recommended alarm interval is 6s. You can adjust the value as needed.
Snapshot Type	Select the object(s) to be detected, including Pedestrian and Motor Vehicle ,

3. Set the alarm-triggered actions and arming schedule. Click the corresponding  to go to the **Trigger Actions** page and **Arming Schedule** page, respectively. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
4. (Optional) To apply the same settings to other cameras, click **Copy** and select the desired parameter(s) and camera(s).


 **Note:** The settings of analog camera can only be copied to analog cameras, and the settings of digital camera can only be copied to digital cameras.

5. Click **Apply**.

10.2 Video Loss

A video loss alarm is reported when the DVR loses video signals from a camera.

1. Go to **Menu > Alarm > Video Loss**.

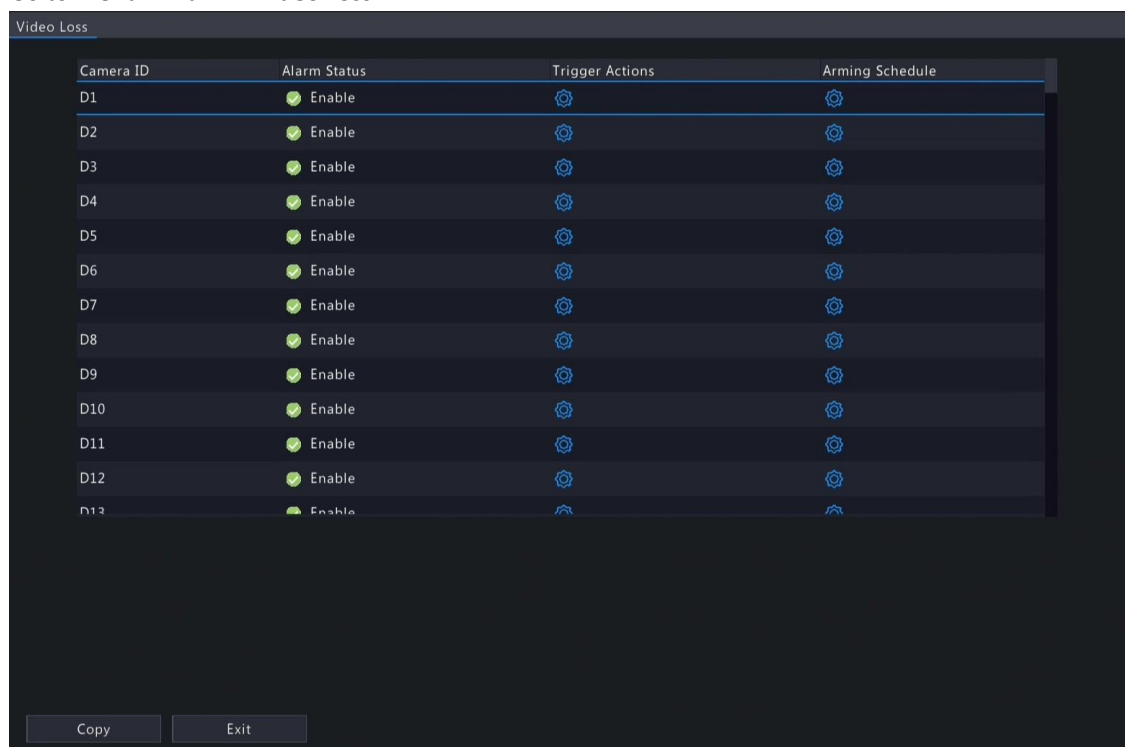

Camera ID	Alarm Status	Trigger Actions	Arming Schedule
D1	 Enable		
D2	 Enable		
D3	 Enable		
D4	 Enable		
D5	 Enable		
D6	 Enable		
D7	 Enable		
D8	 Enable		
D9	 Enable		
D10	 Enable		
D11	 Enable		
D12	 Enable		
D13	 Enable		

Copy Exit

2. Video loss alarm is enabled by default. To disable video loss alarm for a channel, click , which then changes to .
3. Set the alarm-triggered actions and arming schedule. Click the corresponding  to go to the **Trigger Actions** page and **Arming Schedule** page, respectively. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
4. (Optional) To apply the same settings to other cameras, click **Copy** and select the desired parameter(s) and camera(s), and then click **OK**.

10.3 Alarm Input and Output


Configure alarm input and alarm output.

10.3.1 Alarm Input

Configure the alarm mode, arming schedule, and alarm-triggered actions for external alarm input devices.

The external alarm input devices include devices connected to the ALARM IN interfaces on the DVR and the ALARM IN interfaces on the cameras. For example, access control devices.


1. Go to **Menu > Alarm > Input/Output > Alarm Input**.

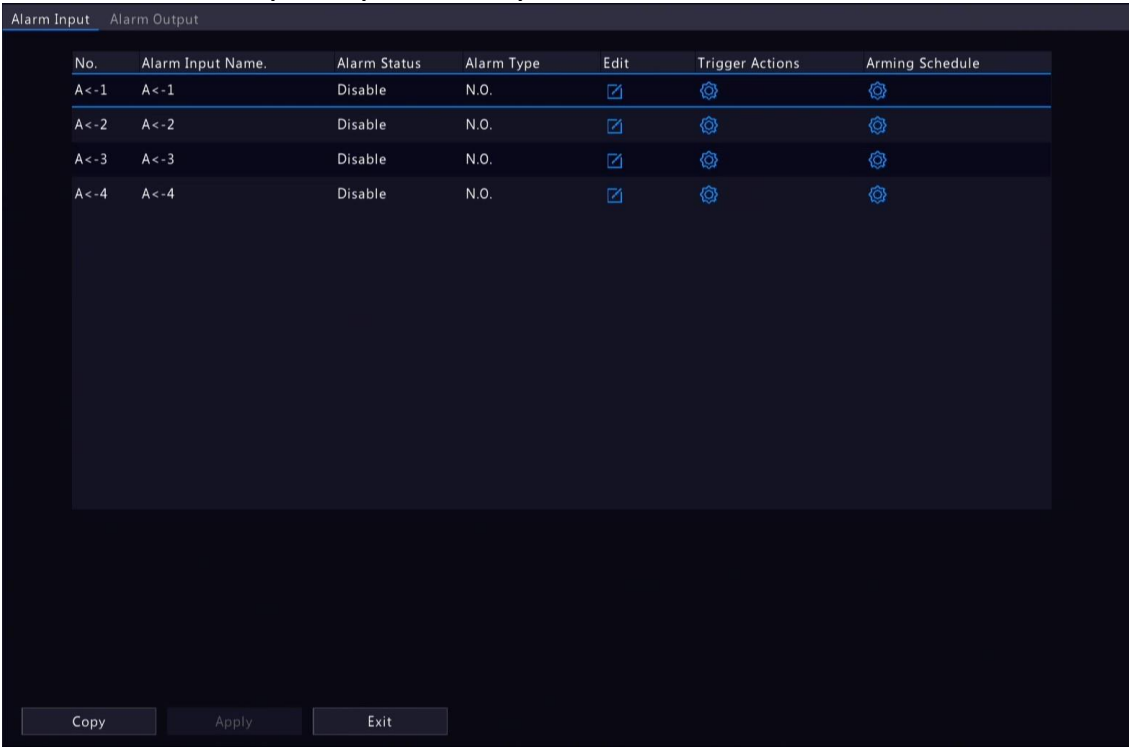

2. Select the alarm input channel to be set.

- A<-1: **A** refers to the ALARM IN interfaces on the DVR, **1** means the first ALARM IN interface. Likewise, **A <-2** means the second ALARM IN interface on the DVR. The number of ALARM IN interfaces may vary with DVR model. See the device datasheet for specifications.
- D <-1: **D** refers to channels, the number means channel ID. **D<-1** means the alarm input device is connected to the ALARM IN interface of the camera whose channel ID is 1. Likewise, **D <-2** means the alarm input device is connected to the ALARM IN interface of the camera whose channel ID is 2. The number is not displayed if the camera has no ALARM IN interface.

3. Click  to configure alarm input parameters. After configuration, click **OK**

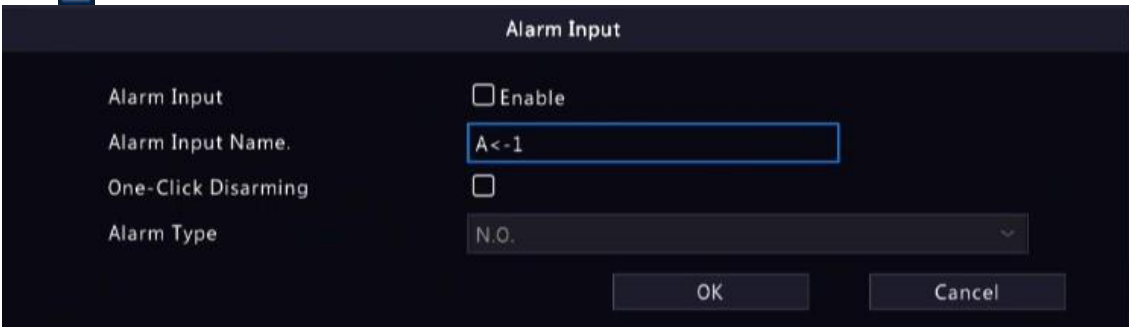

Item	Description
Alarm Input	Select Enable to enable the alarm input.

Alarm Input Name	The default name is the alarm input number. You may rename it as needed.
Item	Description
One-Click Disarming	Select Enable to enable the one-click disarming. When enabled, the configured actions will not be triggered when A<-1 reports alarms.
Alarm Type	This item is applicable when Alarm Input is enabled. The default is N.O. - N.O.: Choose this option if the alarm input device is normally closed. The device opens the circuit to input an alarm, triggers the DVR to open the alarm circuit and report an alarm. - N.C.: Choose this option if the alarm input device is normally opened. The device closes the circuit to input an alarm, triggers the DVR to close the alarm circuit and report an alarm.

- Set the alarm-triggered actions and arming schedule. Click the corresponding  to go to the **Trigger Actions** page and **Arming Schedule** page, respectively. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
- (Optional) To apply the alarm input parameters to other cameras, click **Copy**, and select the desired channel(s) or **Copy To**, and then click **OK**.
- Click **Apply**.

10.3.2 Alarm Output

Configure the alarm mode and arming schedule for external alarm output devices.

The external alarm output devices include devices connected to the ALARM OUT interfaces on the DVR and the ALARM OUT interfaces on the cameras, such as alarm light and alarm bell.

- Go to **Menu > Alarm > Input/Output > Alarm Output**.

Alarm Input		Alarm Output			
Alarm Output No.	Default Status	Delay	Edit	Arming Schedule	
A->1	N.O.	30(s)			
A->2	N.O.	30(s)			
A->3	N.O.	30(s)			
A->4	N.O.	30(s)			
A->5	N.O.	30(s)			
A->6	N.O.	30(s)			
A->7	N.O.	30(s)			
A->8	N.O.	30(s)			
D1->1	N.O.	30(s)			
D2->1	N.O.	30(s)			
D3->1	N.O.	30(s)			
D7->1	N.O.	30(s)			

Copy
Apply
Exit

- Select the alarm output channel to be set.
 - A>-1: **A** refers to the ALARM OUT interfaces on the DVR, **1** means the first ALARM OUT interface. **A <-2** means the second ALARM OUT interface on the DVR, and so on. The number of ALARM OUT interfaces may vary with DVR model. See the device datasheet for specifications.
 - D >-1: **D** refers to channels, the number means channel ID. **D->1** means the alarm output device is connected to the ALARM OUT interface of the camera whose channel ID is 1. Likewise, D->2 means the alarm output device is connected to the ALARM OUT interface of the camera whose channel ID is 2. The

number is not displayed if the camera has no ALARM OUT interface.

- Click  to configure alarm output parameters. After configuration, Click **OK**.



The 'Alarm Output' configuration window has a dark background. It contains four settings: 'Default Status' with a dropdown menu showing 'N.O.', 'Alarm Duration' with radio buttons for 'Custom' (selected) and 'Maximum', 'Delay(s)' with a text input field containing '30', and 'Relay Mode' with a dropdown menu showing 'Bistable'. At the bottom right are 'OK' and 'Cancel' buttons.

Item	Description
Default Status	Select the default status from the drop-down list. The default is N.O. - N.O.: Choose this option if the external device is normally open. - N.C.: Choose this option if the external device is normally closed.
Alarm Duration/Delay(s)	Set the alarm duration, that is, the length of time that an output alarm lasts after the alarm is ended. - Custom: When enabled, you can set the length of time as needed. After an alarm is cleared on the DVR, the third-party alarm device continues alarm till the end of the set duration.  Note: The delay period supported by channels may vary. For most channels, the valid range is 5 to 3600s. For certain channels, the valid range is 1 to 3600s. - Maximum: When enabled, you cannot set the delay period. The third-party alarm device continues alarm until you clear it manually.
Relay Mode	Set the relay mode, including monostable and bistable. The default is bistable.  Note: Set relay mode to better adapt to third-party alarm devices such as alarm lights. Please set the relay mode according to the trigger mode of the third-party alarm device. - Monostable: The circuit can only remain in one stable state. When a trigger pulse is applied, the circuit switches to another state, and then automatically switches back to the original stable state. The circuit will repeat the same actions when the next trigger pulse arrives. - Bistable: The circuit can remain in two stable states. When a trigger pulse is applied, the circuit switches to another state, and remains in this state after the trigger pulse is removed. When the next trigger pulse is applied, the circuit switches back to the other stable state and remains in that state.

- Set the alarm-triggered actions and arming schedule. Click the corresponding  to go to the **Trigger Actions** page and **Arming Schedule** page, respectively. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
- (Optional) To apply the alarm output parameters to other cameras, click **Copy**, and select the desired channel(s) or **Copy To**, and then click **OK**.
- Click **Apply**.

10.4 Thermal Imaging


This function measures body temperature based on infrared imaging and is suitable for high traffic areas such as hospitals, stations, and shopping malls.

 **Note:** To use this function, please enable face detection in the visible light channel first. To perform face recognition, please enable face comparison at the same time. See [Face Detection](#) for details.

1. Add a thermal imaging camera.

(1) Go to **Menu > Camera > Camera > Camera**.

(2) Click **Custom Add** to go to the **Add IP Camera** page.

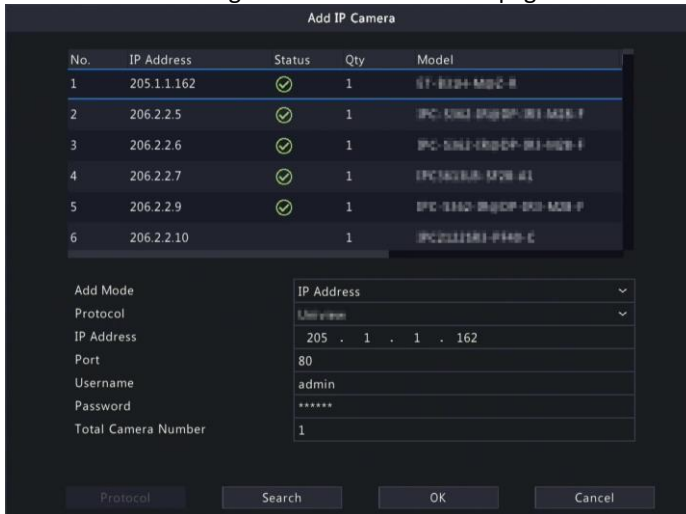

No.	IP Address	Status	Qty	Model
1	205.1.1.162	✓	1	HT-800H-M02-B
2	206.2.2.5	✓	1	IPC-5002-0000P-001-M02-F
3	206.2.2.6	✓	1	IPC-5002-0000P-001-M02-F
4	206.2.2.7	✓	1	IPC-5002-0000P-001-M02-F
5	206.2.2.9	✓	1	IPC-5002-0000P-001-M02-F
6	206.2.2.10	✓	1	IPC-5002-0000P-001-M02-F

Add Mode: IP Address:

Protocol: Username:

IP Address: 205 . 1 . 1 . 162

Port: 80

Username: admin

Password: *****

Total Camera Number: 1

Protocol Search OK Cancel

(3) Set the add mode to **IP Address**, select a protocol (Uniview or Private), enter the IP address, port, username, and password. There are 2 channels in total, including a visible light channel and an infrared light channel.

2. Configure thermal imaging parameters.

(1) Go to **Menu > Alarm > Thermal Imaging > Body Temperature Measurement**.

(2) Select the infrared light channel and enable **Body Temperature Measurement**.



Select Camera: D6(IP Camera 06)

Body Temperature Measurement: ☒

Measurement Mode: Measure Internal Temperature

Alarm Threshold(30°C~45°C): 37.3

Black Body Temperature(-40°C~150°C): 36.0

Correction Temperature(-10°C~10°C): 0.0

Environment Temperature(-40°C~100°C): 25.0

Draw Black Body Position	Draw	Delete
1	☒	☐

Note: To enable body temperature measurement, you need to enable face detection in Face Detection page first.

Note: To configure temperature alarm parameters, you need to go to Temperature alarm page.

OK Cancel

 **Note:** To use this function, please enable face detection first. See [Face Detection](#) for details.

(3) Set the black body position. Click , drag to draw a bounding box on the left side image.

 **Note:** The size of the box should be the same as that of the highlighted part of the black body, otherwise measurement results may be affected.

(4) Set the relevant parameters.


Item	Description
Measurement Mode	- Measure Internal Temperature: Calculated from the measured body surface temperature by formulas. - Measure Body Surface Temperature: Measured directly by the thermal imaging camera.
Alarm Threshold (30°C~45°C)	An alarm occurs when the measured temperature exceeds the threshold. The default is the normal body temperature of 37.3 °C.
Black Body Temperature (-40°C~150°C)	Set the same temperature as the black body temperature. 36 °C is recommended. For more information, refer to the camera's site survey and commissioning guide.
Correction Temperature (-10°C~10°C)	Correct temperature measurement errors. Devices have been calibrated before leaving the factory. You do not need to set the correction temperature. If in harsh conditions, such as high or low temperature, you may configure it according to the camera's site survey and commissioning guide.
Environment Temperature (-40°C~100°C)	The environment temperature of the camera will affect the temperature measurement results. The higher the environment temperature, the higher the measurement result. The system can calculate the actual temperature automatically based on the entered environment temperature. 25°C is recommended.

(5) Set alarm-triggered actions in the **Temperature Alarm** page. See [Temperature Alarm](#) for details.

(6) Click **OK**.

3. View temperature measurement results.

In the preview page, click  on the screen toolbar to go to the **Epidemic Control** page. Then you can view the detailed information, including counting statistics, live video, real-time data, and history data.

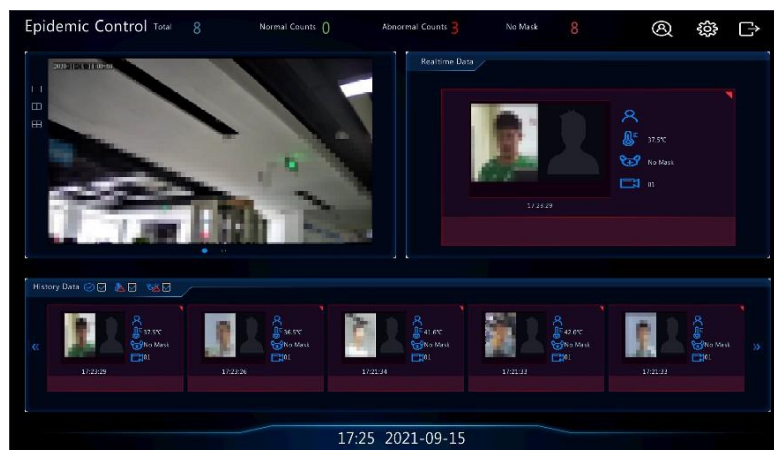

10.5 Temperature Alarm


An alarm occurs when an abnormal body temperature is detected.



Note:

- This function is only available for thermal imaging cameras.
- Before using this function, please enable body temperature measurement in the **Temperature Measurement** page first. See [Thermal Imaging](#) for details.

1. Go to **Menu > Alarm > Temperature Alarm > Body Temperature Alarm**.

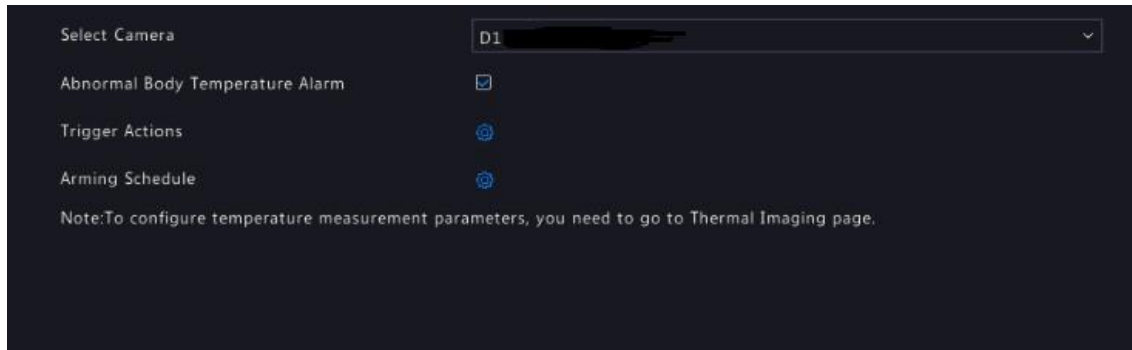

2. Select the infrared light channel and enable **Abnormal Body Temperature Alarm**.
3. Set the alarm-triggered actions and arming schedule. Click the corresponding  to go to the **Trigger Actions** page and **Arming Schedule** page, respectively. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
4. Click **OK**.

10.6 Alert

Configure alert actions for device abnormal events. The DVR reports an alarm when an event occurs.

1. Go to **Menu > Alarm > Alert**.
2. Select an alert type from the drop-down list.
 - IP Conflict: IP cameras use the same IP address on the network.
 - Network Disconnected: The DVR is disconnected from the network.
 - Disk Offline: No disk or a disk is not properly connected.
 - HDD Abnormal: A disk is in position but cannot work normally.
 - Illegal Access: Incorrect username/password.
 - Hard Disk Space Low: The disk space is about to be used up.
 - Hard Disk Full: The disk space has been used up.
 - Recording/Snapshot Abnormal: Videos/snapshots cannot be stored normally because the disk is offline or abnormal.
3. Set the alert actions, including buzzer, sending email, and pop-up window. See [Alarm-triggered Actions](#) for details.
4. Set the alarm output channel(s). You may select **All** or select specified alarm output channel(s).

Alert

Alert Type: IP Conflict

Buzzer: ☐

Send Email: ☐

Pop-up Window: ☐

Alarm Output: ☐ All

Select	Alarm Output No.
☐	A->1
☐	A->2
☐	A->3
☐	A->4
☐	A->5
☐	A->6
☐	A->7
☐	A->8


Apply Exit

5. Click **Apply**.
6. Repeat the above operations to configure alert actions for other events.

10.7 Audio Detection

Audio detection detects input audio signals. An alarm is reported when an exception is detected. Make sure an audio collection device (e.g., sound pickup) is connected, and audio detection is enabled. See [Audio Configuration](#) for details.

1. Go to **Menu > Alarm > Audio Detection**.

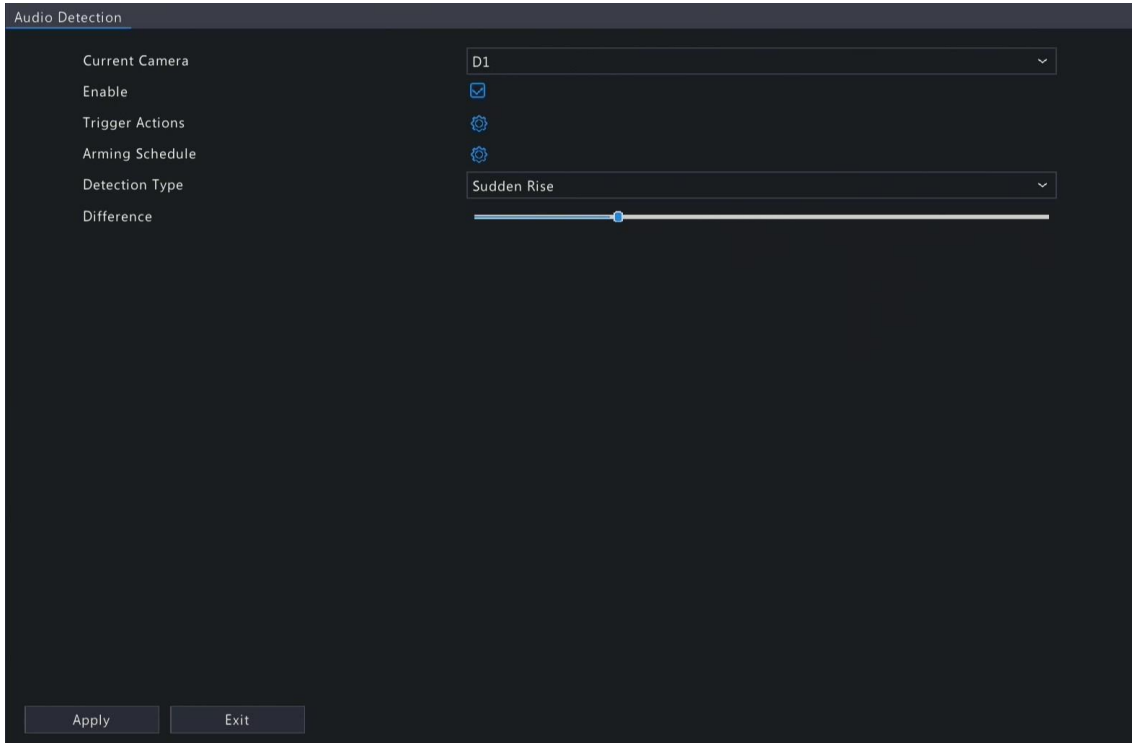

2. Select the desired camera and click **Enable**.
3. Set the alarm-triggered actions and arming schedule. Click the corresponding  to go to the **Trigger Actions** page and **Arming Schedule** page, respectively. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
4. Set audio detection rules.


Item	Description
Detection Type	Select an audio detection type from the drop-down list. • Sudden Rise: An alarm occurs when the rise of volume exceeds the set value. • Sudden Fall: An alarm occurs when the fall of volume exceeds the set value. • Sudden Change: An alarm occurs when the rise or fall of volume exceeds the set value. • Threshold: An alarm occurs when the volume exceeds the set threshold.
Difference/Threshold	Drag the slider to adjust the difference and threshold. • The difference between two sound volumes. An alarm occurs when the rise or fall of volume exceeds the difference (range: 0-400). This item is applicable when the detection type is Sudden Rise, Sudden Fall, or Sudden Change. • Threshold: The limit value of volume. An alarm occurs when the detected volume exceeds the set value (range: 0-400). This item is applicable when the detection type is Threshold.

5. Click **Apply**.

10.8 Buzzer

Configure the alarm duration of the buzzer on the DVR.

1. Go to **Menu > Alarm > Buzzer**.

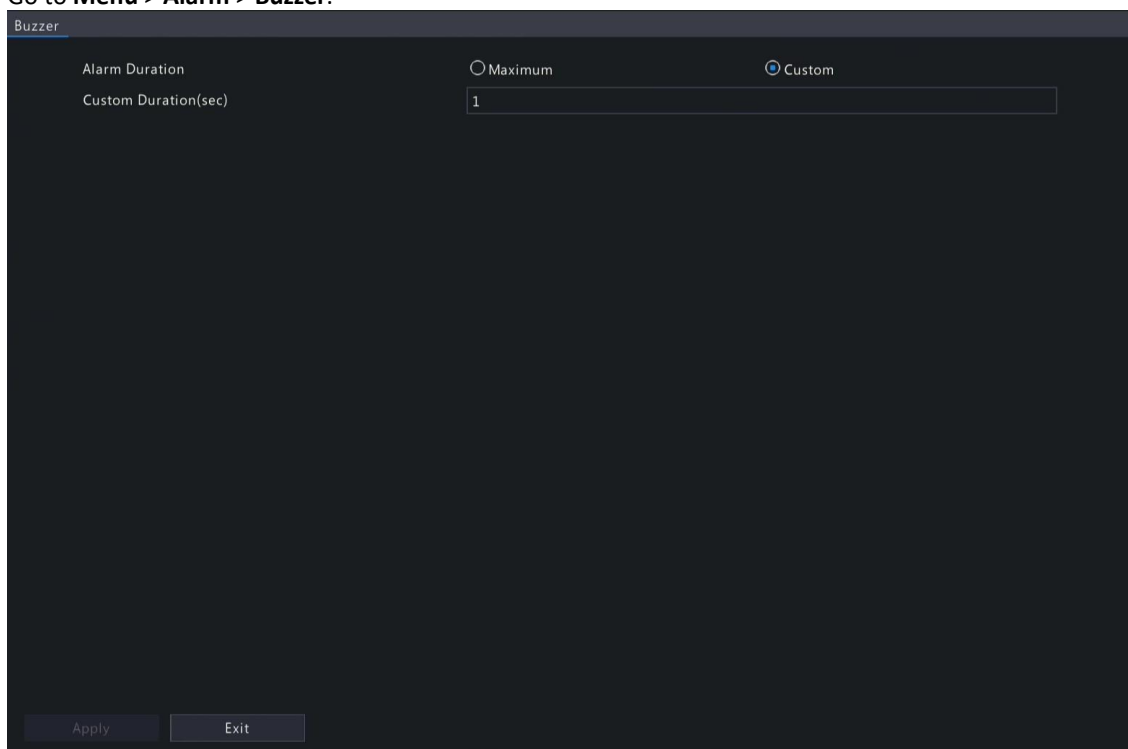

The screenshot shows a configuration window titled "Buzzer". It has two radio buttons: "Maximum" and "Custom". The "Custom" option is selected. Below the radio buttons, there is a text input field labeled "Custom Duration(sec)" with the value "1" entered. At the bottom of the window, there are two buttons: "Apply" and "Exit".

2. Set the alarm duration. The default is 30s.

- **Maximum:** When enabled, you cannot set the alarm duration. When an alarm occurs, the buzzer will alarm continuously until the alarm ends.
- **Custom:** When enabled, you can set how long the buzzer will alarm after it is triggered. The valid range is from 1 to 600(s). When an alarm occurs, the buzzer will alarm continuously within the alarm duration, and stop automatically if the alarm ends first within the duration.

 **Note:** To stop a buzzer alarm manually, right-click in the preview window, select **Manual > Buzzer**. See [Buzzer](#) for details.

3. Click **Apply**.


10.9 People Present Alarm

An alarm occurs when the number of people present in a specified area exceeds the set threshold.

 **Note:** To use this function, make sure that people flow counting is supported by the camera and is enabled in the **VCA** page. See [People Flow Counting](#) for details.

Configure People Present Alarm

1. Go to **Menu > Alarm > People Present Alarm**.

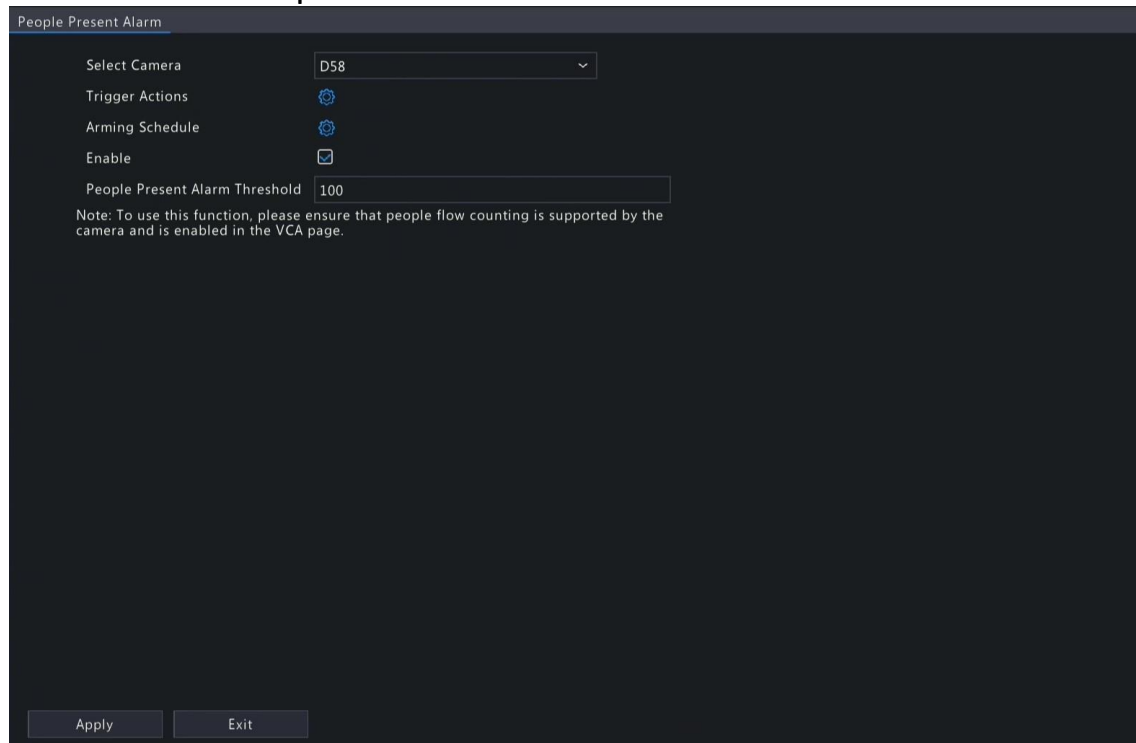

2. Select the desired camera and click **Enable**.
3. Set the alarm-triggered actions and arming schedule. Click the corresponding  to go to the **Trigger Actions** page and **Arming Schedule** page, respectively. See [Alarm-triggered Actions](#) and [Arming Schedule](#) for details.
4. Set the people present alarm threshold, which is the maximum number of people allowed in the monitored area. An alarm occurs when the number of people present exceeds the threshold. The valid range is from 1 to 100,000.
5. Click **Apply**.

View Data

In the preview page, select **People Flow Counting** from the drop-down list in the upper right corner, then you can view the number of people entered, left, and present.




10.10 One-Key Disarming

Cancel alarm-triggered actions of DVRs or IPCs with one click.


NVR Disarming

1. Go to **Menu > Alarm > One-Key Disarming > NVR Disarming**.

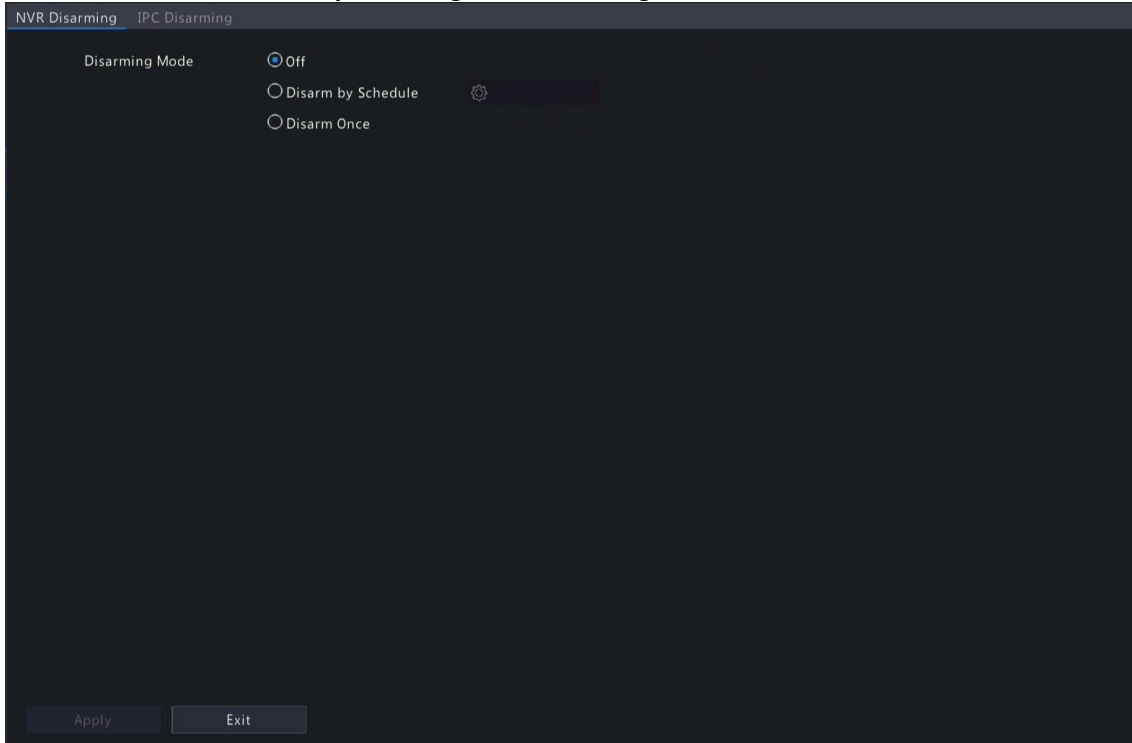

2. Select a disarming mode and configure parameters.

- Off: Disarming is disabled on the DVR.
- Disarm by Schedule: The DVR is disarmed during specific time periods per week.

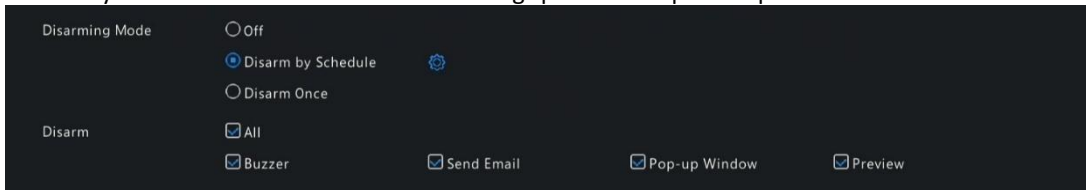


- (1) Click  right to **Disarm by Schedule** and set the disarming periods. Click **OK** to return to the **NVR Disarming** page.

Note:

- Up to 4 disarming periods during one day are allowed.
- To apply the same disarming schedule to other days, select **All** or the intended day(s), and click **OK**.

- (2) Select actions to be disarmed. The default is all actions. See [Alarm-triggered Actions](#) for details.

- Disarm Once: The DVR is disarmed during a specified time period.

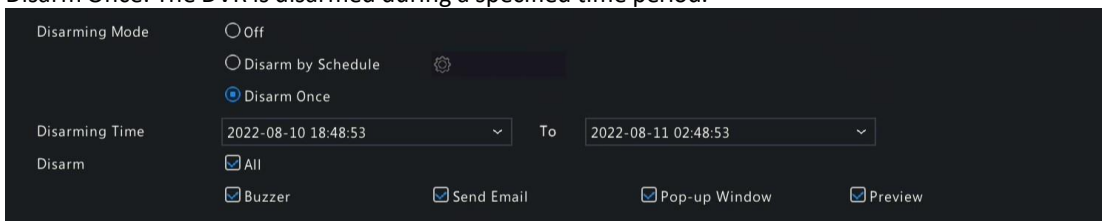

- (1) Select **Disarm Once** and set the disarming start time and end time.

- (2) Select actions to be disarmed. The default is all actions. See [Alarm-triggered Actions](#) for details.

3. Click **Apply**.

IPC Disarming

1. Go to **Menu > Alarm > One-Key Disarming > IPC Disarming**.

NVR Disarming IPC Disarming

Select Camera: D2

Disarming Mode: ☒ Off ☐ Disarm by Schedule ☐ Disarm Once

Copy Apply Exit

2. Select the desired camera.
3. Select a disarming mode and configure parameters.
 - Off: Disarming is disabled on the IPC.
 - Disarm by Schedule: The IPC is disarmed during specific time periods per week.

Select Camera: D2

Disarming Mode: ☐ Off ☒ Disarm by Schedule ☐ Disarm Once

Click  right to **Disarm by Schedule**, and set the disarming periods. Click **OK** to return to the **IPC Disarming** page.

Note:

- Up to 4 disarming periods during one day are allowed.
 - To apply the same disarming schedule to other days, select **All** or the intended day(s), and click **OK**.
 - Disarming by schedule will cancel all the actions configured on the IPC's web interface by default. You can modify the settings on the IPC's web interface.
- Disarm Once: The IPC is disarmed during a specified time period. Select **Disarm Once** and set the disarming start time and end time.

Select Camera: D2

Disarming Mode: ☐ Off ☐ Disarm by Schedule ☒ Disarm Once

Disarming Time: 2022-08-10 18:49:41 To 2022-08-11 02:49:41

4. (Optional) To apply the same settings to other cameras, click **Copy** and select the desired camera(s).
5. Click **Apply**.


10.11 Manual Alarm

Trigger or clear an alarm output manually.

 **Note:** Manual alarm has the highest priority.

Manual Alarm


1. Right click and select **Manual > Manual Alarm**.

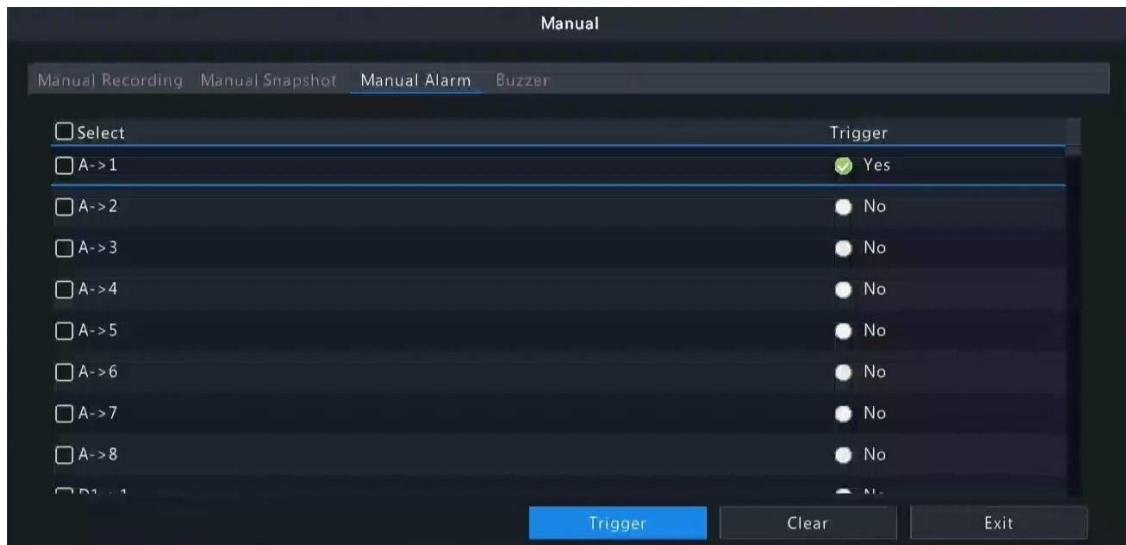

2. Trigger or clear alarm(s) manually.
 - Trigger: Select the channel(s) to be triggered and click **Trigger**, and then  changes to .
 - Clear: Select the channel(s) to be cleared and click **Clear**, and then  changes to .

Buzzer

1. Right click and select **Manual > Buzzer**.

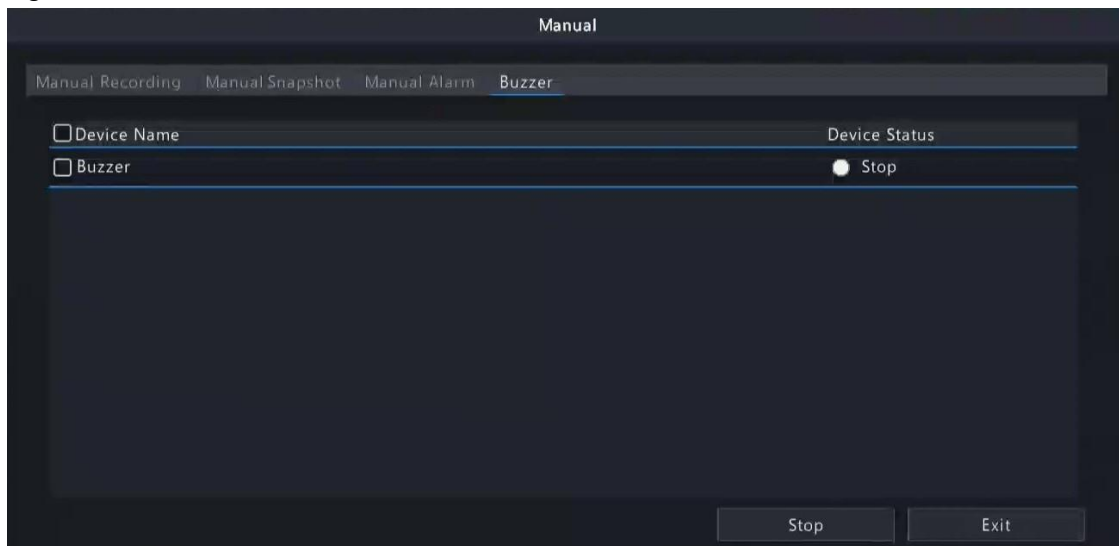

2. To stop the buzzer, select the buzzer (in Started status) and then click **Stop**.

11 System Maintenance

View system operation status to ensure stable system operation.


11.1 System Info

View the basic information and operation status of the device.

11.1.1 Basic Info

View the basic information of the device, including DVR model, firmware version, build date, etc.

1. Go to **Menu > Maintenance > System Info > Basic Info**. View the basic information of the device.

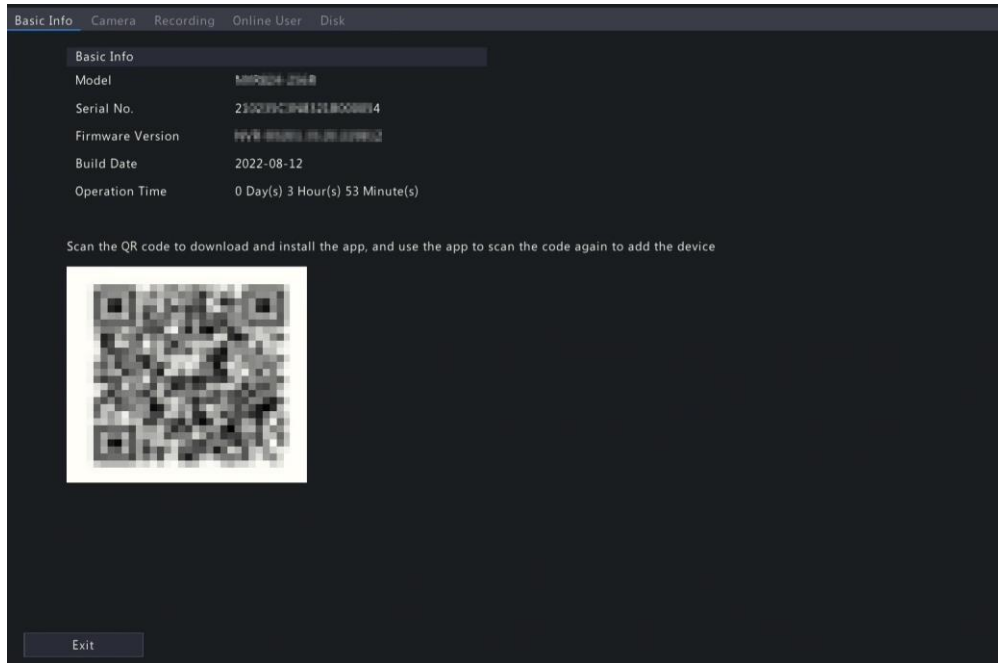


Parameter	Description
Model	DVR model.
Serial No.	Serial number.
Firmware Version	Firmware version of the DVR.
Build Date	Release date of the current firmware version.
Operation Time	Length of time the DVR has been operating since the latest startup.

2. Scan the QR code to download the app and manage the DVR on a mobile phone.

11.1.2 Camera Status

View camera status information.

Go to **Menu > Maintenance > System Info > Camera**. View camera information including name, online/offline status, event type and status.

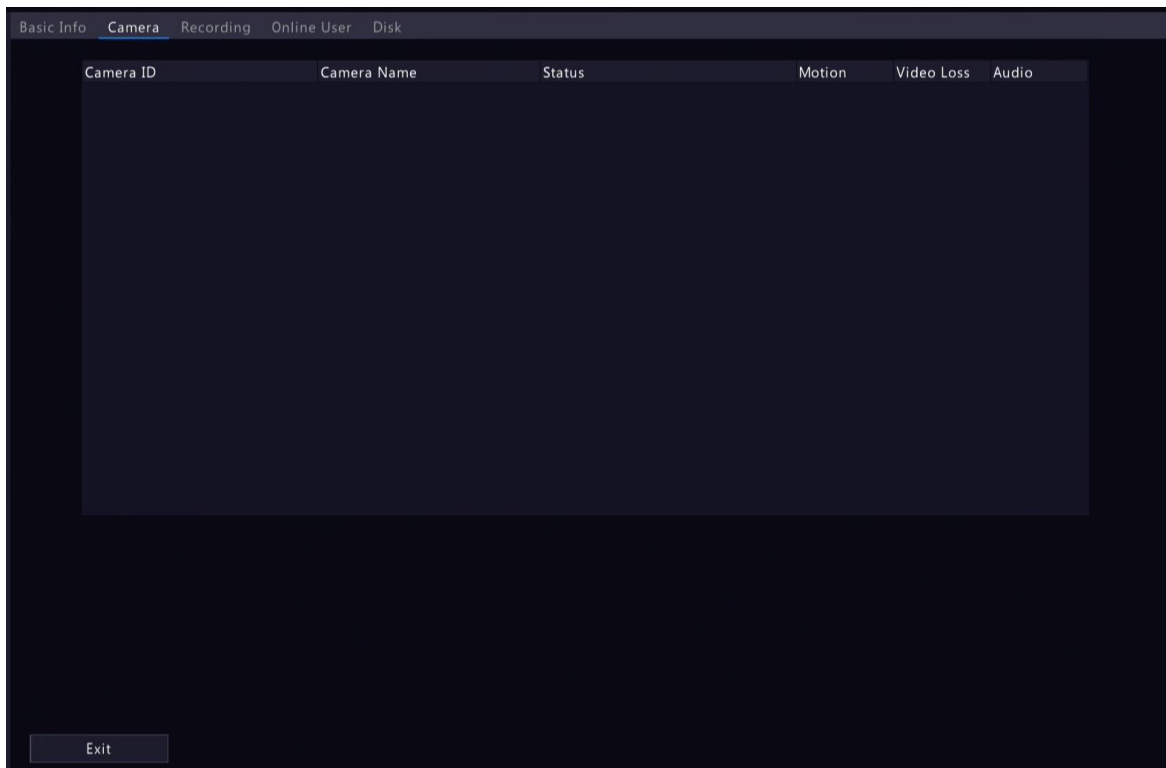

11.1.3 Recording Status

View the recording status and encoding parameters of the connected cameras.


Go to **Menu > Maintenance > System Info > Recording**. View recording information including recording type, recording status, diagnosis, and encoding parameters.

Camera ID	Camera Name	Type	Status	Diagnosis	Stream Type	Frame Rat...	Bit Rate(K...	Resolution
A1	Camera 01	Manual	Ongoing	Normal	Main and Sub S...	15	2042	1920X1080
A2	Camera 02	Normal	Ongoing	Normal	Main and Sub S...	8	135	1920X1080
A3	Camera 03	Normal	Ongoing	Normal	Main and Sub S...	8	135	1920X1080
A4	Camera 04	Normal	Ongoing	Normal	Main and Sub S...	8	135	1920X1080

11.1.4 Online User

View the logged-in users, and force non-admin users to log out of the DVR when necessary.

1. Go to **Menu > Maintenance > System Info > Online User**.

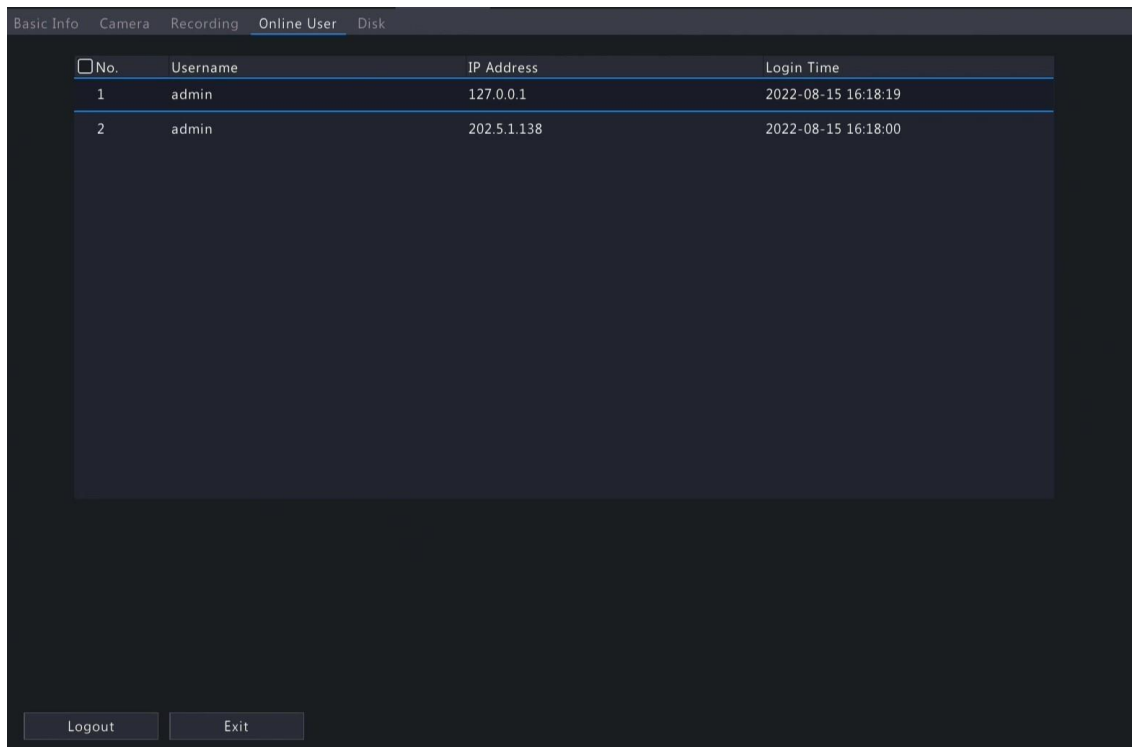


2. Choose a non-admin user and then click **Logout**.

 **Note:** Only admin can manage user permissions.

11.1.5 HDD Status

View the status and property of HDDs on the DVR.

Go to **Menu > Maintenance > System Info > Disk**. View hard disk information including the total capacity, free space, status, manufacturer, and property.

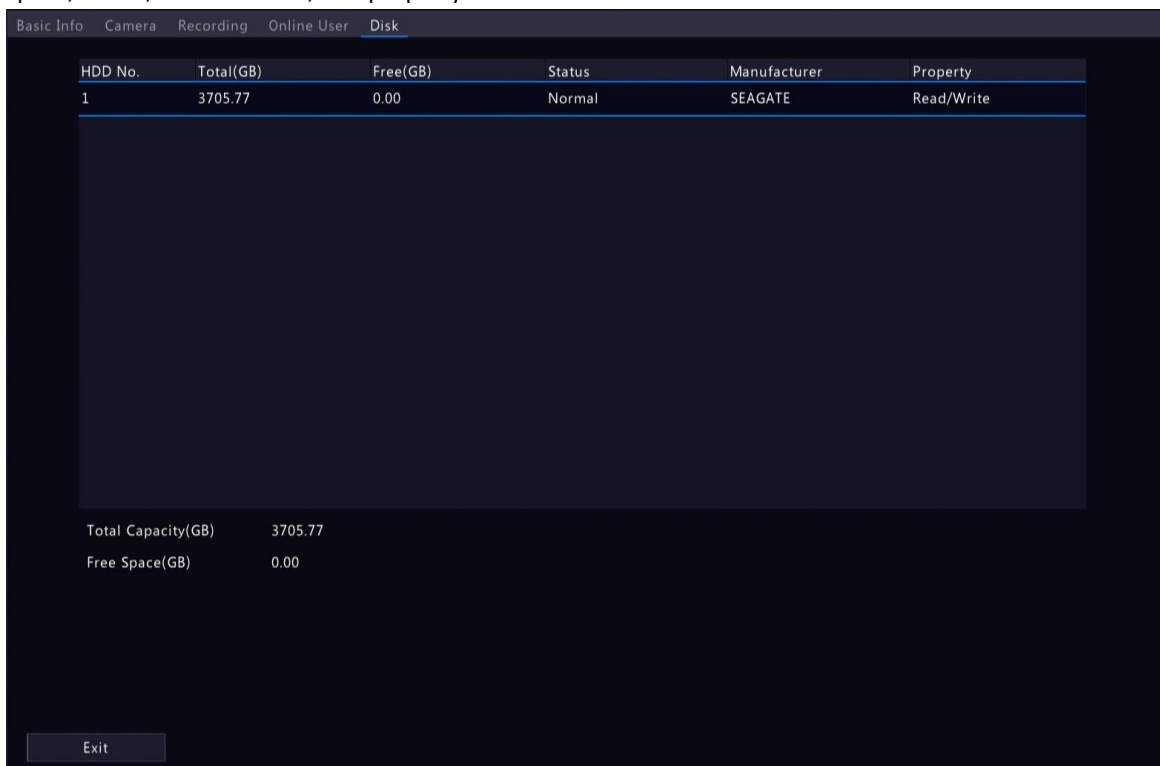


11.2 Network Information

View network information including network traffic, network statistics and network status.

11.2.1 Network Traffic

View network interface card (NIC) information including connection status, physical address, MTU, NIC type, and real-time traffic.

1. Go to **Menu > Maintenance > Network Info > Network Traffic**.

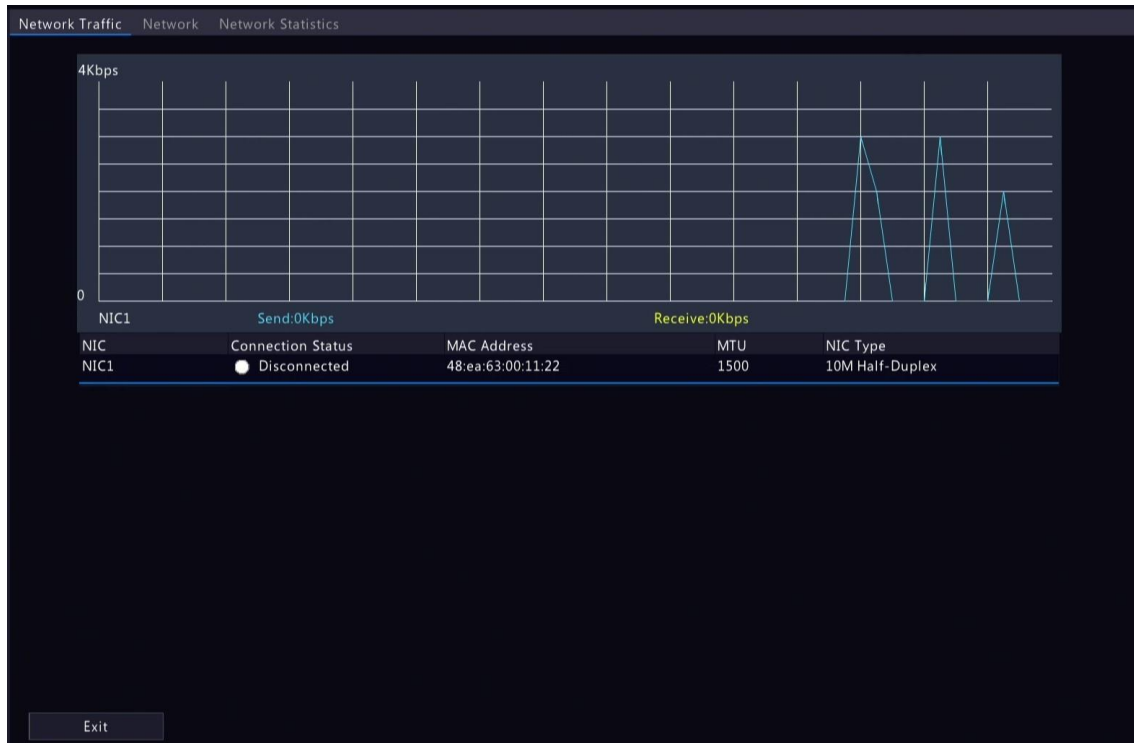

2. Choose an NIC to view the real-time network traffic.

11.2.2 Network Status

View network parameters of an NIC.

Go to **Menu > Maintenance > Network Info > Network**. Choose an NIC to view its network parameters.

The screenshot shows the 'Network Status' interface. At the top, there are three tabs: 'Network Traffic', 'Network', and 'Network Statistics'. The main area displays a list of network parameters for a selected NIC:

IPv4 Obtainment Mode	Bind NIC
IPv4 Address	192.168.1.30
IPv4 Subnet Mask	255.255.255.0
IPv4 Default Gateway	192.168.1.1
IPv6 Obtainment Mode	Router Advertisement
IPv6 Address	fe80::4aea:63ff:fe00:1122
IPv6 Prefix Length	64
IPv6 Default Gateway	::
Preferred DNS Server	0.0.0.0
Alternate DNS Server	0.0.0.0

At the bottom left, there is an 'Exit' button.

11.2.3 Network Statistics

View bandwidth usage.

Go to **Menu > Maintenance > Network Info > Network Statistics**. Bandwidth usage is displayed.

Network Traffic		Network	Network Statistics
Type	Bandwidth		
IP Camera	0bps		
Remote Live View	0bps		
Remote Playback	0bps		
Idle Receive Bandwidth	40Mbps		
Idle Send Bandwidth	48Mbps		

Exit



Note:

- When idle receive bandwidth is low, cameras cannot get online.
- When idle send bandwidth is low, live view, playback, and recording download will fail.

11.3 Log Search

Logs contain information about user operation and device status. You can use logs to keep track of device operation status and view detailed alarm information.

Log Search

1. Go to **Menu > Maintenance > Log**.

Go to Menu Maintenance Log

Log

Log

2022-08-15 00:00:00

▼

End Time

2022-08-15 23:59:59

▼

Main Type

Operation

▼

Sub Type

All Types

▼

Username	Operation Time	Camera ID	Play	Main Type	Sub Type	Details
admin	2022-08-15 16:53:30	D111		Operation	Playback/Download	
admin	2022-08-15 16:52:33	—	—	Operation	Quick Search IP Camera	
admin	2022-08-15 16:52:33	—	—	Operation	Login	
admin	2022-08-15 16:50:01	—	—	Operation	Logout	
admin	2022-08-15 16:43:05	—	—	Operation	Start Network Test	
admin	2022-08-15 16:41:26	—	—	Operation	Start Network Test	
admin	2022-08-15 16:33:55	—	—	Operation	Quick Search IP Camera	
admin	2022-08-15 16:33:55	—	—	Operation	Login	

<

>

1

/

6


>

Search

Log Backup


Exit

2. Set the start time, end time, main type, and sub type.
3. Click **Search**.
4. Click  to view log details.

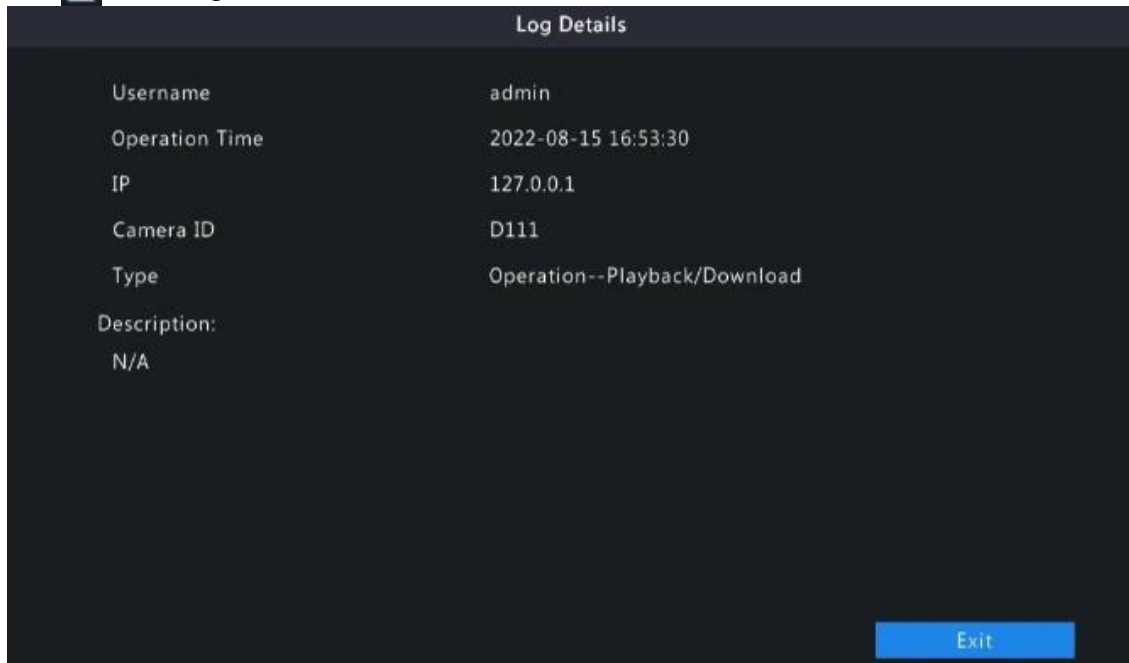

Playback

Click  to view the video recorded at the current log time.

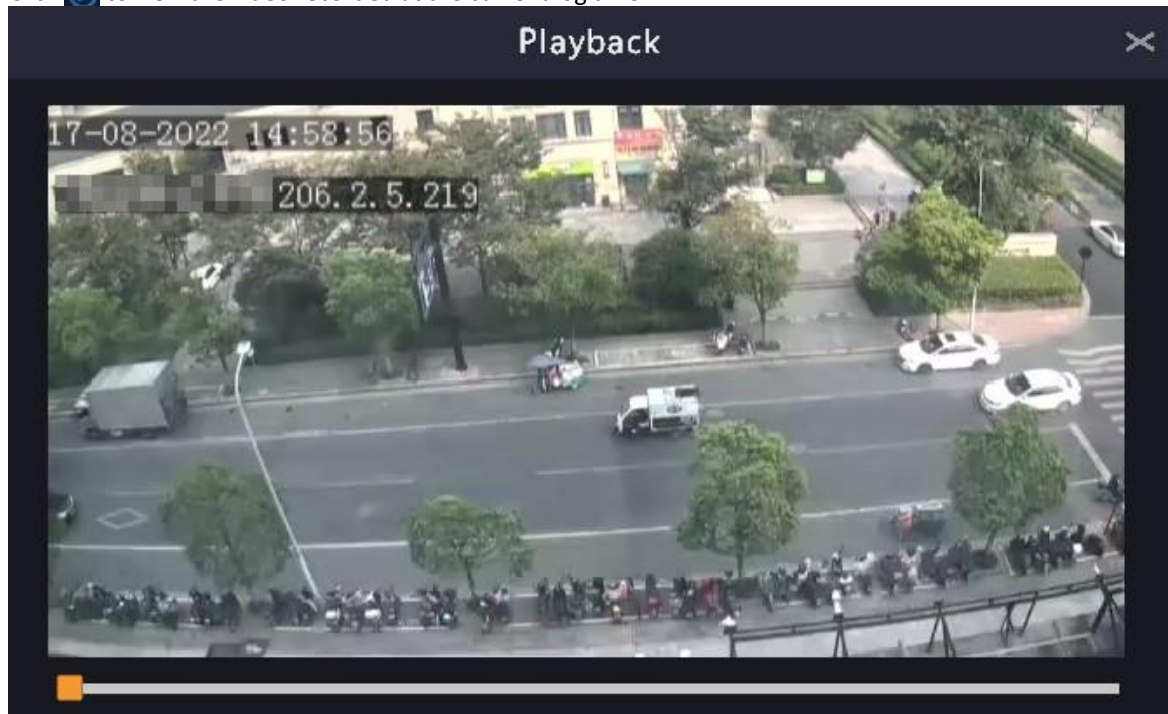

Note:

- This feature is not available to certain log types.
- The video is 11 minutes long (1m before and 10m after alarm).

Log Backup

Click **Backup**. The **Backup** page appears. Choose the destination path, click **Backup** to save the logs to the external storage device.


11.4 System Backup

Backup system configuration and device diagnosis information.

11.4.1 System Backup

Import, export, and delete system configurations.

Go to **Menu > Maintenance > Backup > System Backup**.

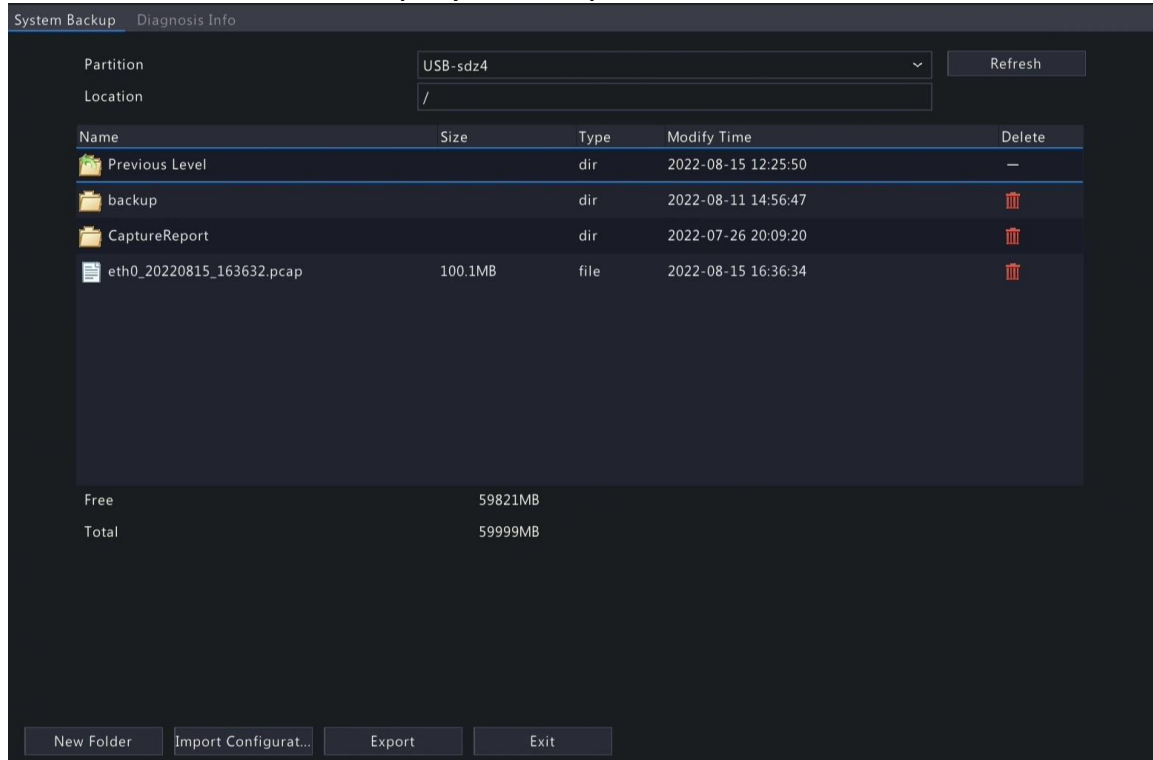

Perform the following operations as needed:

- Import configurations: Choose the *.xml file in the directory list, click **Import Configuration**, and then confirm to import the configuration file.
- Export configurations: Choose the destination in the directory list, click **Export Configuration**. Then a *.xml file containing the exported configurations is generated in the specified folder later.

Note:

- Caution: The device will restart after you import configurations. If power is disconnected during the process, the system will be unusable.
- Only admin can import or export configurations.
- Delete: Choose the folder or file to be deleted, click . means the folder or file cannot be deleted.
- Note:** Caution: Deleted files cannot be recovered.
- Create folder: Choose the destination path in the directory list, click **New Folder**, enter a folder name to create the folder.
- Refresh: Click the **Refresh** button to refresh the list.

11.4.2 Diagnosis Info

View and back up diagnosis information of the DVR and the connected cameras. The DVR keeps 14 days of diagnosis information and overwrites the earliest when the storage is full.

Go to **Menu > Maintenance > Backup > Diagnosis Info**.

NVR Diagnosis Info

1. Choose **NVR** as the device type.

System Backup Diagnosis Info

Device Type ☒ NVR ☐ IPC

Current Diagnosis Info **Export**

☐ No.	History Diagnosis Info	File Size	Modify Time
☐ 1	NVR_Log_20220814235900.tgz	3645KB	2022-08-15 00:00:00
☐ 2	NVR_Log_20220813235900.tgz	3442KB	2022-08-14 00:00:00
☐ 3	NVR_Log_20220812235900.tgz	2997KB	2022-08-13 00:00:00
☐ 4	NVR_Log_20220811235900.tgz	2369KB	2022-08-12 00:00:00
☐ 5	NVR_Log_20220810235900.tgz	3434KB	2022-08-11 00:00:00
☐ 6	NVR_Log_20220809235900.tgz	4932KB	2022-08-09 22:00:00
☐ 7	NVR_Log_20220808235900.tgz	4608KB	2022-08-08 22:00:00
☐ 8	NVR_Log_20220807235900.tgz	4658KB	2022-08-08 00:00:00
☐ 9	NVR_Log_20220806235900.tgz	4509KB	2022-08-07 00:00:00
☐ 10	NVR_Log_20220805235900.tgz	4380KB	2022-08-06 00:00:00
☐ 11	NVR_Log_20220804235900.tgz	4147KB	2022-08-05 00:00:00

Backup **Exit**

2. Export NVR diagnosis information.

- Current Diagnosis Info: Diagnosis information since the latest startup. Click **Export** to export diagnosis information to the external storage device.
- History Diagnosis Info: All the history diagnosis information in the list. Select the desired item(s), click **Backup**. On the **Backup** page, choose the destination path, click **Backup**.

Camera Diagnosis Info

1. Choose **IPC** as the device type.

System Backup Diagnosis Info

Device Type ☐ NVR ☒ IPC

Select Camera D1

Current Diagnosis Info Export

☐ No.	History Diagnosis Info	File Size	Modify Time
☐ 1	IPC_Log_Ch1_20220814235900.tgz	1412KB	2022-08-15 00:05:00
☐ 2	IPC_Log_Ch1_20220813235900.tgz	1417KB	2022-08-14 00:05:00
☐ 3	IPC_Log_Ch1_20220812235900.tgz	1463KB	2022-08-13 00:05:00


Backup Exit

2. Choose the desired camera from the list.
3. Export diagnosis information of the selected camera.
 - Current Diagnosis Info: Diagnosis information since the latest startup. Click **Export** to export diagnosis information to the external storage device.
 - History Diagnosis Info: All the history diagnosis information in the list. Select the desired item(s), click **Backup**. On the **Backup** page, choose the destination path, click **Backup**.

11.5 Restore System

Restore default system settings.

1. Go to **Menu > Maintenance > Restore**.

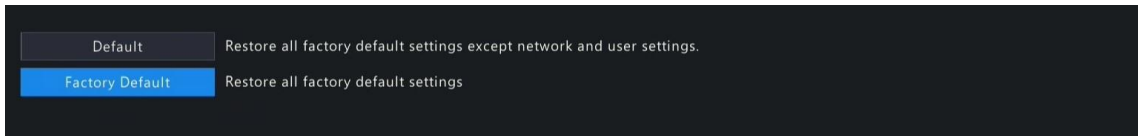

Default	Restore all factory default settings except network and user settings.
Factory Default	Restore all factory default settings


2. Choose **Default** or **Factory Default** as needed. A message appears. The DVR will restart and restore the default settings after you confirm. Choose a method according to your actual needs:
 - Restore: Restore default settings except network settings, user settings, and time settings.
 - Factory Default: Restore all default settings.

 **Note:** Either option will not delete the recorded videos and operation logs.

11.6 Auto-Function

The device can restart or delete files automatically at a preset time. Only admin can perform this operation.

1. Go to **Menu > Maintenance > Auto-Function**.

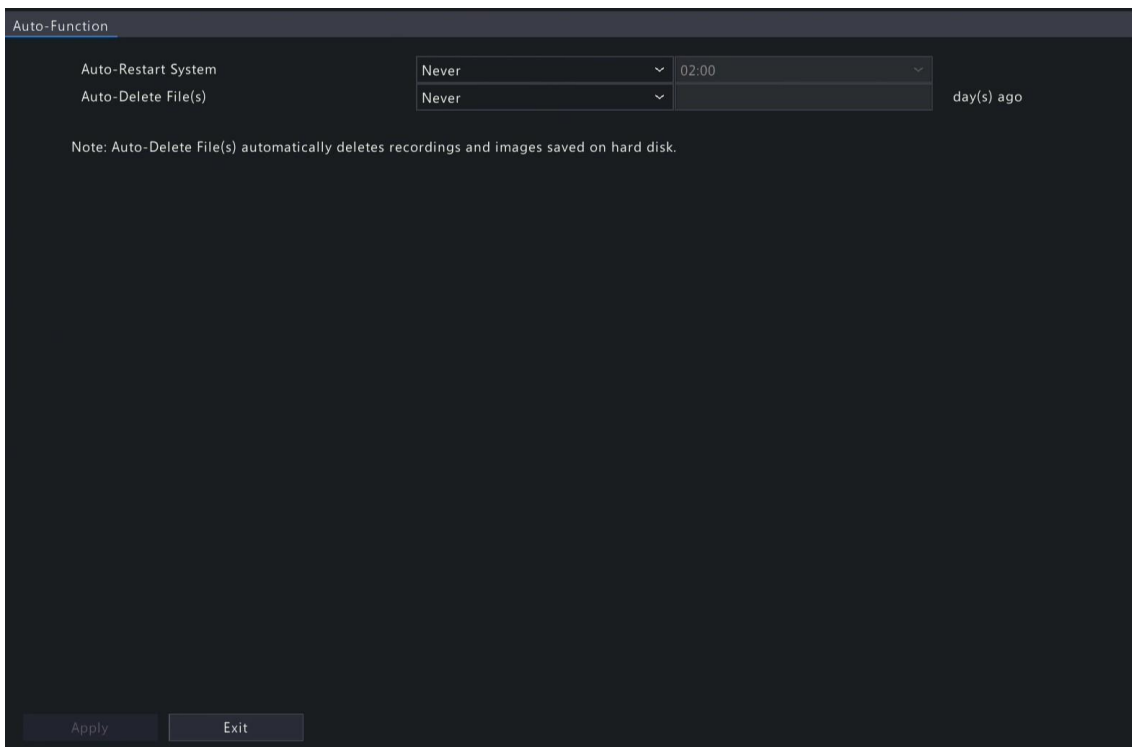

Auto-Function

Auto-Restart System	Never	02:00	
Auto-Delete File(s)	Never		day(s) ago

Note: Auto-Delete File(s) automatically deletes recordings and images saved on hard disk.

Apply Exit

2. Configure the parameters.
 - Auto-Restart System: The system restarts automatically at the set time.
 - Auto-Delete File(s): The system automatically deletes videos and images saved on the hard disk. Range: 1-240.
3. Click **Apply**.

11.7 System Upgrade

Upgrade the firmware of the NVR and the connected cameras.

Two upgrade methods are available. The device will restart after the upgrade is completed.

- Cloud upgrade: Upgrade through the cloud server.
- Local upgrade: Upgrade using the upgrade files saved in a USB storage device.




Note:

- Make sure the device is always connected to power and network during the upgrade. Use an Uninterrupted Power Supplies (UPS) if necessary.
- Before you start a cloud upgrade, make sure the DNS server is functional. Go to **Menu > Network > Basic > Network**. See [Network Configuration](#) for detailed information.
- The cloud upgrade speed is limited by the network transmission speed.

11.7.1 NVR Upgrade

Upgrade the firmware of the NVR.

1. Go to **Menu > Maintenance > Upgrade > NVR Upgrade**.

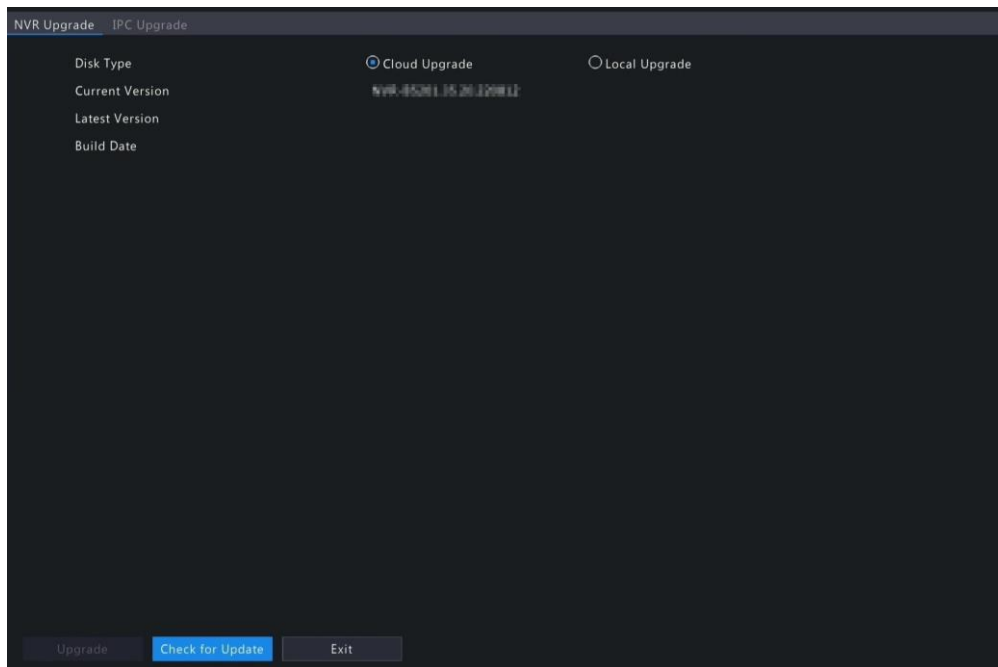

2. Choose **Cloud Upgrade** or **Local Upgrade**.

- Cloud Upgrade

Click **Check for Update**. The system checks for updates.

- If updates are available, the new version number and its build date are displayed. Click **Upgrade** to start.
- If no updates are available, the system indicates that the current version is already the latest.

- Local Upgrade

Select the upgrade file in the USB storage device, click **Upgrade** to start.

 **Note:** If the upgrade failed, the failure cause will be displayed, and the device will restart automatically. Fix the problem and then try again.

NVR UpgradeIPC Upgrade

Disk Type

☐ Cloud Upgrade

☒ Local Upgrade

Partition

USB-sdz4

Refresh

Location

/

Name	Size	Type	Modify Time	Delete
 Previous Level		dir	2022-08-15 12:25:50	—
 backup		dir	2022-08-11 14:56:47	
 CaptureReport		dir	2022-07-26 20:09:20	
 eth0_20220815_163632.pcap	100.1MB	file	2022-08-15 16:36:34	


Upgrade

Exit

11.7.2 IPC Upgrade

Upgrade the firmware of the IPC. This function is only applicable to cameras connected via the Private protocol.

1. Go to **Menu > Maintenance > Upgrade > IPC Upgrade**.

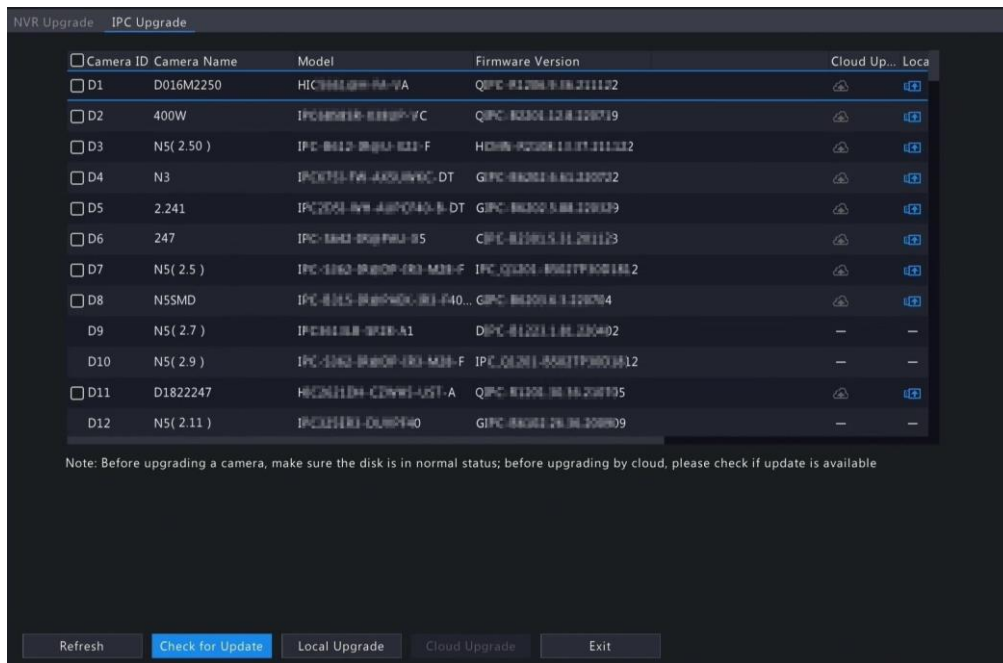

2. Choose **Cloud Upgrade** or **Local Upgrade**.


- Cloud Upgrade

Click **Check for Update**. The system checks for updates.

- If updates are available, the new version number and its build date are displayed. Click to upgrade a camera or select multiple cameras and then click **Upgrade** to upgrade in batches.
- If no updates are available, the system indicates that the current version is already the latest.

- Local Upgrade

- (1) Click to upgrade a camera or select multiple cameras and then click **Local Upgrade**.

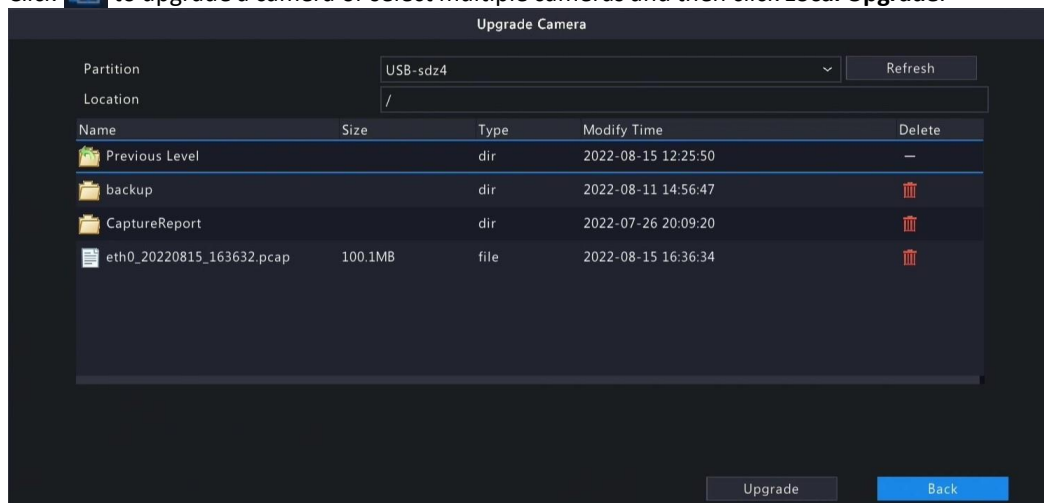

- (2) On the **Upgrade Camera** page, select the upgrade file in the USB storage device, and then click Upgrade.

11.8 HDD Check

Perform S.M.A.R.T. test and bad sector detection. The actual functions available may vary with device.

11.8.1 Run S.M.A.R.T. Test

S.M.A.R.T. tests the hard disk including its head, platter, motor, circuit, etc. and evaluates the disk health status.

1. Go to **Menu > Maintenance > HDD > S.M.A.R.T. Test**.

ID	Attribute Name	Status	Flag	Threshold	Value	Worst	Raw Value
1	Raw_Read_Error_Rate	Healthy	0x000f	6	80	64	104417750
3	Spin_Up_Time	Healthy	0x0003	0	92	91	0
4	Start_Stop_Count	Healthy	0x0032	20	100	100	22
5	Reallocated_Sector_Count	Healthy	0x0033	10	100	100	0
7	Seek_Error_Rate	Healthy	0x000f	45	92	60	1431591504


2. (Optional) Select ☒, so the device can continue using the hard disk even if the disk fails in the self-assessment. However, this may incur great risks. Please choose carefully.
3. Choose the disk slot and test type.
 - Short: Less test contents, faster speed.
 - Extended: More comprehensive and thorough, longer time.
 - Conveyance: Detects problems in data transmission.
4. Click **Start Test**. The **Test Status** column shows the real-time progress, for example, Testing: 10%. View test results after the test is completed.

The overall evaluation provides three kinds of status: Healthy, Failure, Bad Sectors. It is recommended to replace faulty disks immediately. Contact our technical support for more information.


11.8.2 Bad Sector Detection

The device system detects bad sectors in hard disks in a read-only manner.

1. Go to **Menu > Maintenance > HDD > Bad Sector Detect**.

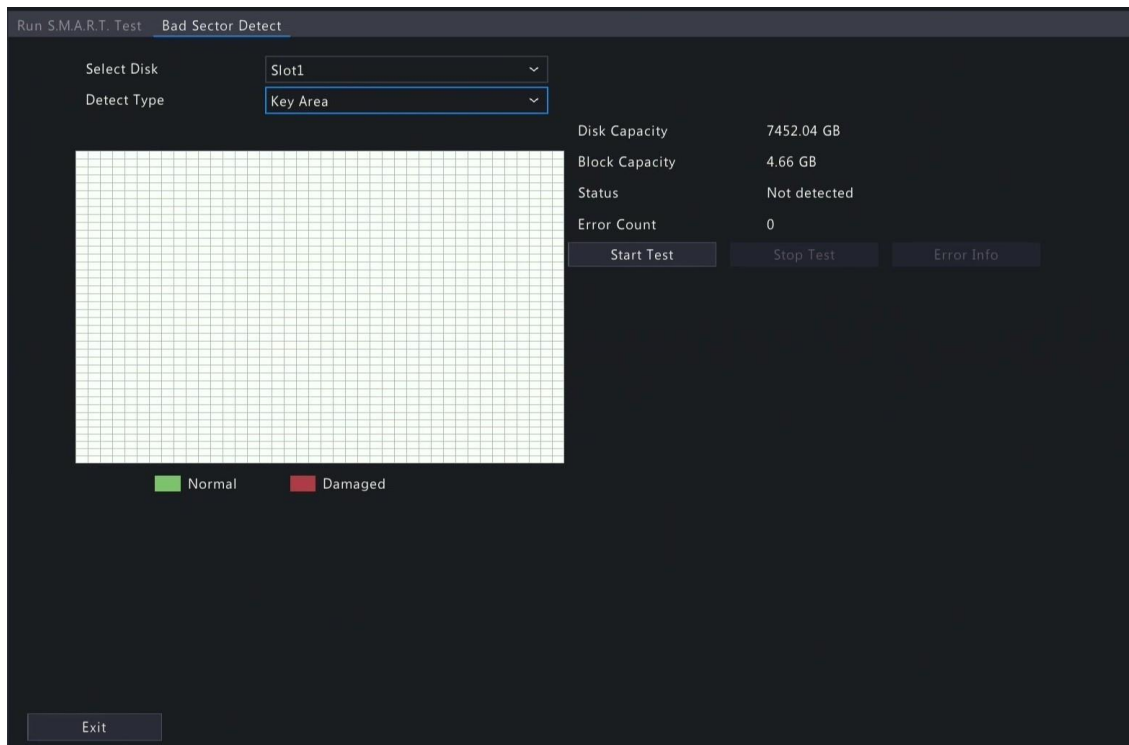

2. Choose the disk slot and detection type.
3. Click **Start Test**. To stop the detection, click **Stop Test**.

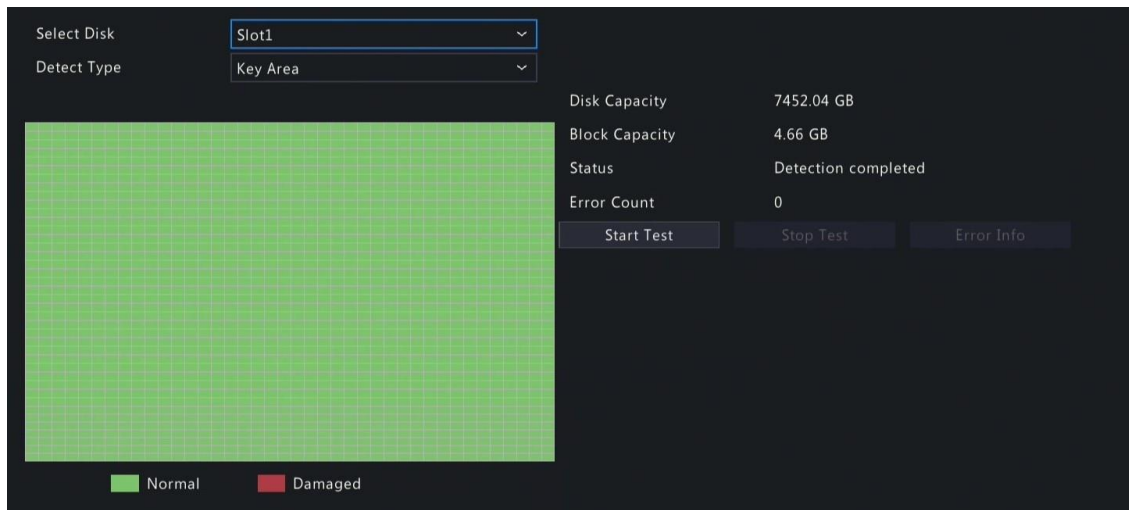

- ■ means the detected area is in good condition.
- ■ means the detected area is damaged. The detection stops automatically when the error count reaches 100.

11.9 One-Click Collection

Collect NVR and camera diagnosis information.

1. Go to **Menu > Maintenance > One-Click Collect**.

One-Click Collect

IPC diagnosis info: All

Collect Time: 3Days

☒ NVR diagnosis info

Export

Information to collect includes NVR diagnosis info, IPC diagnosis info, and operation logs. The export may take a long time if you choose All

Exit

2. Choose the camera and select a number of days of diagnosis information to be collected. NVR diagnosis information is always collected.
3. Click **Export** to collect camera diagnosis information, NVR diagnosis info, and operation logs.



Note: Choose the days according to the actual requirements. The export process may take a long time if you choose **All**.

12 Playback

12.1 Instant Playback

Instant playback plays the video recorded during the last 5 minutes.

Make sure that the video is recorded during the last 5 minutes. Instant playback does not work if there's no recording during this time.

1. In the preview page, select the target window, and click  on the window toolbar.



2. Drag the slider on the progress bar to fast forward; Click  to pause.

3. Click  to exit the playback.

12.2 Normal Playback

Normal playback plays all recordings of the selected camera(s).

1. In the preview page, right-click the desired window and select **Playback**. The system plays the video of the selected camera. You can also choose other cameras to play videos on this page.
 - You can choose multiple cameras for synchronous playback.
 - Click **Max. Cameras** to select the maximum number of cameras allowed. The performance may vary with DVR model.
 - Click **Close All** to stop playback for all cameras.



- Double-click the desired date or select the date and then click  to start playback. By default, the system plays the video of the current day

 **Note:** The calendar uses different flags to indicate different recording types: blue for normal recording, red for event-triggered recording, and no flag for none.



- The DVR plays HD videos by default. You can switch to SD mode if SD videos are stored.


The supported video clarity depends on the storage mode, and HD videos are supported by all the storage mode. To store SD videos, go to **Menu > Camera > Encoding** to set the storage mode. See [Encoding Settings](#) for details.

 **Note:**

- If no images are displayed in the preview page in SD mode, it indicates SD videos are not stored.
- If SD video is available in SD playback mode, SD video is played by default; it switches to HD video automatically when you double-click the window to maximize it in a multi-window layout.

Table 12-1: Playback Toolbar

Button	Description
	Show playback progress.  Note:  indicates 4 cameras are selected.  indicates the playback progress in the first window.  indicates the playback progress in the second window, and so on. - Different colors on the progress bar mean different recording types: blue for normal recording, red for event-triggered recording, green for smart event recording.
	Timeline.  Note: In normal playback mode, hover over the timeline to view a thumbnail image to quickly pinpoint an event.
	Zoom in or out on the timeline. Alternatively, click on the timeline and use the scroll wheel to zoom in or out.
	Select , , or , and the corresponding human body, non-motor vehicle, or motor vehicle recordings will be shown green on the progress bar.  Note: - Select ☒ Skip normal reco., and the playback page will only play recordings of the corresponding object type. - This function is only available to the single-channel playback.
	File saved on a USB storage device.
	Start/stop clipping video.
	Manage files (clips, snapshots, locked files, tags);  indicates there is a newly saved file.
	Take a snapshot. The window borders will flash white.

Button	Description
	Rewind/forward 30s or choose from the drop-down list.
	Reverse.
	Stop playback and return to the start point.
	Play/pause.
	Slow down/speed up.  Note: Click  to restore the normal playback speed after clicking  , and vice versa.
	Forward by frame.
	Set the video clarity, including HD or SD.
	Enable/disable POS. When enabled, POS OSD appears on the screen, and some toolbar buttons are deactivated.  Note: - This function is available for certain DVRs. - The button only appears in normal playback mode and POS playback mode. In normal playback mode, POS OSD is displayed for 5s. In POS playback mode, the time is configurable.
	Full screen.
	Exit the playback screen.
	Click a playback window to show the window toolbar.
	Take a snapshot.
	Add a tag at the current time point.
	Digital zoom. See Digital zoom for details.
	Turn on/off audio.
	Adjust the sound volume.
	Lock.


12.3 Smart Playback

In smart playback mode, the system searches smart events in the recording and adjusts the playback speed accordingly. If smart results are detected such as motions, the video plays at normal speed; otherwise, the video plays at 16x speed to save time.

Note:


- This function is available for cameras that support smart functions.
- By default, the system searches motion in video.
- Only one camera can be selected for smart playback.

1. In the playback page, select **Smart**.

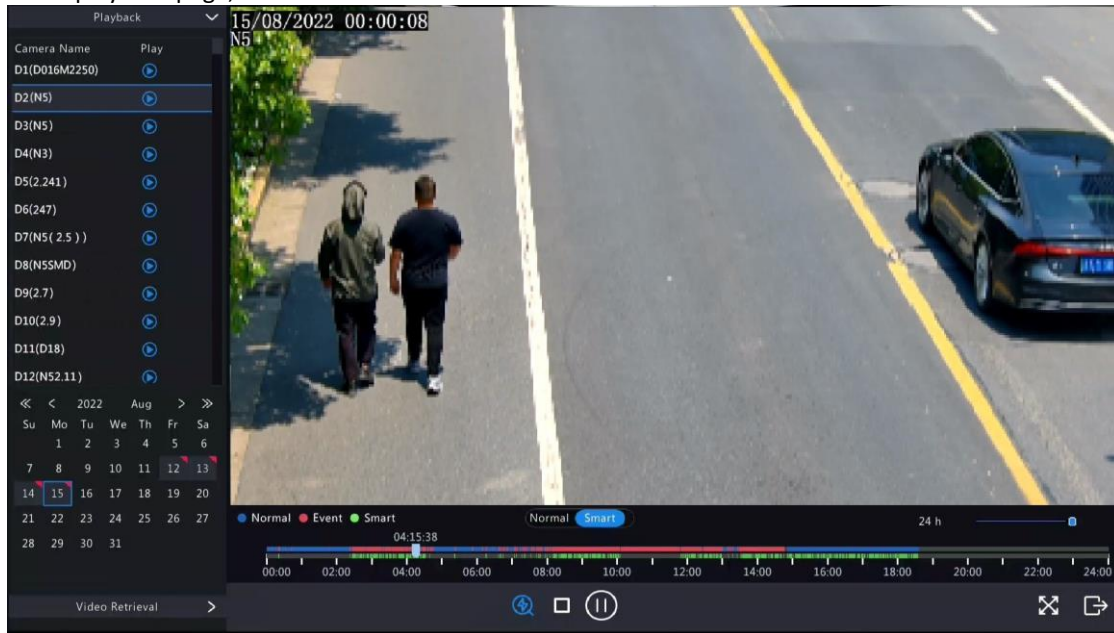

2. Select the desired camera.
3. Double-click the date you want to play or select the date and then click  or  to start playback.
4. Set smart search rules. The default smart search area is the full screen. To specify a smart search area, follow the steps below.

- (1) Click  to go to the **Smart** page.

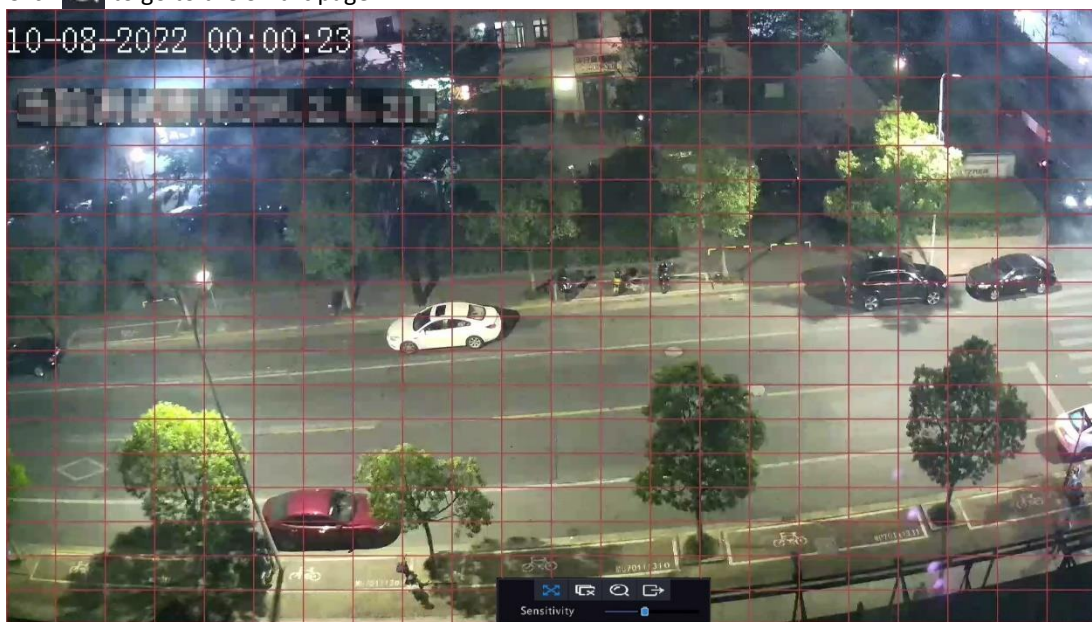

- (2) Click  to clear the existing areas, then click and drag on the image to specify an area.

Table 12-2: Smart Search Buttons

Button	Description	Button	Description
	Motion detection: Full screen.		Clear the specified areas.
	Start search smart playback of the specified areas.		Exit the Smart page.
	Adjust detection sensitivity.		

12.4 External File Playback

This function allows you to play recordings stored in an external storage device such as USB drive or portable hard drive.

1. In the playback page, click  on the screen toolbar.
2. Click **Refresh** and then wait for the DVR to read the external storage device.
3. Double-click the desired recording file, or select the file and then click  or  to start playback.




12.5 Tag Playback

Use tags to mark specific events in the video for quick location and playback.

Add Tag

1. In the playback page, select the desired camera and date, and click  to start playback.
2. Click anywhere on the image, and select  in the pop up toolbar.

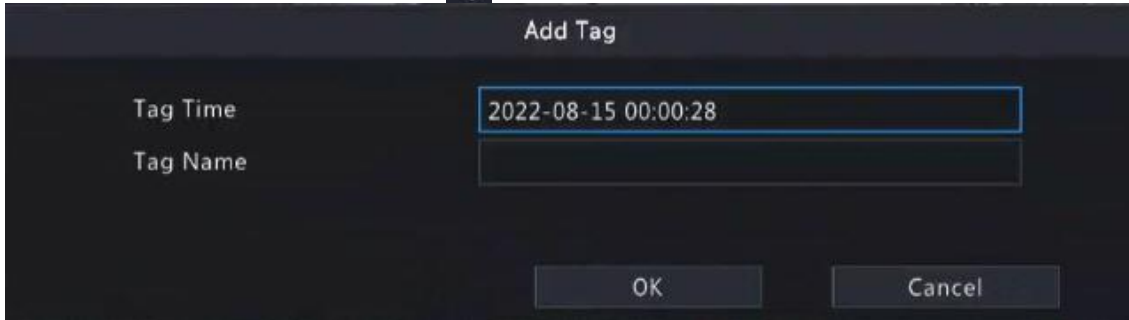


The 'Add Tag' dialog box is shown with a dark background. It contains two input fields: 'Tag Time' with the value '2022-08-15 00:00:28' and 'Tag Name' which is empty. At the bottom, there are 'OK' and 'Cancel' buttons.

3. Enter the tag name. Tag time cannot be edited, which is the time when the tag was added.
4. Click **OK** to save the settings.

Tag Management

The added tags are saved to **File Management**. To view the newly added tag, click  on the screen toolbar.

To rename a tag, click . To delete a tag, click .

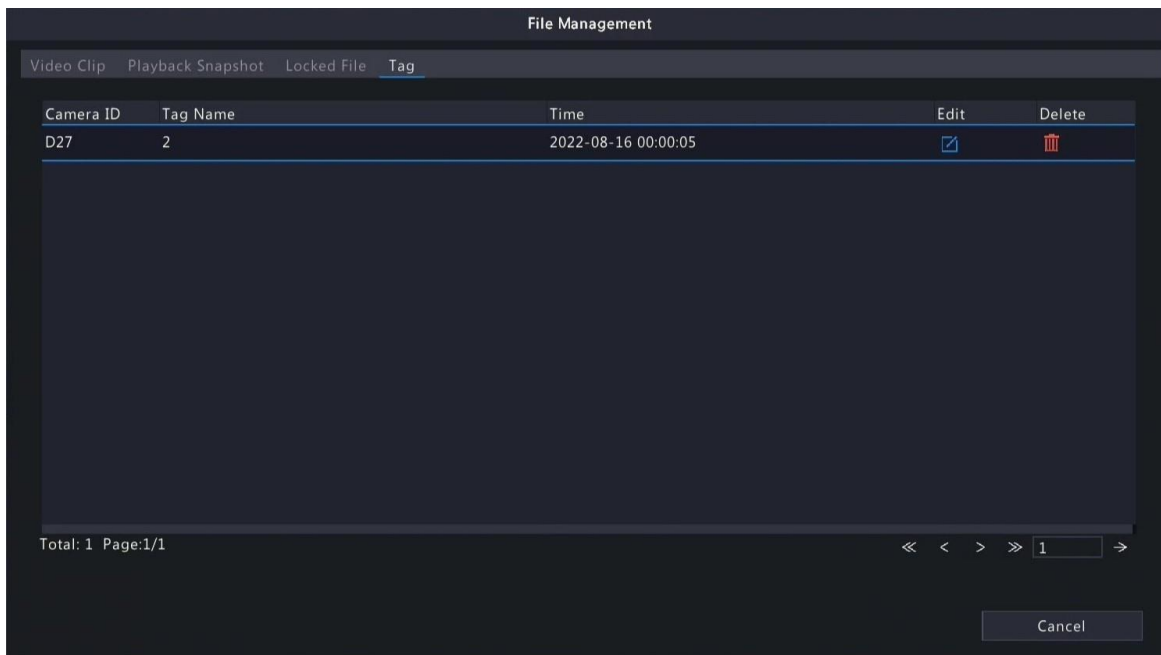


The 'File Management' window shows the 'Tag' tab. It contains a table with the following data:

Camera ID	Tag Name	Time	Edit	Delete
D27	2	2022-08-16 00:00:05		


At the bottom, there is a pagination bar showing 'Total: 1 Page:1/1' and navigation controls. A 'Cancel' button is located at the bottom right.

Playback by Tag

1. In the playback page, click **Video Retrieval**, select **Tag Search** from the drop-down list in the upper left corner.

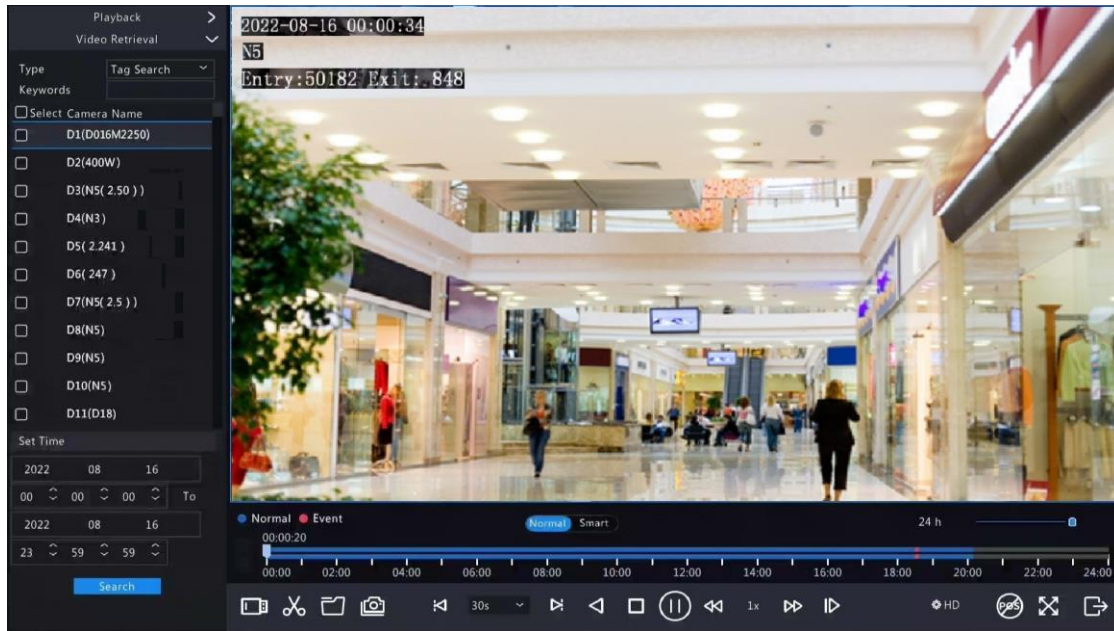

2. Select the desired cameras with tags, enter keywords, set the time period, and then click **Search**.

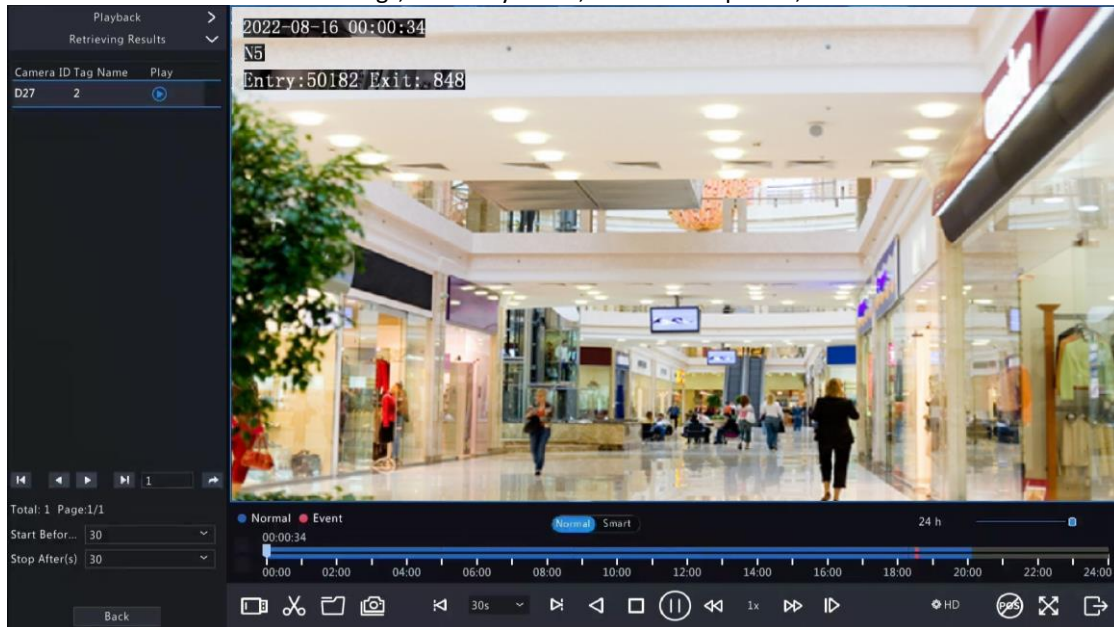


3. Double-click the tag you want to play or select the tag and then click  or  to start playback.

12.6 Playback by Search

This function allows you to search and play recordings by an event type, such as motion detection, alarm input, video loss, VCA, tag, and people present alarm.

 **Note:** Before playback, make sure that the alarm and alarm-triggered storage for the event are enabled.

1. In the preview window, right-click and select **Playback**.
2. In the playback page, click **Video Retrieval**, select the type and sub type, and enter keywords.

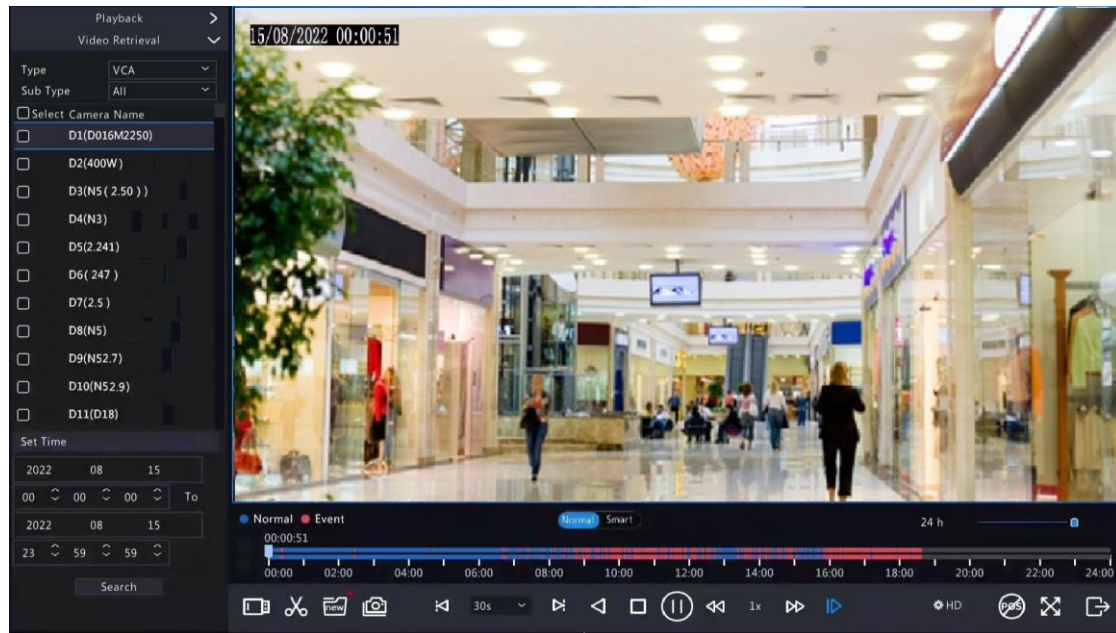

3. Select the desired camera(s) and time period, and then click **Search**.
4. Double-click the result you want to play or select the result and then click  or  to start playback.

12.7 File Management

File management allows you to manage video clips, tags, snapshots taken during playback, and lock/unlock files.

Video Clip

You may clip and back up videos during playback. See [Video Clip Backup](#) for details.


Playback Snapshot

You may take a snapshot during playback and then back up the snapshot. See [Playback Snapshot Backup](#) for details.

Locked File

You may lock, unlock, and back up a recording file.

1. In the playback page, select the desired camera and date, and click  to start playback.
2. Drag the slider to play the desired part of the video, click on the image to display the toolbar, and then select .
Locking a recording file will prevent all the files stored in the same disk partition (254.4MB in size) from being overwritten.
3. Click  on the screen toolbar to view the locked file in the **Locked File** tab.
 - To unlock a file, click , and then the icon changes to .
 - To back up a file, select the file and then click **Backup**.

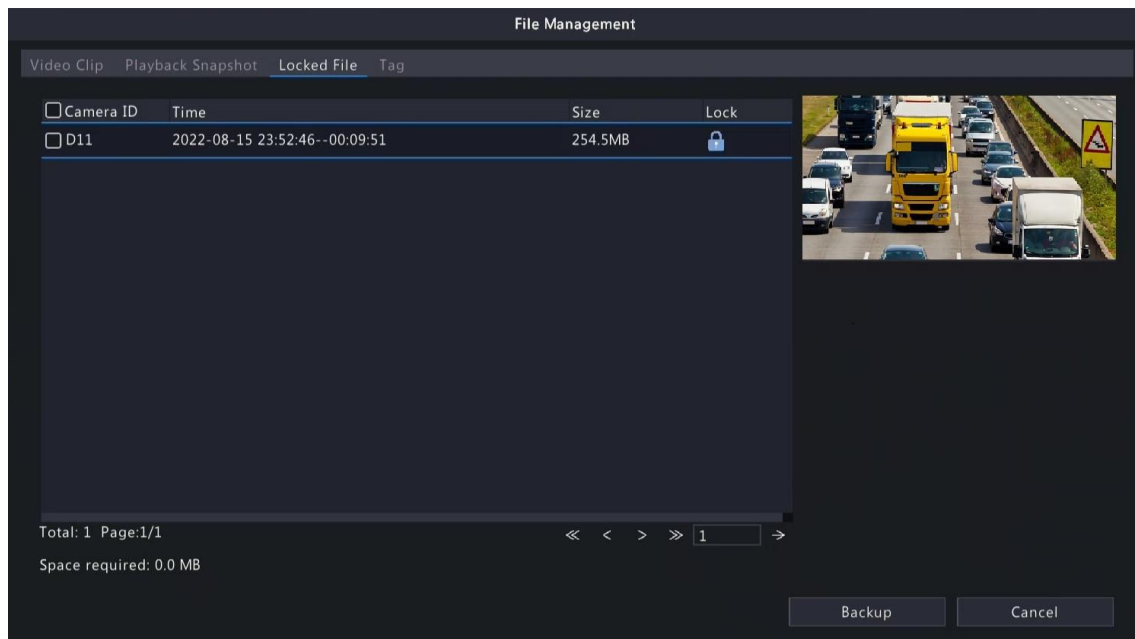


Tag

You may view, edit, or delete tags as needed. See [Tag Management](#) for details.

13 Shutdown

This chapter describes device shutdown, logout, and restart.

Shutdown refers to turning off the operating system of the device with power supply connected. Please disconnect the power supply if the device will be shut down for a long time.

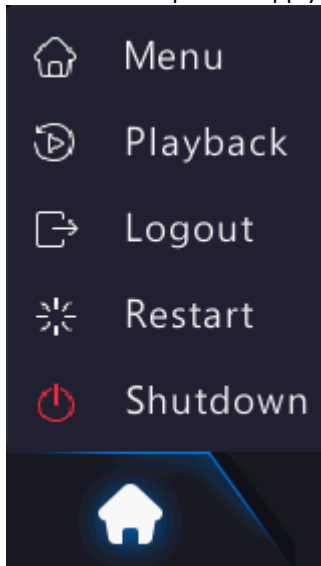

- To shut down the DVR, long press the power button on the front panel (if available) for more than 3 seconds till an on-screen message appears, and then click **Yes**.
- To shut down, log out, or restart the DVR, hover the mouse at the bottom of the preview page to display the screen toolbar, click  and then select shut down, log out, or restart as needed.

 **Note:** Unsaved settings will be lost if the DVR is shut down unexpectedly, for example, due to a power failure. A shutdown during a system upgrade may cause startup failures.

14 Web-Based Operations

You may access and manage the DVR remotely using a web browser on your PC (through the Web interface).

14.1 Preparation

Check the following before you begin:

- Access will be authenticated during login, and operation permissions will be required.
- The DVR is operating properly and has a network connection to the PC.
- A Web browser is installed on the PC. Chrome 60 or later is recommended. Firefox 60 or later, Microsoft Internet Explorer 10.0 or later, Edge 79 or later are also supported.
- The PC uses an operating system of Windows 7 or later.
- A 32-bit or 64-bit Web browser is required if you are using a 64-bit operating system.



Note:

- The parameters that are grayed out on the Web interface cannot be edited. The parameters and values displayed may vary with DVR model.
- The figures below are for illustration purpose only and may vary with DVR model.


14.2 Login

Follow these steps to log in to the Web interface (take IE10 browser as an example).

1. Open a Web browser on your PC, enter the IP address of the DVR in the address bar (**192.168.1.30** by default), and then press Enter.
2. Install the plug-in.
 - You need to install the plug-in as prompted at your first login, which is primarily used for processing media streams. Close all the Web browsers when the installation starts. Follow the on-screen instructions to complete the installation and then open the browser again to log in.
3. In the login page, enter the default username and password (admin/123456) and then click **Login**.

 Please click here to [Download](#) and install the latest plug-in. Close your browser before installation.

- You may also find the plug-in manually by entering HTTP://IP address/ActiveX/Setup.exe in the address bar, and press Enter.

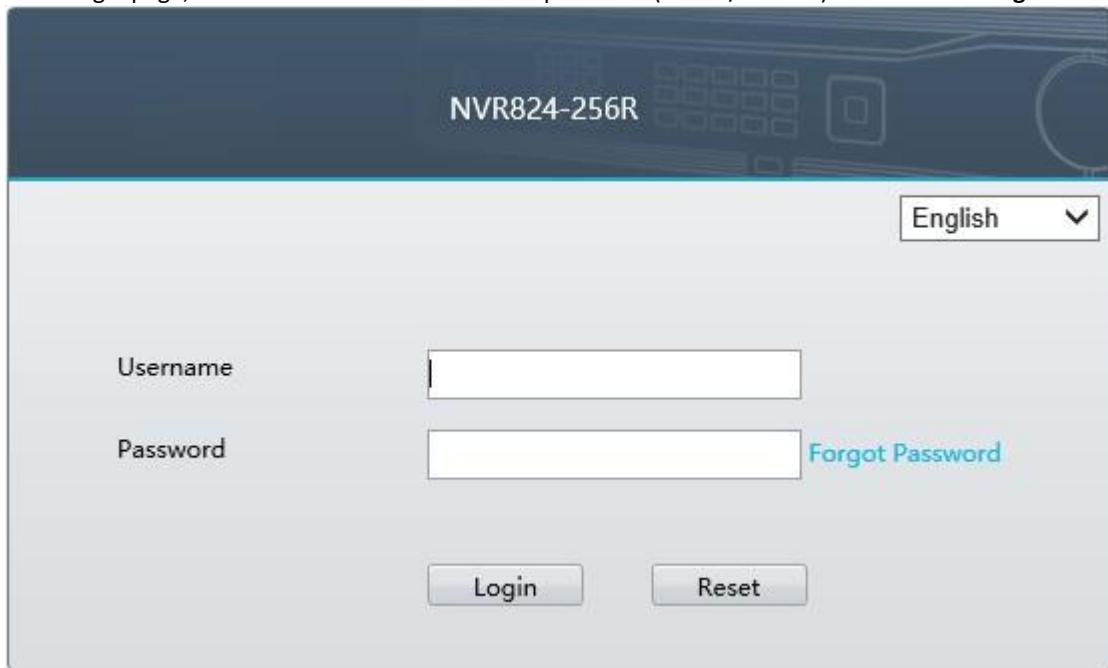


 **Note:** The default password is intended only for your first login. You are strongly recommended to set a strong password to ensure account security.

- Strong password: At least 9 characters including all three elements: letter, special character, and digit.
- Weak password: Less than 9 characters including two or less of the three elements: letter, special character, and digit.

14.3 Live View

The **Live View** page is displayed when you are logged in. Select the desired channel on the left and view the live video.

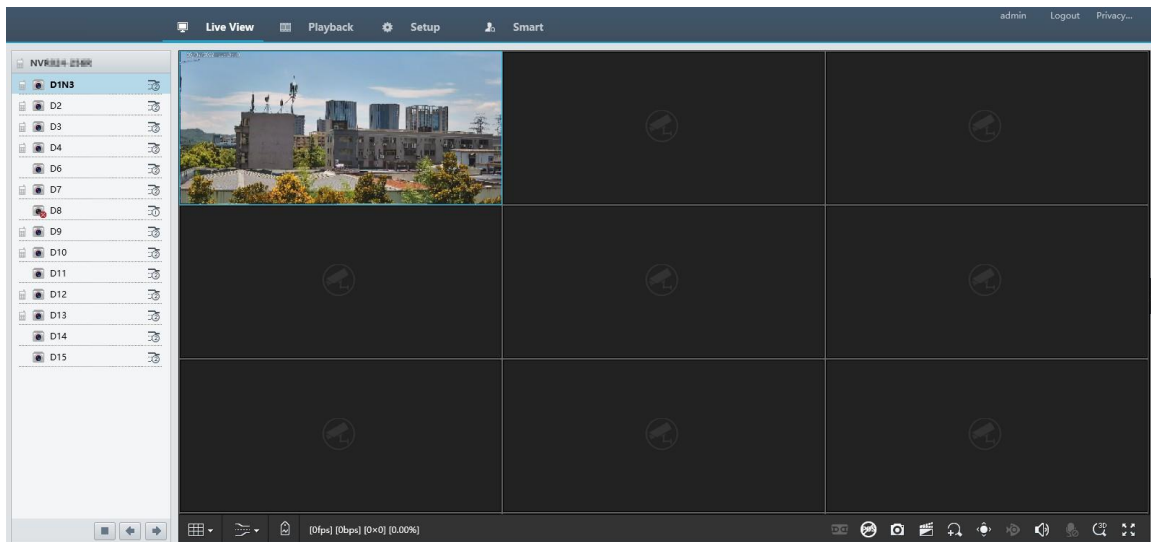

The operations may vary with DVR model.

Table 14-3: Live View Window Control Buttons

Button	Description	Button	Description
	Two-way audio		Main/sub/third stream
	Start/stop live video in all windows		Previous/next screen
	Switch screen layout		Select stream type
	Enable/disable intelligent mark		Frame rate/bit rate/resolution/packet loss
	Open/close the control panel		Take a snapshot
	Local recording		Digital zoom
	Turn on/off audio		Start/stop two-way audio
	3D positioning		Full screen
	Multi-sensor preview		Fisheye mode

Note:

- to the right of device name means two-way audio with DVR. to the right of channel name means two-way audio with the camera.
- Only the main stream is displayed when the camera is offline or it supports only one stream
- Snapshots are saved in a snapshot file folder named with the IP address, and snapshot files are named in *Camera ID_time* format and saved in this directory: \Snap\IP\Camera ID_time. The time is in YYYYMMDDHHMMSSMS format.
- Local recordings are saved in a recording file folder named with the IP address, and recording files are named in *Camera ID_S recording start time_E recording end time* format and saved in this directory: \Record\IP\Camera ID_S recording start time_E recording end time. The recording start and end times are in YYYYMMDDHHMMSSMS format.

14.4 Playback

Click **Playback** to go to the **Playback** page. You can select the playback type, clarity, and camera to view recorded videos.

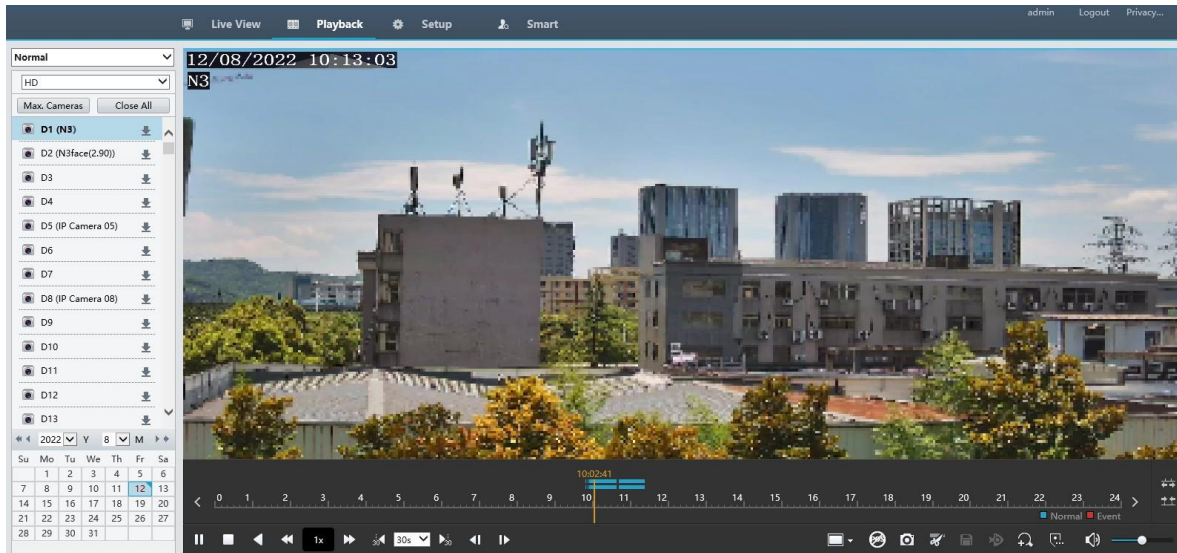


Table 14-4: Playback Control Buttons

Button	Description	Button	Description
	Play/pause		Stop
	Reverse		Slow down/speed up
	Rewind/forward 30s. You can change the time as needed.		Rewind/forward by frame
	Set the display ratio, including full or original		Take a snapshot
	Start/stop clipping video		Save video clip
	Enable/disable digital zoom		Add a custom tag
	Zoom in/out on the timeline		Adjust sound volume; turn on/off sound
	Previous/next period		

14.5 Configuration

Click **Setup** on the top and set the relevant parameters.

The screenshot displays the NVR's web interface. At the top, there is a navigation bar with icons for Live View, Playback, Setup (highlighted), and Smart. On the right side of this bar are links for 'admin', 'Logout', and 'Privacy...'. A left-hand sidebar contains a tree view with categories: Client, System (expanded), Camera, Hard Disk, Alarm, Alert, Network, Platform, User, Maintenance, Upgrade, and Backup. Under the 'System' category, 'Basic Setup' is selected. The main content area is titled 'Basic Setup' and contains a table of configuration parameters:

Device Name	NVR8324-256K
Device ID	1
Device Language	English
Model	NVR8324-256K
Serial No.	210235C3N83218000054
Firmware Version	NVR-8324-256K V1.0.0.0
Build Date	2022-07-29
Operation Time	0 Day(s) 0 Hour(s) 42 Minute(s)

Below the table is a 'Save' button.

14.6 Smart

Click **Smart** on the top and configure the relevant parameters. See [VCA Configuration](#) for details.

15 Appendix FAQ

Problem	Possible Cause and Solution
Forgot the login password.	Click Forgot Password in the login page as admin, then follow the on-screen instructions to retrieve password.
Cannot load the Web plugin.	• Close your web browsers when the installation starts. • Disable the firewall and close the anti-virus program on your PC. • Enable your Internet Explorer (IE) to check for newer versions of the stored pages every time you visit the webpage (Tools > Internet Options > General > Settings). • Add your DVR's IP address to the trusted sites in your IE (Tools > Internet Options > Security). • Add your DVR's IP address to the Compatibility View list in your IE (Tools > Compatibility View Settings). • Clear your IE's cache.
No images are displayed in live view on the Web interface.	Check if the bit rate is 0Mbps in the live view window. • If yes, check if the firewall/anti-virus program is disabled on your PC. • If not, check if the graphics card driver on your PC is working properly. Try installing the driver again.
A camera is offline, and No Link is displayed.	Click Menu > Maintenance > System Info. The cause is displayed under Status. Common causes include disconnected network, incorrect username or password, weak password, and insufficient bandwidth. • Check network connection and other configuration. • If it indicates an incorrect username or password, check that the camera password set in the DVR is the one used to access the camera's Web interface. • If it indicates denied access for weak password, log in to the camera's Web interface and set a strong password. • If it indicates insufficient bandwidth, delete other online IP devices on the DVR.
The NVR displays live video for some cameras and No Resource for others.	• Set the camera to encode the sub stream and decrease its resolution to D1. • Set the DVR to use the sub stream first for live view.
A camera goes online and offline repeatedly.	• Check if the network connection is stable. • Upgrade the software version of the camera and DVR. Contact your dealer for the latest versions.
Live view is normal, but the recording cannot be found.	• Check if a recording schedule is properly configured. • Check if the time and time zone configured in the DVR are correct. • Check if the hard disk storing the recording is damaged. • Check if the desired recording has been overwritten.
Motion detection is not effective.	• Check that motion detection is enabled, and the motion detection area is properly configured. • Check that detection sensitivity is properly set. • Check that the arming schedule is properly configured.

Problem	Possible Cause and Solution
A hard disk cannot be identified by the DVR.	• Use the power adapter delivered with the DVR. • Disconnect the power supply of the DVR, and then mount the hard disk again. • Try another disk slot. • The disk is not compatible with your DVR. Contact your dealer for a list of compatible disk models.
The mouse does not work.	• Use the mouse delivered with your DVR. • Make sure no cable is extended.